


Service Manual

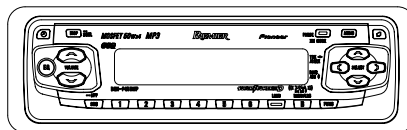

DEH-P450MP/XM/UC

ORDER NO.
CRT3019

MULTI-CD CONTROL HIGH POWER CD/MP3 PLAYER WITH FM/AM TUNER

DEH-P450MP

XM/UC

DEH-P4500MP

XM/UC

DEH-P3550MP

XM/ES

COMPACT
disc
DIGITAL AUDIO

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech. Module	Remarks
CX-3057	CRT3026	S10MP3	CD Mech. Module:Circuit Description, Mech.Description, Disassembly



For details, refer to "Important symbols for good services".

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

[Important symbols for good services]

In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety



You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments



To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning



For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws



To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts



Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

CONTENTS

SAFETY INFORMATION	2
1. SPECIFICATIONS	4
2. EXPLODED VIEWS AND PARTS LIST	6
2.1 PACKING	6
2.2 EXTERIOR (DEH-P450MP, P4500MP)	8
2.3 EXTERIOR (DEH-P3550MP)	12
2.4 CD MECHANISM MODULE	14
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	16
3.1 BLOCK DIAGRAM	16
3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE)	18
3.3 KEYBOARD UNIT	24
3.4 CD MECHANISM MODULE	26
4. PCB CONNECTION DIAGRAM	36
4.1 TUNER AMP UNIT	36
4.2 PANEL UNIT	40
4.3 KEYBOARD UNIT	41
4.4 CD MECHANISM MODULE	42
5. ELECTRICAL PARTS LIST	44
6. ADJUSTMENT	49
6.1 JIG CONNECTION DIAGRAM	49
6.2 CD ADJUSTMENT	50
6.3 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT	52
6.4 ERROR MODE	54
7. GENERAL INFORMATION	55
7.1 DIAGNOSIS	55
7.1.1 DISASSEMBLY	55
7.1.2 CONNECTOR FUNCTION DESCRIPTION	57
7.2 PARTS	59
7.2.1 IC	59
7.2.2 DISPLAY	68
7.3 OPERATIONAL FLOW CHART	70
7.4 CLEANING	71
8. OPERATIONS	72

● CD Player Service Precautions



1. Before disassembling the unit, be sure to turn off the power. Unplugging and plugging the connectors during power-on mode may damage the ICs inside the unit.
2. To protect the pickup unit from electrostatic discharge during servicing, take an appropriate treatment(shorting-solder) by referring to "the DISASSEMBLY" on page 55.
3. After replacing the pickup unit, be sure to check the grating.(See p.52.)

1. SPECIFICATIONS

● DEH-P450MP/XM/UC, P4500MP/XM/UC

General

Power source	14.4 V DC (10.8 – 15.1 V allowable)
Grounding system	Negative type
Max. current consumption	10.0 A
Backup current	5.0mA or less
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 157 mm (7 × 2 × 6-1/8 in.)
Nose	188 × 58 × 19 mm (7-3/8 × 2-1/4 × 3/4 in.)
D	
Chassis	178 × 50 × 162 mm (7 × 2 × 6-3/8 in.)
Nose	170 × 46 × 14 mm (6-3/4 × 1-3/4 × 1/2 in.)
Weight	1.4 kg (3 lbs)

Audio

Continuous power output is 22 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output	50 W × 4
Load impedance	4 Ω (4 – 8 Ω allowable)
Preout max output level/output impedance	2.2 V/1 k Ω

Equalizer (3-Band Parametric Equalizer):

Low

Frequency	40/80/100/160 Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB

Mid

Frequency	200/500/1k/2k Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB

High

Frequency	3.15k/8k/10k/12.5k Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB

Loudness contour

Low	+3.5 dB (100 Hz), +3 dB (10 kHz)
Mid	+10 dB (100 Hz), +6.5 dB (10 kHz)

High	+11 dB (100 Hz), +11 dB (10 kHz) (volume: –30 dB)
------------	--

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format:	
Sampling frequency	44.1 kHz
Number of quantization bits	16; linear
Frequency characteristics	5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz) (IHF-A network)
Dynamic range	92 dB (1 kHz)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3

FM tuner

Frequency range	87.9 – 107.9 MHz
Usable sensitivity	8 dBf (0.7 μ V/75 Ω , mono, S/N: 30 dB)
50 dB quieting sensitivity	10 dBf (0.9 μ V/75 Ω , mono)
Signal-to-noise ratio	75 dB (IHF-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo) 0.1 % (at 65 dBf, 1 kHz, mono)
Frequency response	30 – 15,000 Hz (±3 dB)
Stereo separation	45 dB (at 65 dBf, 1 kHz)
Selectivity	80 dB (±200 kHz)
Three-signal intermodulation (desired signal level)	30 dBf (two undesired signal level: 100 dBf)

AM tuner

Frequency range	530 – 1,710 kHz (10 kHz)
Usable sensitivity	18 μ V (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IHF-A network)



Note

Specifications and the design are subject to possible modifications without notice due to improvements. □

● DEH-P3550MP/XM/ES

General

Rated power source	14.4 V DC
	(allowable voltage range: 12.0 – 14.4 V DC)
Grounding system	Negative type
Max. current consumption	10.0 A
Backup current	5.0mA or less
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 157 mm
Nose	188 × 58 × 19 mm
D	
Chassis	178 × 50 × 162 mm
Nose	170 × 46 × 14 mm
Weight	1.4 kg

Audio

Continuous power output is 22 W per channel minimum into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.

Maximum power output	50 W × 4
Load impedance	4 Ω (4 – 8 Ω allowable)
Preout max output level/output impedance	2.2 V/1 kΩ

Equalizer (3-Band Parametric Equalizer):

Low	
Frequency	40/80/100/160 Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB
Mid	
Frequency	200/500/1k/2k Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB
High	
Frequency	3.15k/8k/10k/12.5k Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB

Loudness contour

Low	+3.5 dB (100 Hz), +3 dB (10 kHz)
Mid	+10 dB (100 Hz), +6.5 dB (10 kHz)
High	+11 dB (100 Hz), +11 dB (10 kHz) (volume: –30 dB)

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format:	
Sampling frequency	44.1 kHz
Number of quantization bits	16; linear
Frequency characteristics	5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio	94 dB (1 kHz) (IEC-A network)
Dynamic range	92 dB (1 kHz)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3

FM tuner

Frequency range	87.5 – 108.0 MHz
Usable sensitivity	8 dBf (0.7 μV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity	10 dBf (0.9 μV/75 Ω, mono)
Signal-to-noise ratio	75 dB (IEC-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo) 0.1 % (at 65 dBf, 1 kHz, mono)
Frequency response	30 – 15,000 Hz (±3 dB)
Stereo separation	45 dB (at 65 dBf, 1 kHz)

AM tuner

Frequency range	531 – 1,602 kHz (9 kHz) 530 – 1,640 kHz (10 kHz)
Usable sensitivity	18 μV (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IEC-A network)




Note

Specifications and the design are subject to possible modifications without notice due to improvements. □

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

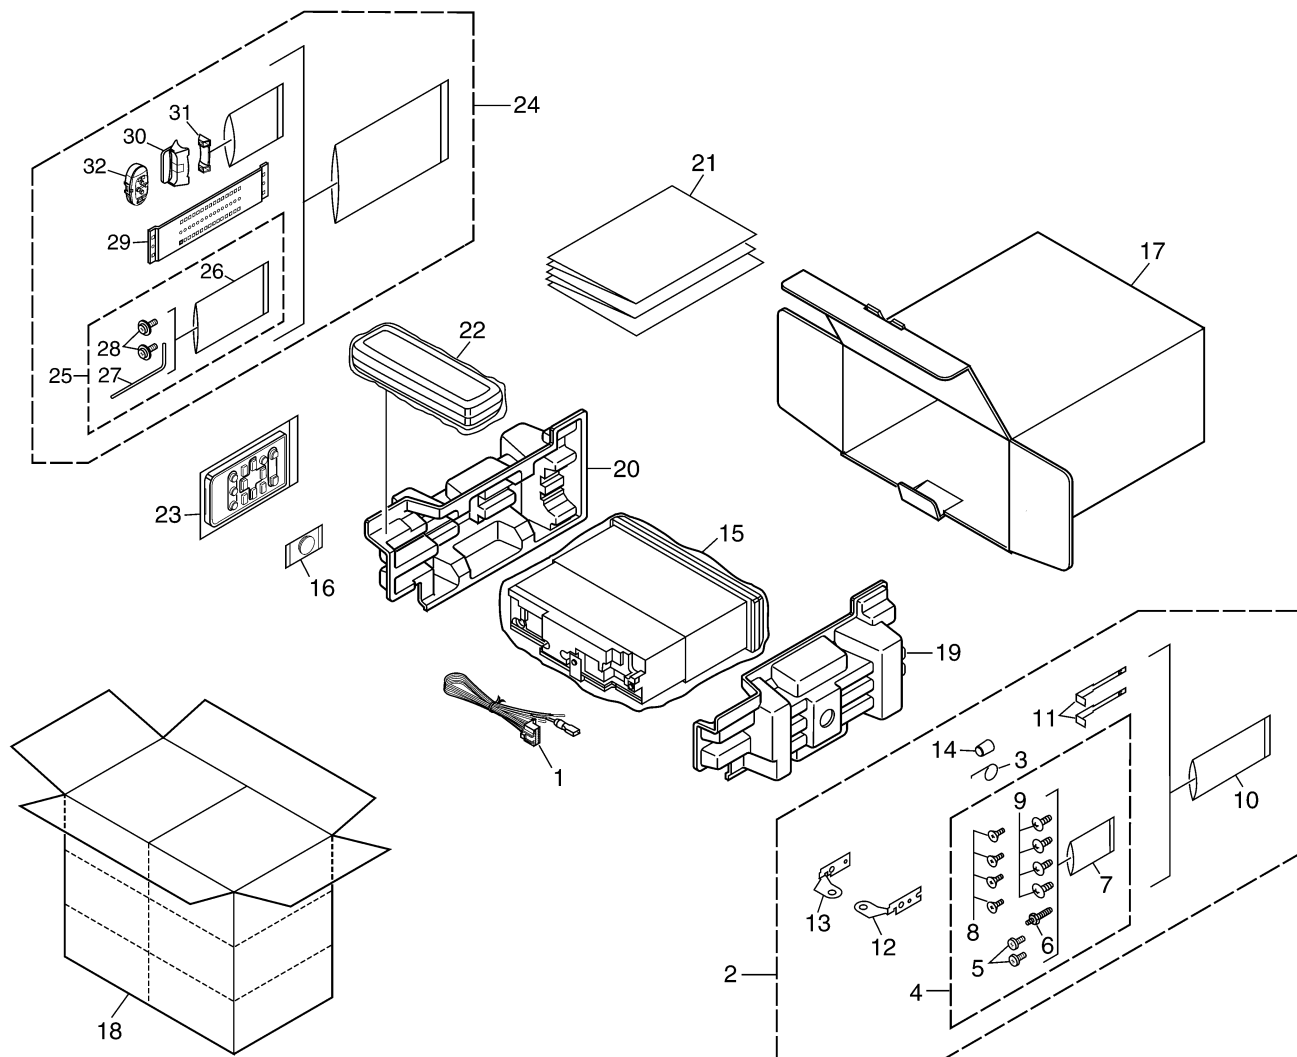

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ▽ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

● PACKING SECTION PARTS LIST

Mark No.	Symbol and Description	Part No.		
		DEH-P450MP/XM/UC	DEH-P4500MP/XM/UC	DEH-P3550MP/XM/ES
1	Cord Assy	CDE7060	CDE7060	CDE7060
2	Accessory Assy	CEA3376	CEA3376	CEA3439
3	Spring	CBH1650	CBH1650	CBH1650
4	Screw Assy	CEA3445	CEA3445	CEA3437
5	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
6	Screw	CBA1002	CBA1002	CBA1002
*	7 Polyethylene Bag	CEG-127	CEG-127	CEG-127
8	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC
9	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
*	10 Polyethylene Bag	CEG-158	CEG-158	CEG-158
11	Handle	CNC5395	CNC5395	CNC5395
12	Holder	CND1249	CND1249	Not used
13	Holder	CND1250	CND1250	Not used
14	Bush	CNV3930	CNV3930	CNV3930
15	Polyethylene Bag	CEG1173	CEG1173	CEG-162
*	16 Battery	CEX1030	CEX1065	Not used
17	Carton	CHG4952	CHG4953	CHG4954
18	Contain Box	CHL4952	CHL4953	CHL4954
19	Protector	CHP2663	CHP2663	CHP2663
20	Protector	CHP2664	CHP2664	CHP2664
21-1	Owner's Manual	CRD3676	CRD3678	CRD3680
21-2	Owner's Manual	Not used	Not used	CRD3681
21-3	Installation Manual	CRD3677	CRD3679	CRD3682
*	21-4 Warranty Card	CRY1070	Not used	Not used
*	21-5 Card	Not used	ARY1048	Not used
*	21-6 Caution Card	Not used	CRP1294	Not used
22	Case Assy	CXB3520	CXB3520	CXB3520
23	Remote Control Unit	Not used	CXC1265	Not used
24	Remote Control Assy	CXB9202	Not used	Not used
25	Screw Assy	CZE3169	Not used	Not used
*	26 Polyethylene Bag	CEG-127	Not used	Not used
*	27 Hexagonal Wrench	CZE3176	Not used	Not used
*	28 Screw	RMZ30H060FBK	Not used	Not used
29	Belt	CZN7661	Not used	Not used
30	Holder Assy	CZX3172	Not used	Not used
31	Holder Assy	CZX3173	Not used	Not used
32	Remote Control Assy	CZX3257	Not used	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P450MP/XM/UC	CRD3676	English, French, Spanish
	CRD3677	
DEH-P4500MP/XM/UC	CRD3678	English, French, Spanish
	CRD3679	
DEH-P3550MP/XM/ES	CRD3680	English, Spanish, Portuguese(B)
	CRD3681	Arabic, Chinese
	CRD3682	English, Spanish, Portuguese(B), Arabic, Chinese

2.2 EXTERIOR (DEH-P450MP, P4500MP)

A


B

C

D

E

F

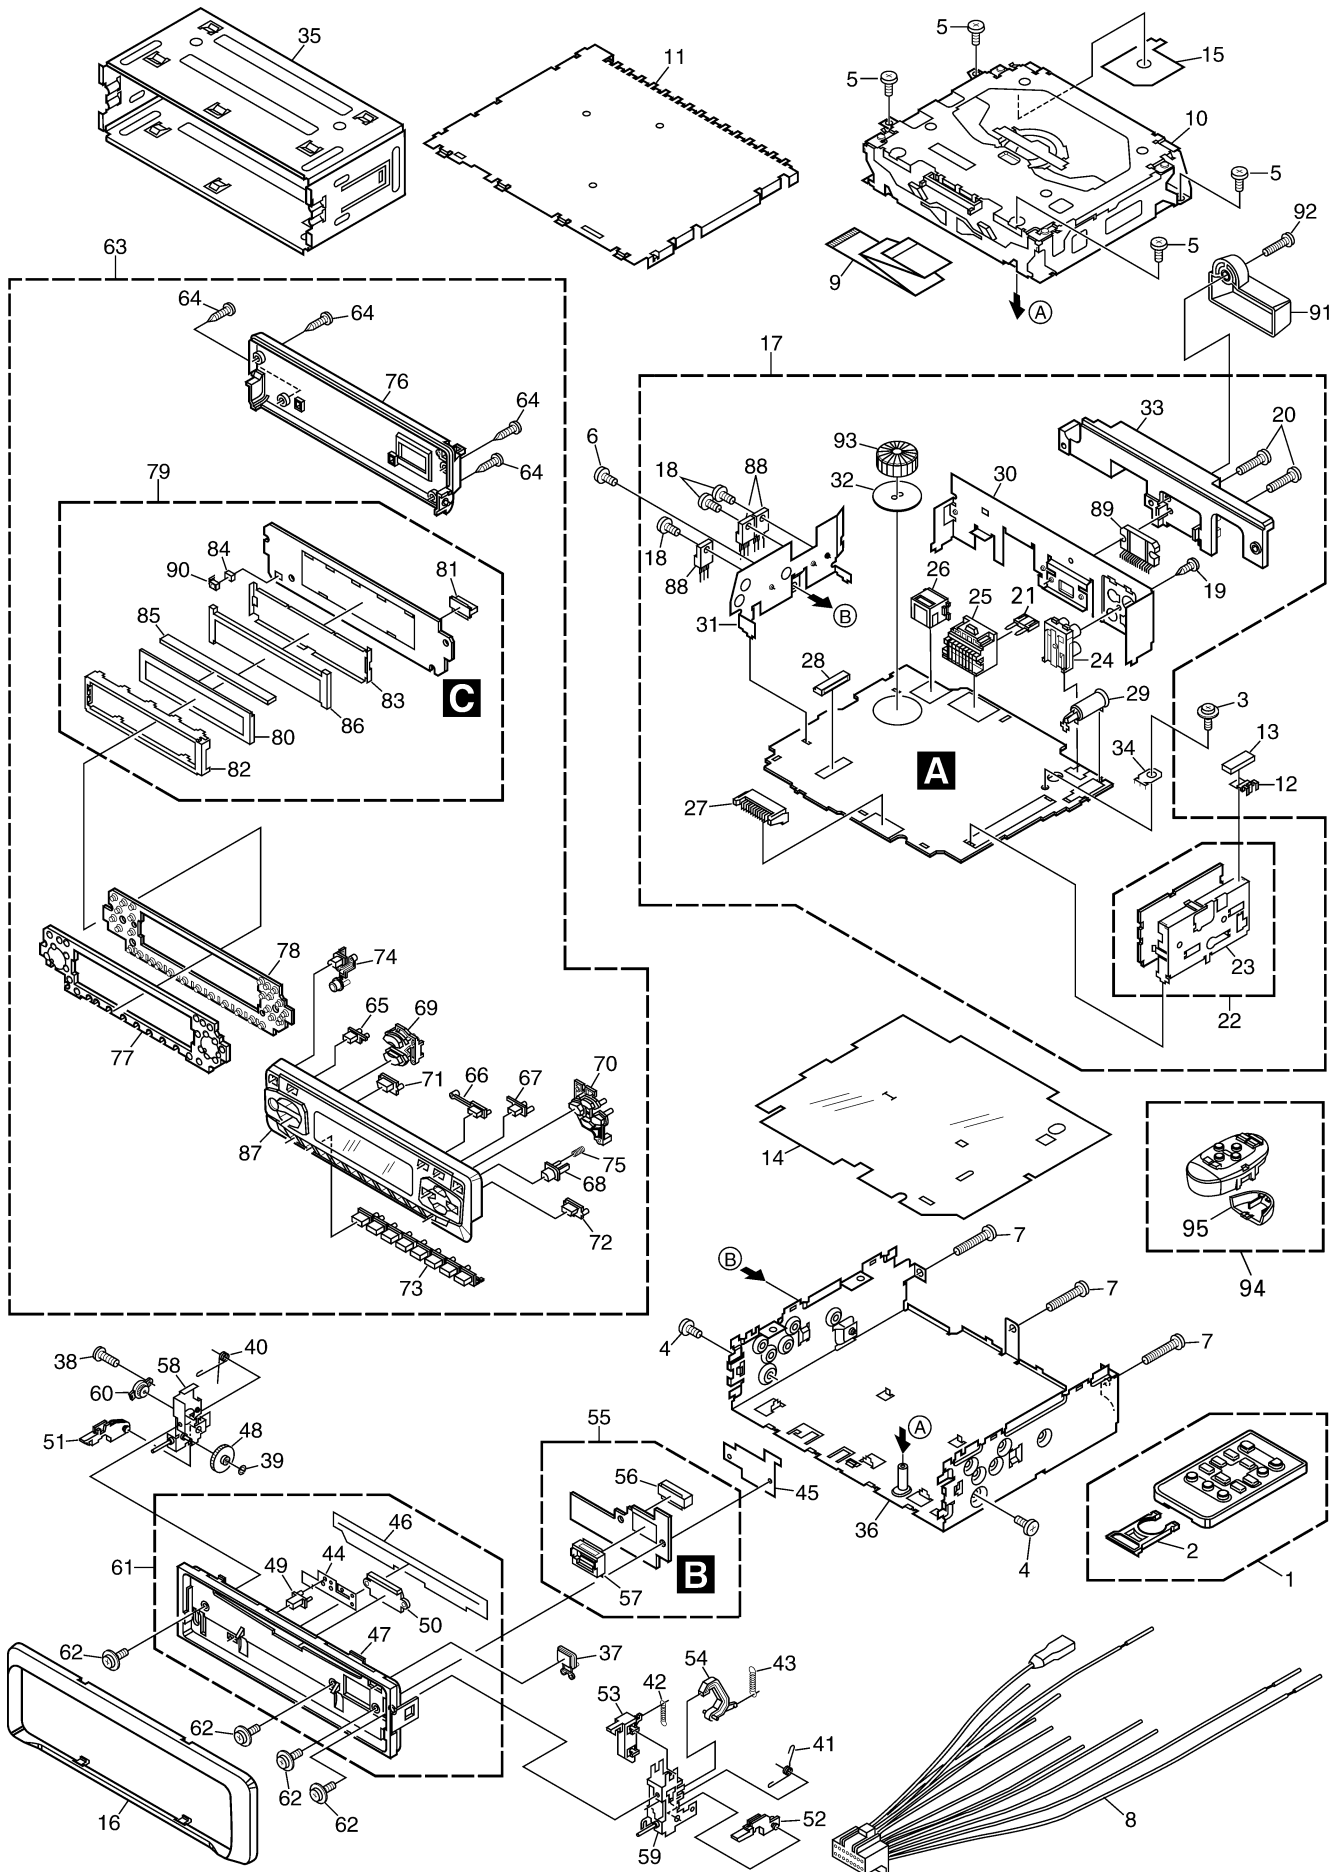

(1) EXTERIOR (DEH-P450MP, P4500MP) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Remote Control Unit	See Contrast table(2)	51	Arm	CNV7400	A
2	Cover	See Contrast table(2)	52	Arm	CNV7401	
3	Screw	ISS26P055FTC	53	Arm	CNV7402	
4	Screw	BMZ30P040FZK	54	Arm	CNV7403	
5	Screw	BSZ26P060FTC	55	Panel Unit	CWM8758	
6	Screw	BSZ30P060FTC	56	Socket(CN1950)	CKS3550	
7	Screw	BSZ30P200FTC	57	Connector(CN1951)	CKS4462	
8	Cord Assy	CDE7060	58	Holder Unit	CXB9501	
9	Cable	CDE7189	59	Holder Unit	CXB9502	
10	CD Mechanism Module(S10MP3)	CXK5660	60	Damper Unit	CXB9503	B
11	Case	CNB2870	61	Service Panel Unit	CXX1691	
12	Earth Plate	CNC8915	62	Screw	IMS20P045FZK	
13	Cushion	CNM4870	63	Detach Grille Assy	See Contrast table(2)	
14	Insulator	CNM7935	64	Screw	BPZ20P100FZK	
15	Insulator	CNM8174	65	Button(DISP)	CAC7779	
16	Panel	See Contrast table(2)	66	Button(PAUSE)	CAC7780	
17	Tuner Amp Unit	CWM8653	67	Button(AUDIO)	CAC7781	
18	Screw	ASZ26P060FTC	68	Button(OPEN)	CAC7782	
19	Screw	BPZ26P080FTC	69	Button(VOLUME)	See Contrast table(2)	
20	Screw	BSZ26P160FTC	70	Button(SELECT)	See Contrast table(2)	C
21	Fuse(10A)	CEK1208	71	Button(SRC)	CAC7785	
22	FM/AM Tuner Unit	CWE1646	72	Button(FUNC)	CAC7786	
23	Holder	CND1054	73	Button(1-6)	CAC7787	
24	Pin Jack(CN351)	CKB1051	74	Button(CLK, EQ)	CAC7808	
25	Plug(CN981)	CKM1376	75	Spring	CBH2630	
26	Connector(CN101)	CKS3408	76	Cover	CNS7269	
27	Plug(CN831)	CKS3537	77	Lighting Conductor	CNV7421	
28	Connector(CN721)	CKS3837	78	Rubber	CNV7422	
29	Antenna Jack(CN401)	CKX1056	79	Keyboard Unit	CWM8635	
30	Holder	CND1238	80	LCD(LCD1901)	CAW1759	D
31	Holder	CND1352	81	Connector(CN1901)	CKS4524	
32	Insulator	CNM8245	82	Holder	CNC9757	
33	Heat Sink	CNR1668	83	Sheet	CNM7647	
34	Terminal(CN402)	VNF1084	84	Cushion	CNM8092	
35	Holder Unit	CXB6681	85	Connector	CNV6440	
36	Chassis Unit	CXB9528	86	Lighting Conductor	CNV7711	
37	Button(EJECT)	CAC7752	87	Grille Unit	See Contrast table(2)	
38	Screw(M2x2)	CBA1176	88	Transistor(Q752, 901, 911)	2SD2375	
39	Washer	CBF1038	89	IC(IC301)	PAL007A	E
40	Spring	CBH2650	90	IC(IC1902)	TSOP4840SB1	
41	Spring	CBH2651	91	Holder	See Contrast table(2)	
42	Spring	CBH2652	92	Screw	See Contrast table(2)	
43	Spring	CBH2653	93	Choke Coil(L981)	CTH1280	
44	Spring	CBL1512	94	Remote Control Assy	See Contrast table(2)	
45	Holder	CND1254	95	Cover	See Contrast table(2)	
46	Cover	CNM6854				
47	Panel	CNS7245				
48	Gear	CNV5997				
49	Pin	CNV6486				F
50	Lighting Conductor	CNV6487				

(2) CONTRAST TABLE**DEH-P450MP/XM/UC and DEH-P4500MP/XM/UC are constructed the same except for the following:**

Mark No.	Symbol and Description	Part No.	
		DEH-P450MP/XM/UC	DEH-P4500MP/XM/UC
1	Remote Control Unit	Not used	CXC1265
2	Cover	Not used	CNS7068
16	Panel	CNS6935	CNS6934
63	Detach Grille Assy	CXB9593	CXB9594
69	Button(VOLUME)	CAC7810	CAC7809
70	Button(SELECT)	CAC7812	CAC7811
87	Grille Unit	CXB9621	CXB9622
91	Holder	Not used	CNV7619
92	Screw	Not used	BMZ40P140FTC
94	Remote Control Assy	CZX3257	Not used
95	Cover	CZN7655	Not used



5



6



7



8



A



B



C



D



E



F



5



6

DEH-P450MP/XM/UC




7



8




2.3 EXTERIOR (DEH-P3550MP)

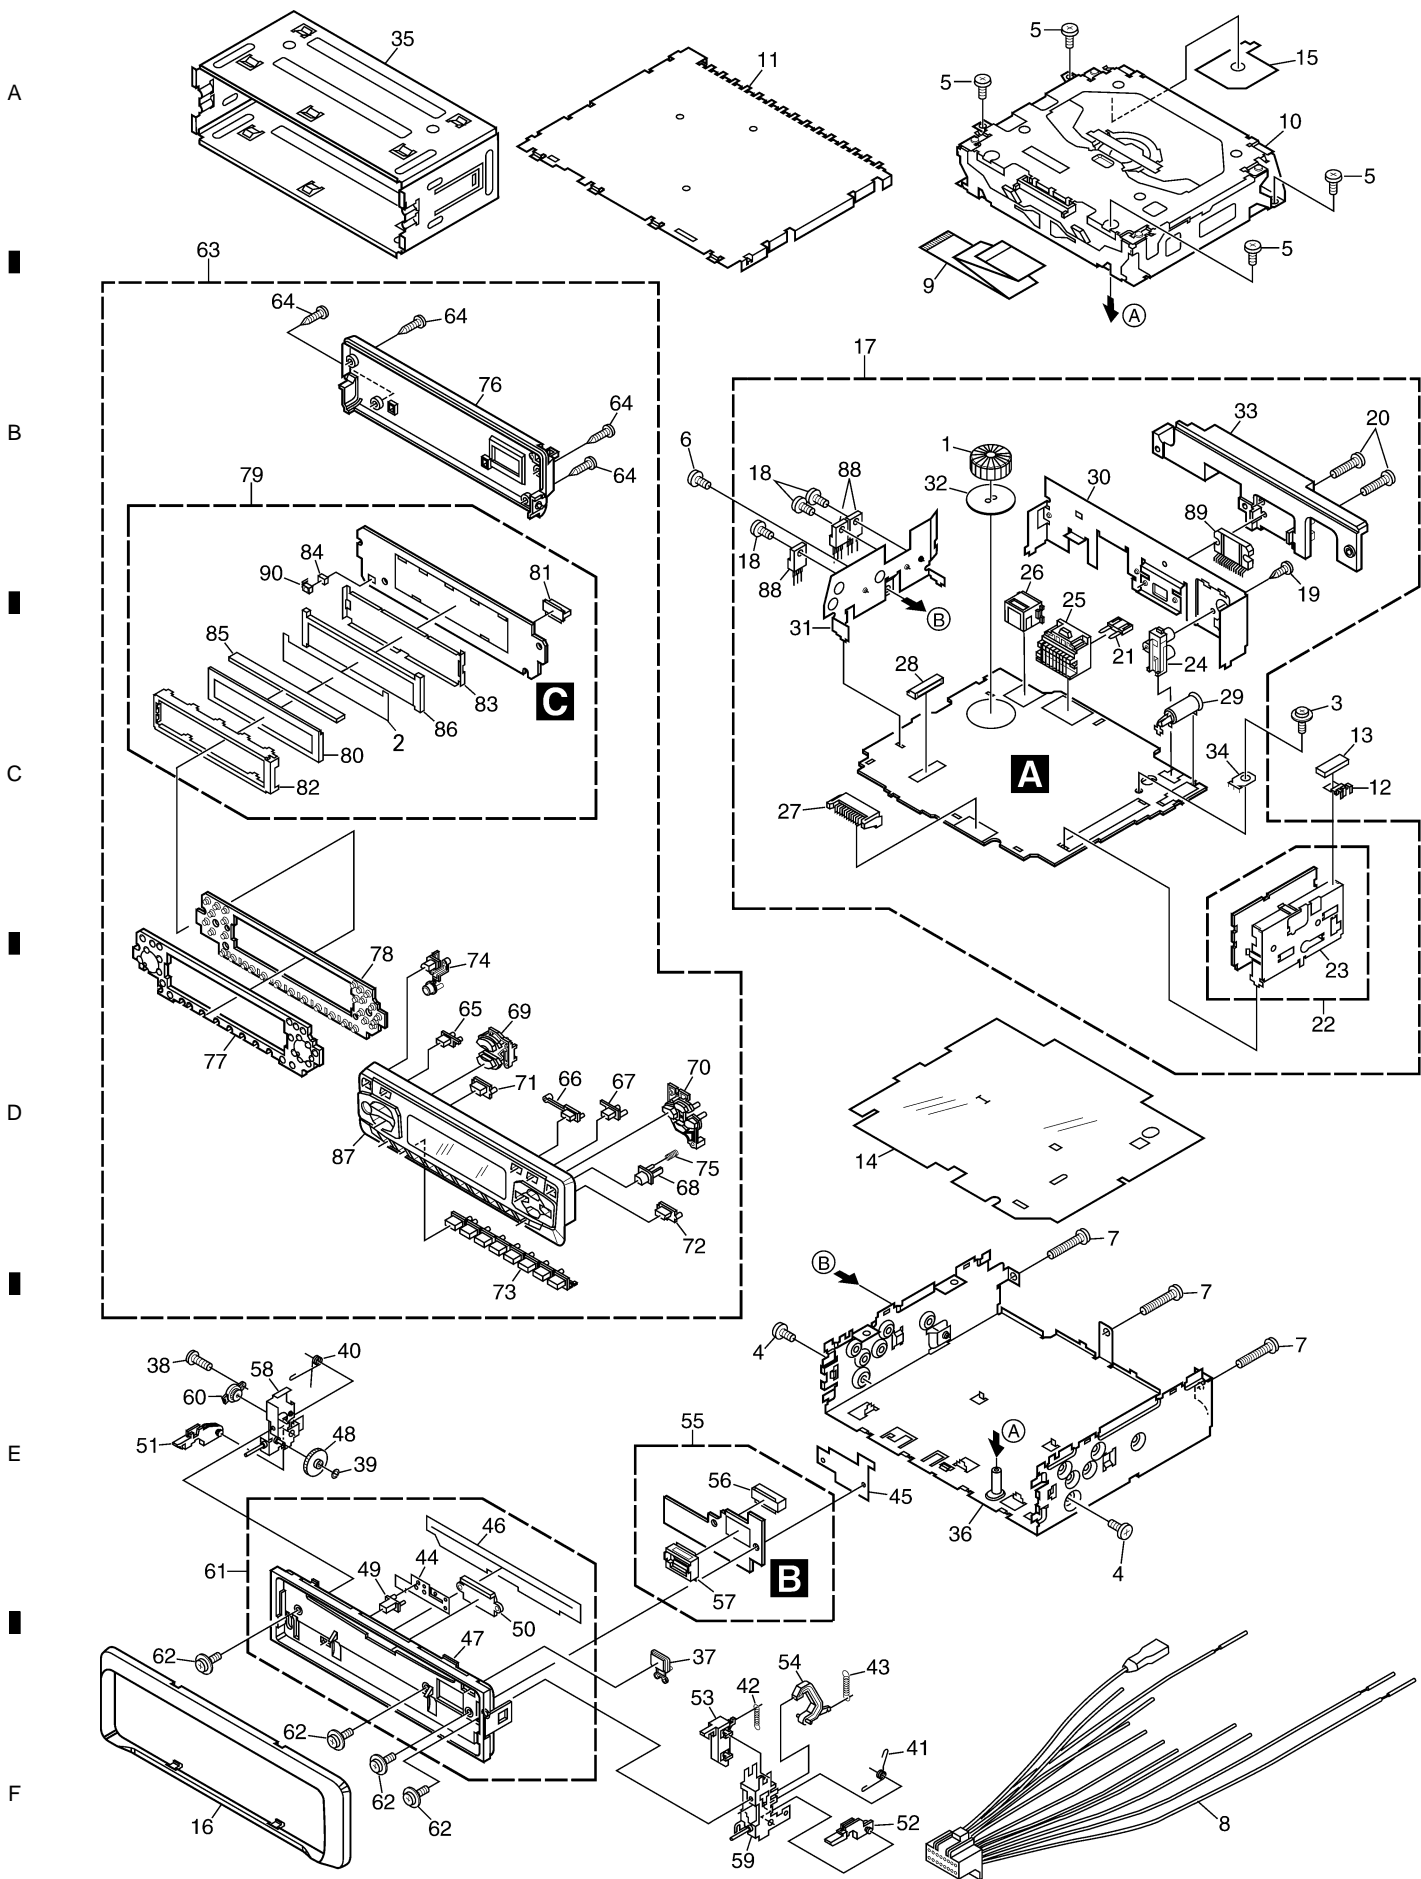

● EXTERIOR (DEH-P3550MP) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Choke Coil(L981)	CTH1280	46	Cover	CNM6854	A
2	Sheet	CNM8386	47	Panel	CNS7245	
3	Screw	ISS26P055FTC	48	Gear	CNV5997	
4	Screw	BMZ30P040FZK	49	Pin	CNV6486	
5	Screw	BSZ26P060FTC	50	Lighting Conductor	CNV6487	
6	Screw	BSZ30P060FTC	51	Arm	CNV7400	
7	Screw	BSZ30P200FTC	52	Arm	CNV7401	
8	Cord Assy	CDE7060	53	Arm	CNV7402	
9	Cable	CDE7189	54	Arm	CNV7403	
10	CD Mechanism Module(S10MP3)	CXK5660	55	Panel Unit	CWM8758	B
11	Case	CNB2870	56	Socket(CN1950)	CKS3550	
12	Earth Plate	CNC8915	57	Connector(CN1951)	CKS4462	
13	Cushion	CNM4870	58	Holder Unit	CXB9501	
14	Insulator	CNM7935	59	Holder Unit	CXB9502	
15	Insulator	CNM8174	60	Damper Unit	CXB9503	
16	Panel	CNS6935	61	Service Panel Unit	CXX1691	
17	Tuner Amp Unit	CWM8654	62	Screw	IMS20P045FZK	
18	Screw	ASZ26P060FTC	63	Detach Grille Assy	CXB9596	
19	Screw	BPZ26P080FTC	64	Screw	BPZ20P100FZK	C
20	Screw	BSZ26P160FTC	65	Button(DISP)	CAC7779	
21	Fuse(10A)	CEK1208	66	Button(PAUSE)	CAC7842	
22	FM/AM Tuner Unit	CWE1646	67	Button(AUDIO)	CAC7781	
23	Holder	CND1054	68	Button(OPEN)	CAC7782	
24	Pin Jack(CN351)	CKB1059	69	Button(VOLUME)	CAC7810	
25	Plug(CN981)	CKM1376	70	Button(SELECT)	CAC7812	
26	Connector(CN101)	CKS3408	71	Button(SRC)	CAC7785	
27	Plug(CN831)	CKS3537	72	Button(FUNC)	CAC7786	
28	Connector(CN721)	CKS3837	73	Button(1-6)	CAC7813	
29	Antenna Jack(CN401)	CKX1056	74	Button(CLK, EQ)	CAC7808	D
30	Holder	CND1237	75	Spring	CBH2630	
31	Holder	CND1352	76	Cover	CNS7269	
32	Insulator	CNM8245	77	Lighting Conductor	CNV7421	
33	Heat Sink	CNR1668	78	Rubber	CNV7422	
34	Terminal(CN402)	VNF1084	79	Keyboard Unit	CWM8631	
35	Holder Unit	CXB6681	80	LCD(LCD1901)	CAW1762	
36	Chassis Unit	CXB9528	81	Connector(CN1901)	CKS4524	
37	Button(EJECT)	CAC7752	82	Holder	CNC9757	
38	Screw(M2x2)	CBA1176	83	Sheet	CNM7647	E
39	Washer	CBF1038	84	Cushion	CNM8092	
40	Spring	CBH2650	85	Connector	CNV6440	
41	Spring	CBH2651	86	Lighting Conductor	CNV7711	
42	Spring	CBH2652	87	Grille Unit	CXB9624	
43	Spring	CBH2653	88	Transistor(Q752, 901, 911)	2SD2375	
44	Spring	CBL1512	89	IC(IC301)	PAL007A	
45	Holder	CND1254	90	IC(IC1902)	TSOP4840SB1	

2.4 CD MECHANISM MODULE

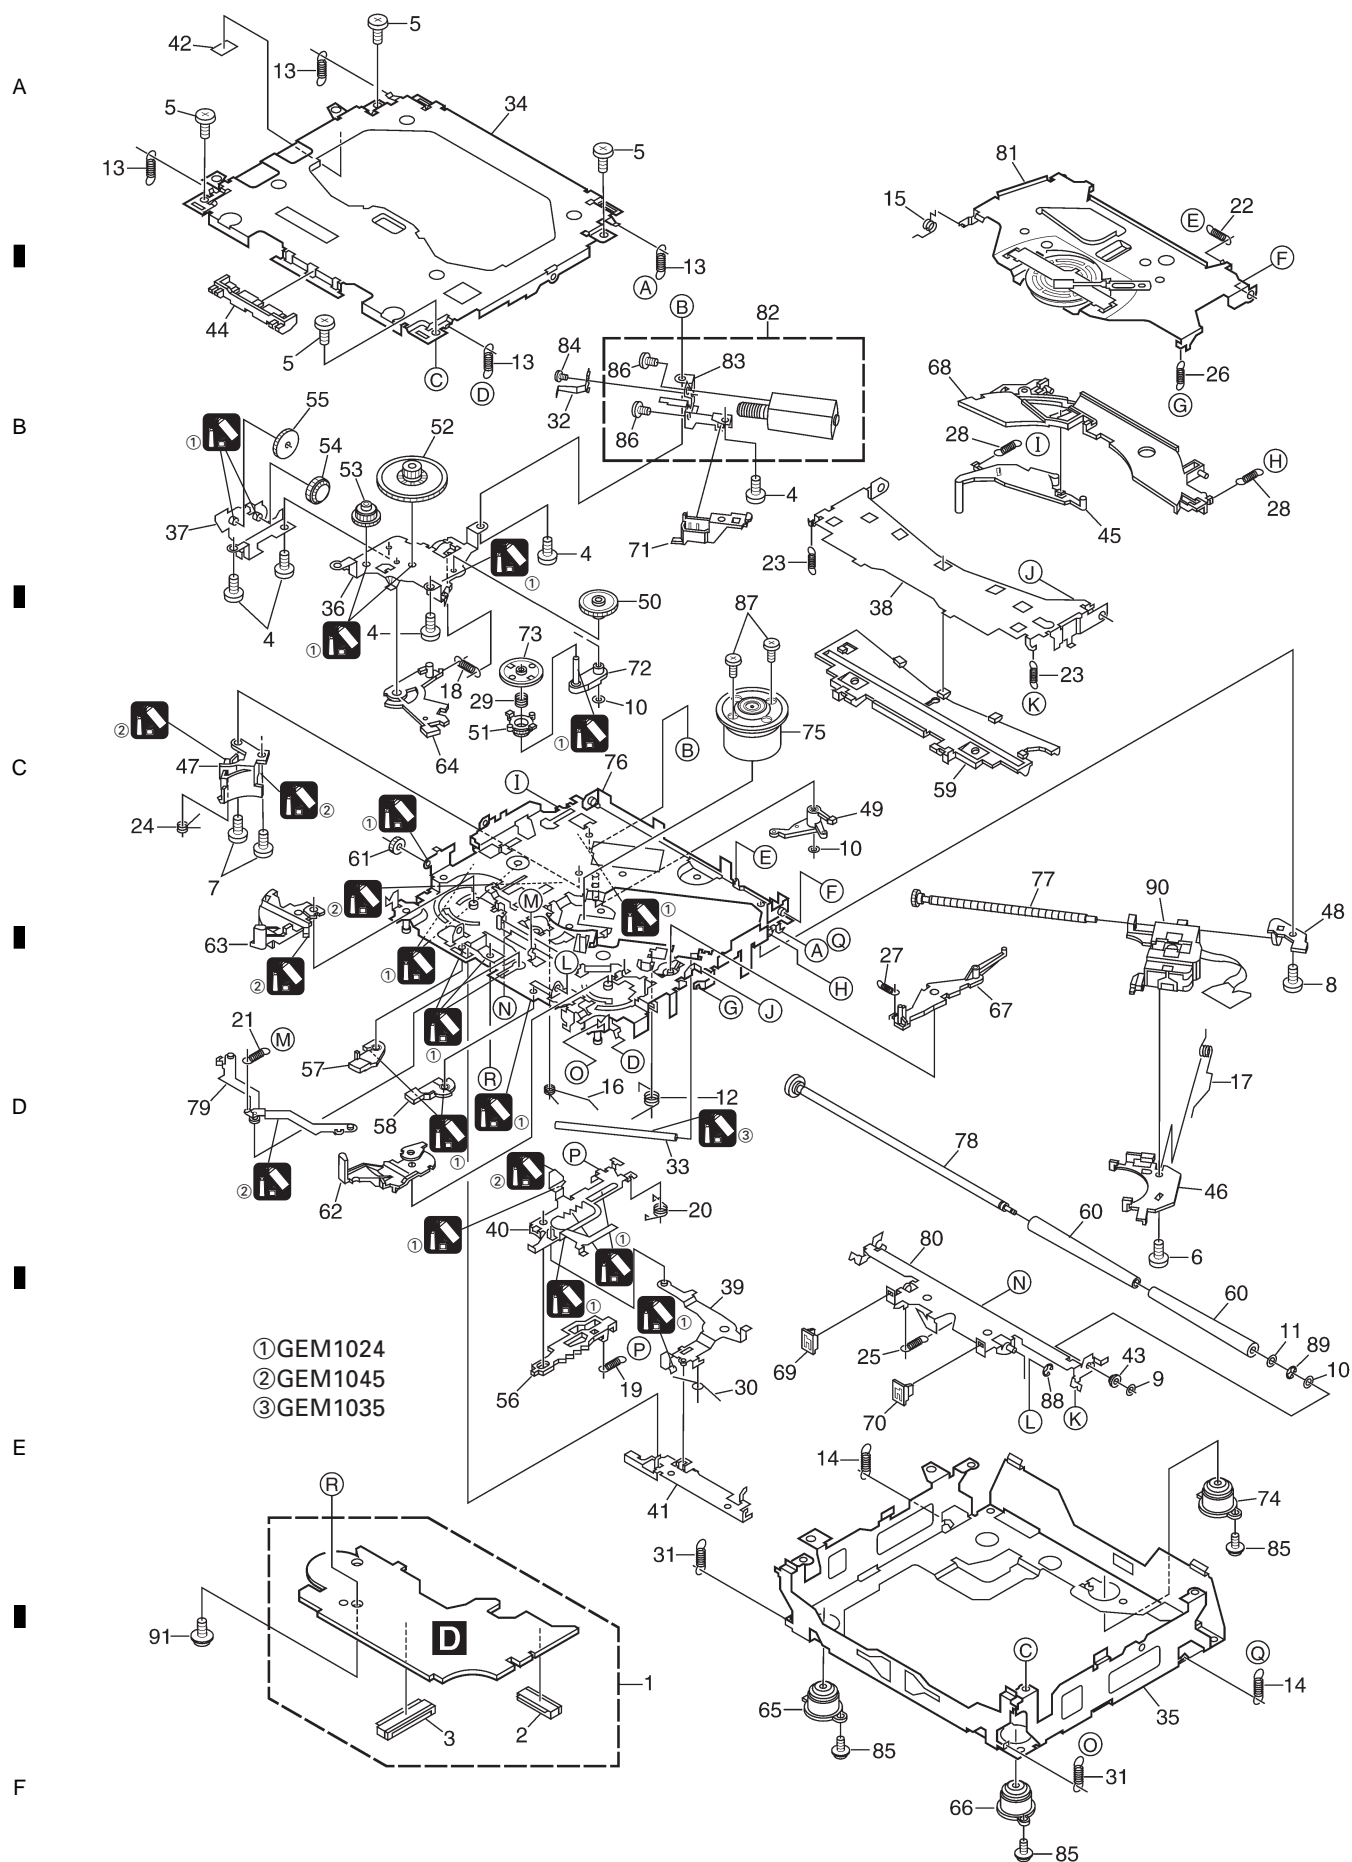


● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10MP3)	CWX2742	46	Rack	CNV7199	
2	Connector(CN101)	CKS4182	47	Holder	CNV7201	
3	Connector(CN901)	CKS4017	48	Holder	CNV7202	
4	Screw	BMZ20P035FTC	49	Arm	CNV7203	
5	Screw	BSZ20P040FTC	50	Gear	CNV7207	
6	Screw(M2x4)	CBA1362	51	Gear	CNV7208	
7	Screw(M2x3)	CBA1511	52	Gear	CNV7209	
8	Screw(M2x3)	CBA1527	53	Gear	CNV7210	
9	Washer	CBF1037	54	Gear	CNV7211	
10	Washer	CBF1038	55	Gear	CNV7212	
11	Washer	CBF1060	56	Rack	CNV7214	
12	Spring	CBH2390	57	Arm	CNV7215	
13	Spring	CBH2606	58	Arm	CNV7216	
14	Spring	CBH2607	59	Guide	CNV7217	
15	Spring	CBH2608	60	Roller	CNV7218	
16	Spring	CBH2609	61	Gear	CNV7219	
17	Spring	CBH2610	62	Arm	CNV7221	
18	Spring	CBH2611	63	Arm	CNV7220	
19	Spring	CBH2612	64	Arm	CNV7222	
20	Spring	CBH2613	65	Damper	CNV7313	
21	Spring	CBH2614	66	Damper	CNV7314	
22	Spring	CBH2615	67	Arm	CNV7341	
23	Spring	CBH2616	68	Arm	CNV7342	
24	Spring	CBH2617	69	Guide	CNV7360	
25	Spring	CBH2620	70	Guide	CNV7361	
26	Spring	CBH2621	71	Holder	CNV7437	
27	Spring	CBH2641	72	Arm	CNV7444	
28	Spring	CBH2642	73	Gear	CNV7595	
29	Spring	CBH2643	74	Damper	CNV7618	
30	Spring	CBH2659	75	Motor Unit(M1)	CXB6007	
31	Spring	CBH2688	76	Chassis Unit	CXB8728	
32	Spring	CBL1614	77	Screw Unit	CXB8729	
33	Shaft	CLA3845	78	Gear Unit	CXB8731	
34	Frame	CNC9962	79	Arm Unit	CXB8732	
35	Frame	CNC9963	80	Arm Unit	CXB8735	
36	Bracket	CNC9966	81	Arm Unit	CXB8852	
37	Bracket	CNC9967	82	Motor Unit(M2)	CXB8933	
38	Arm	CNC9968	83	Bracket	CNC9985	
39	Arm	CNC9973	84	Screw	JFZ20P020FTC	
40	Lever	CNC9983	85	Screw(M2x5)	EBA1028	
41	Lever	CNC9984	86	Screw	JFZ20P020FTC	
42	Sheet	CNM8134	87	Screw	JGZ17P022FTC	
43	Collar	CNV6906	88	Washer	YE15FTC	
44	Guide	CNV6925	89	Washer	YE20FTC	
45	Arm	CNV7198	90	Pickup Unit(Service)(P10)	CXX1641	
			91	Screw	IMS26P030FMC	


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

A TUNER AMP UNIT

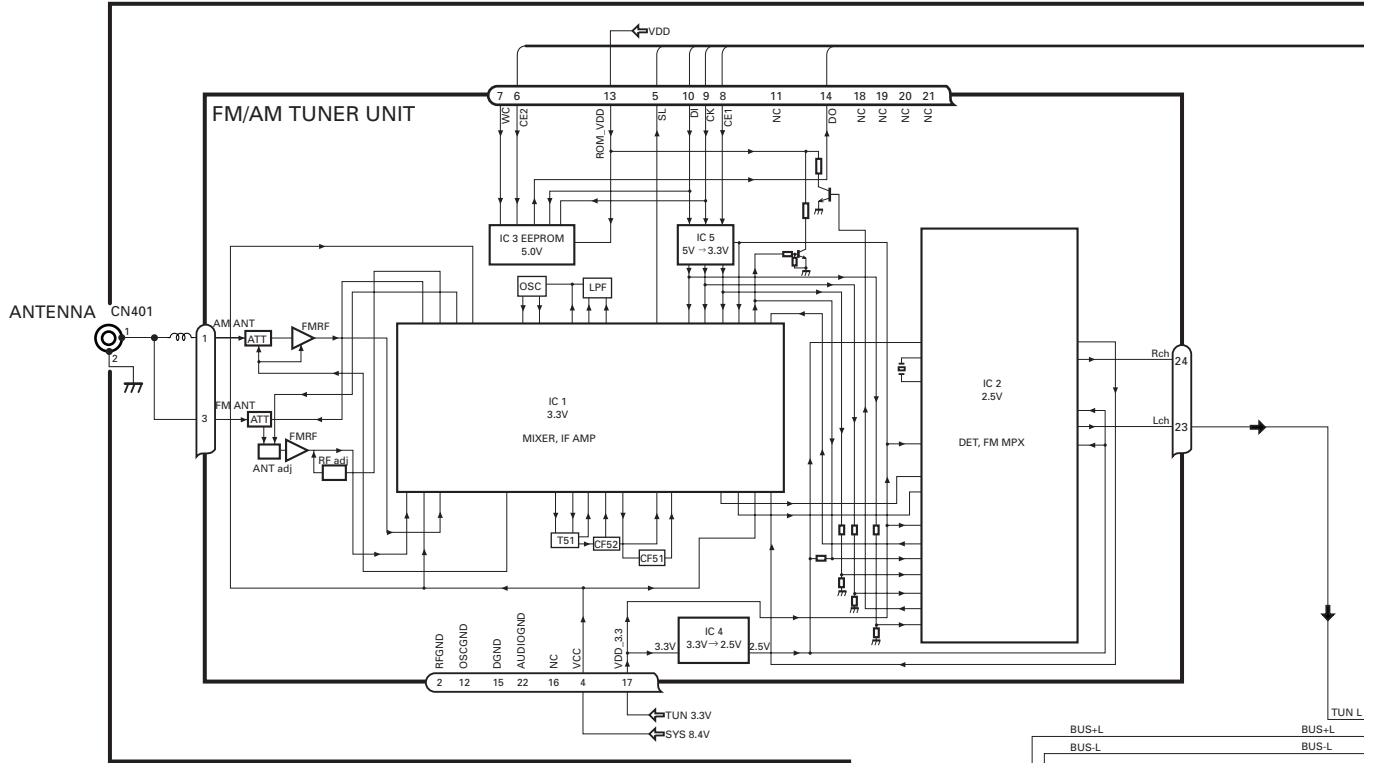



D CD CORE UNIT(S10MP3)

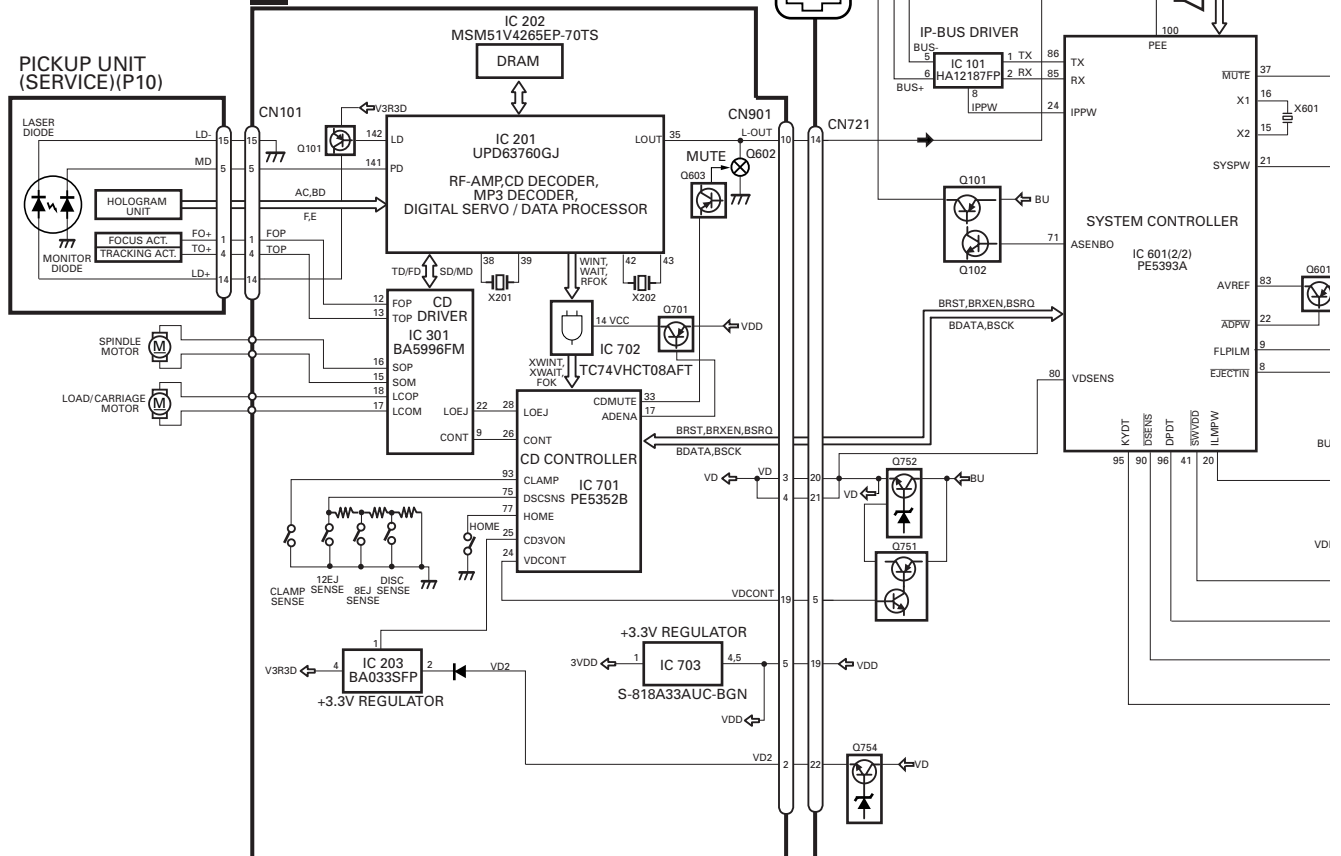

A-b

A TUNER AMP UNIT

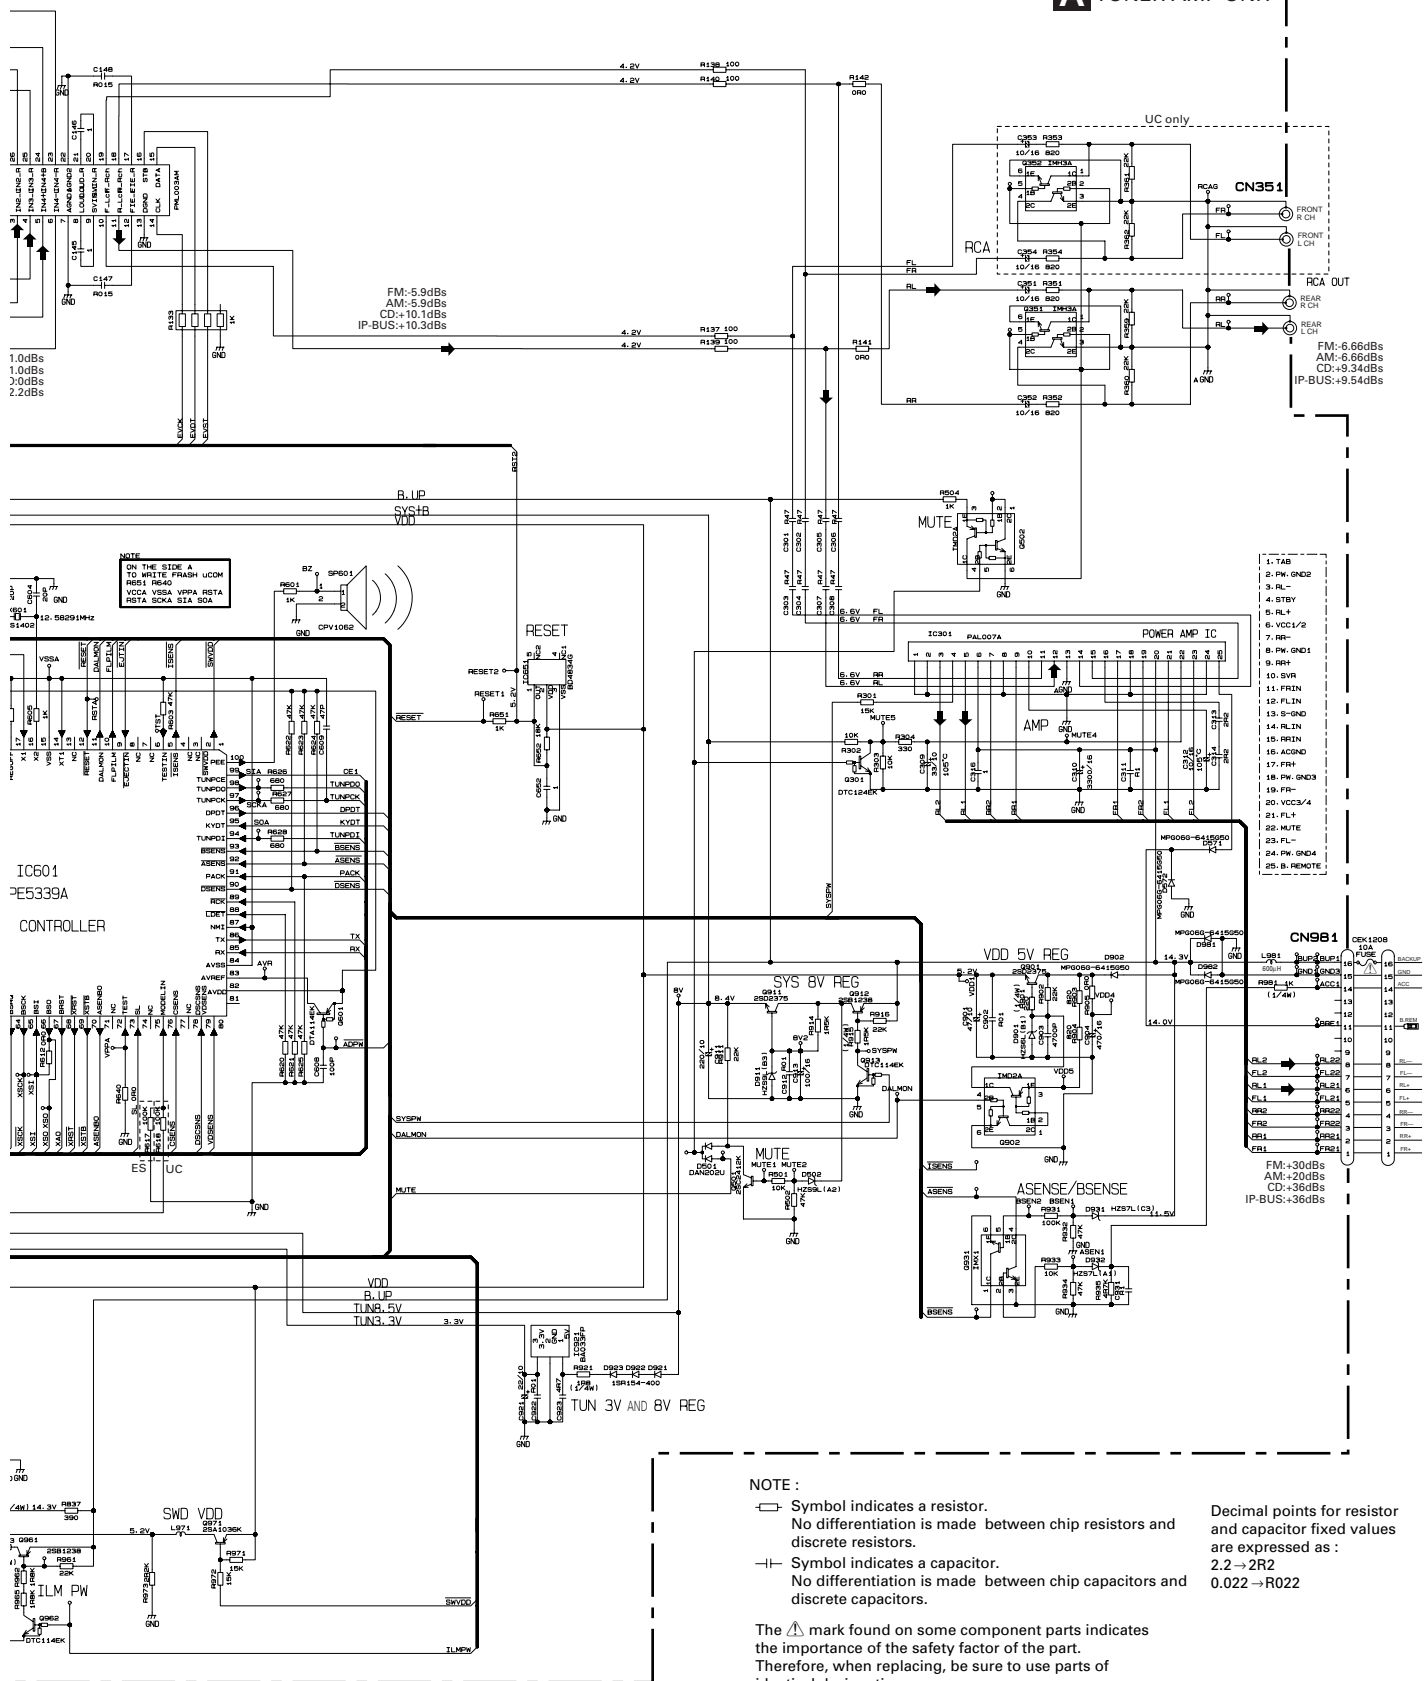

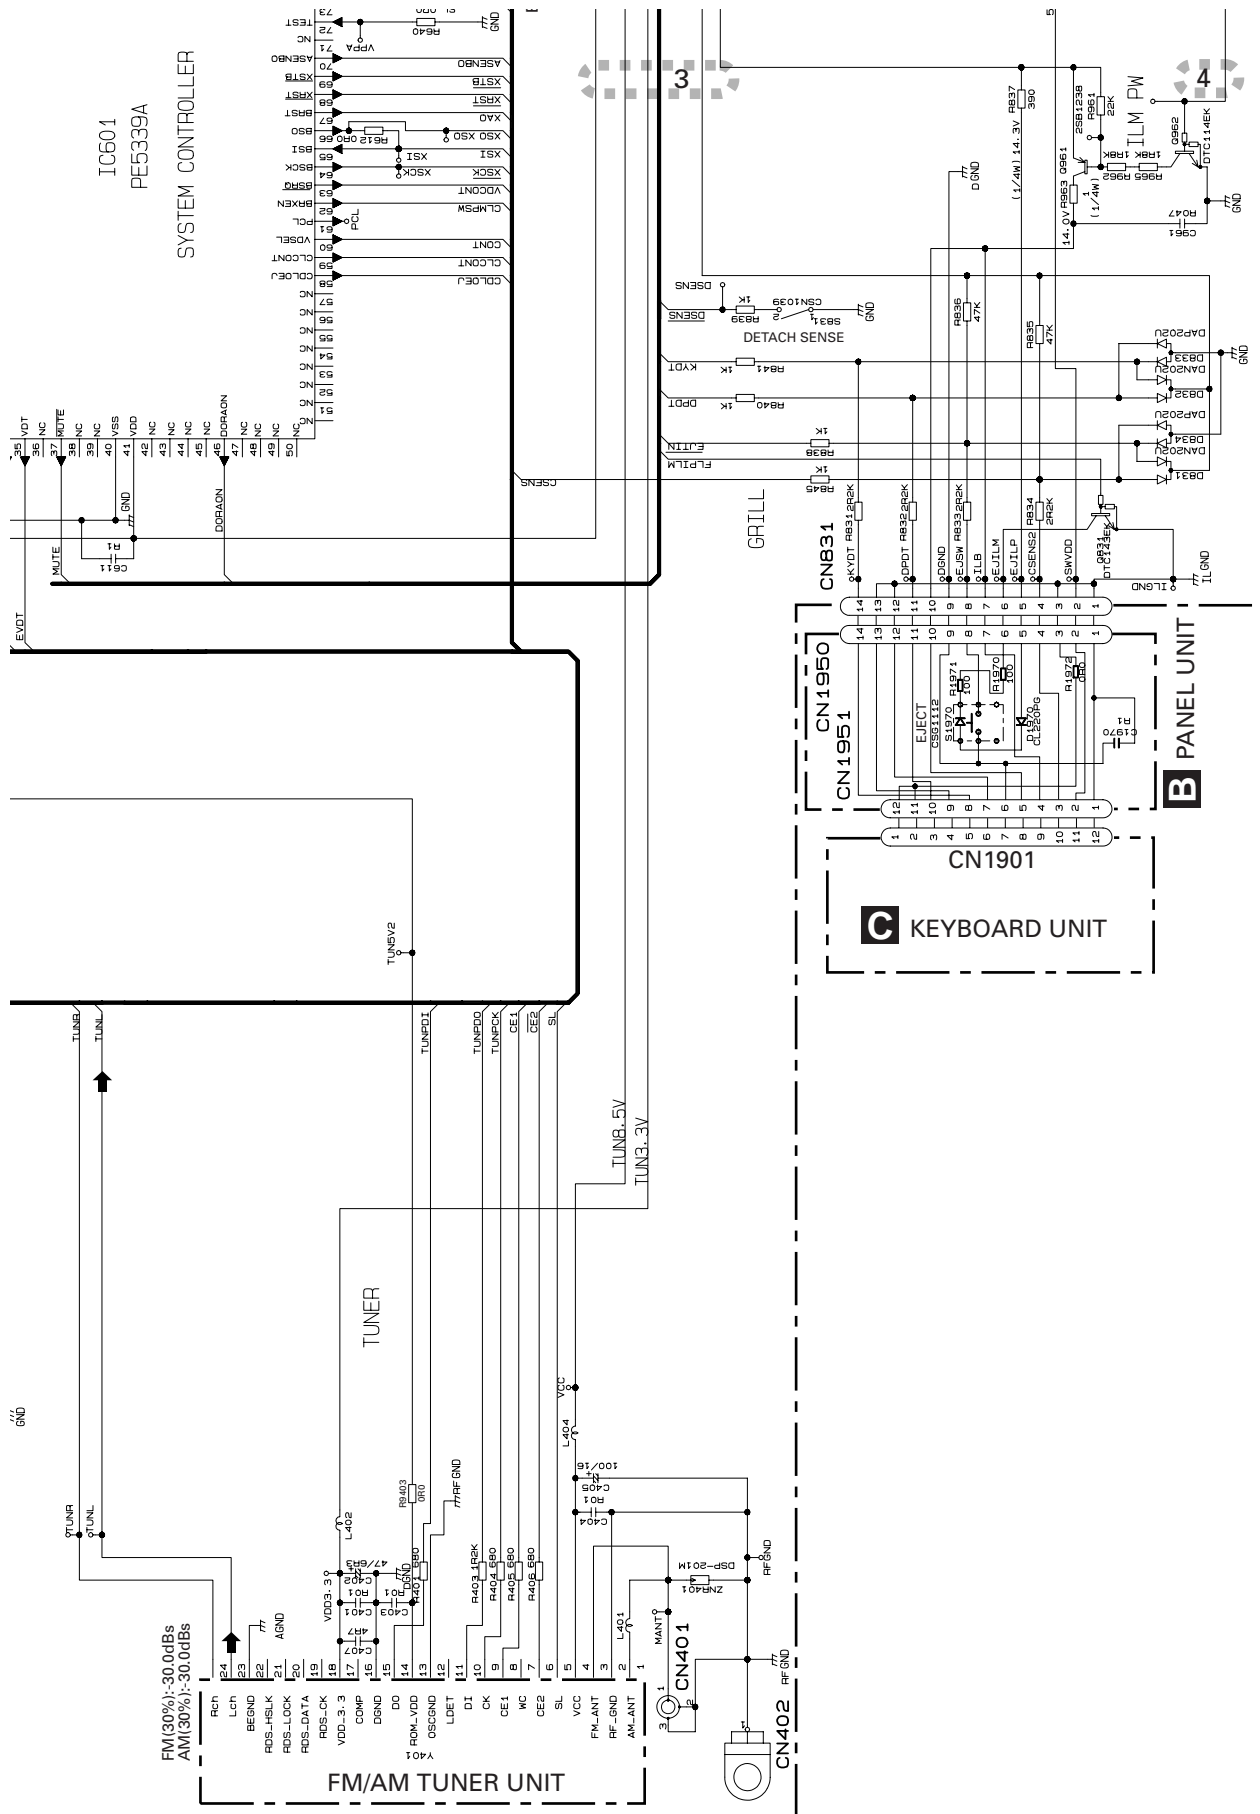



A-b

A-a A-b

A-a B

A-a	A-b
-----	-----

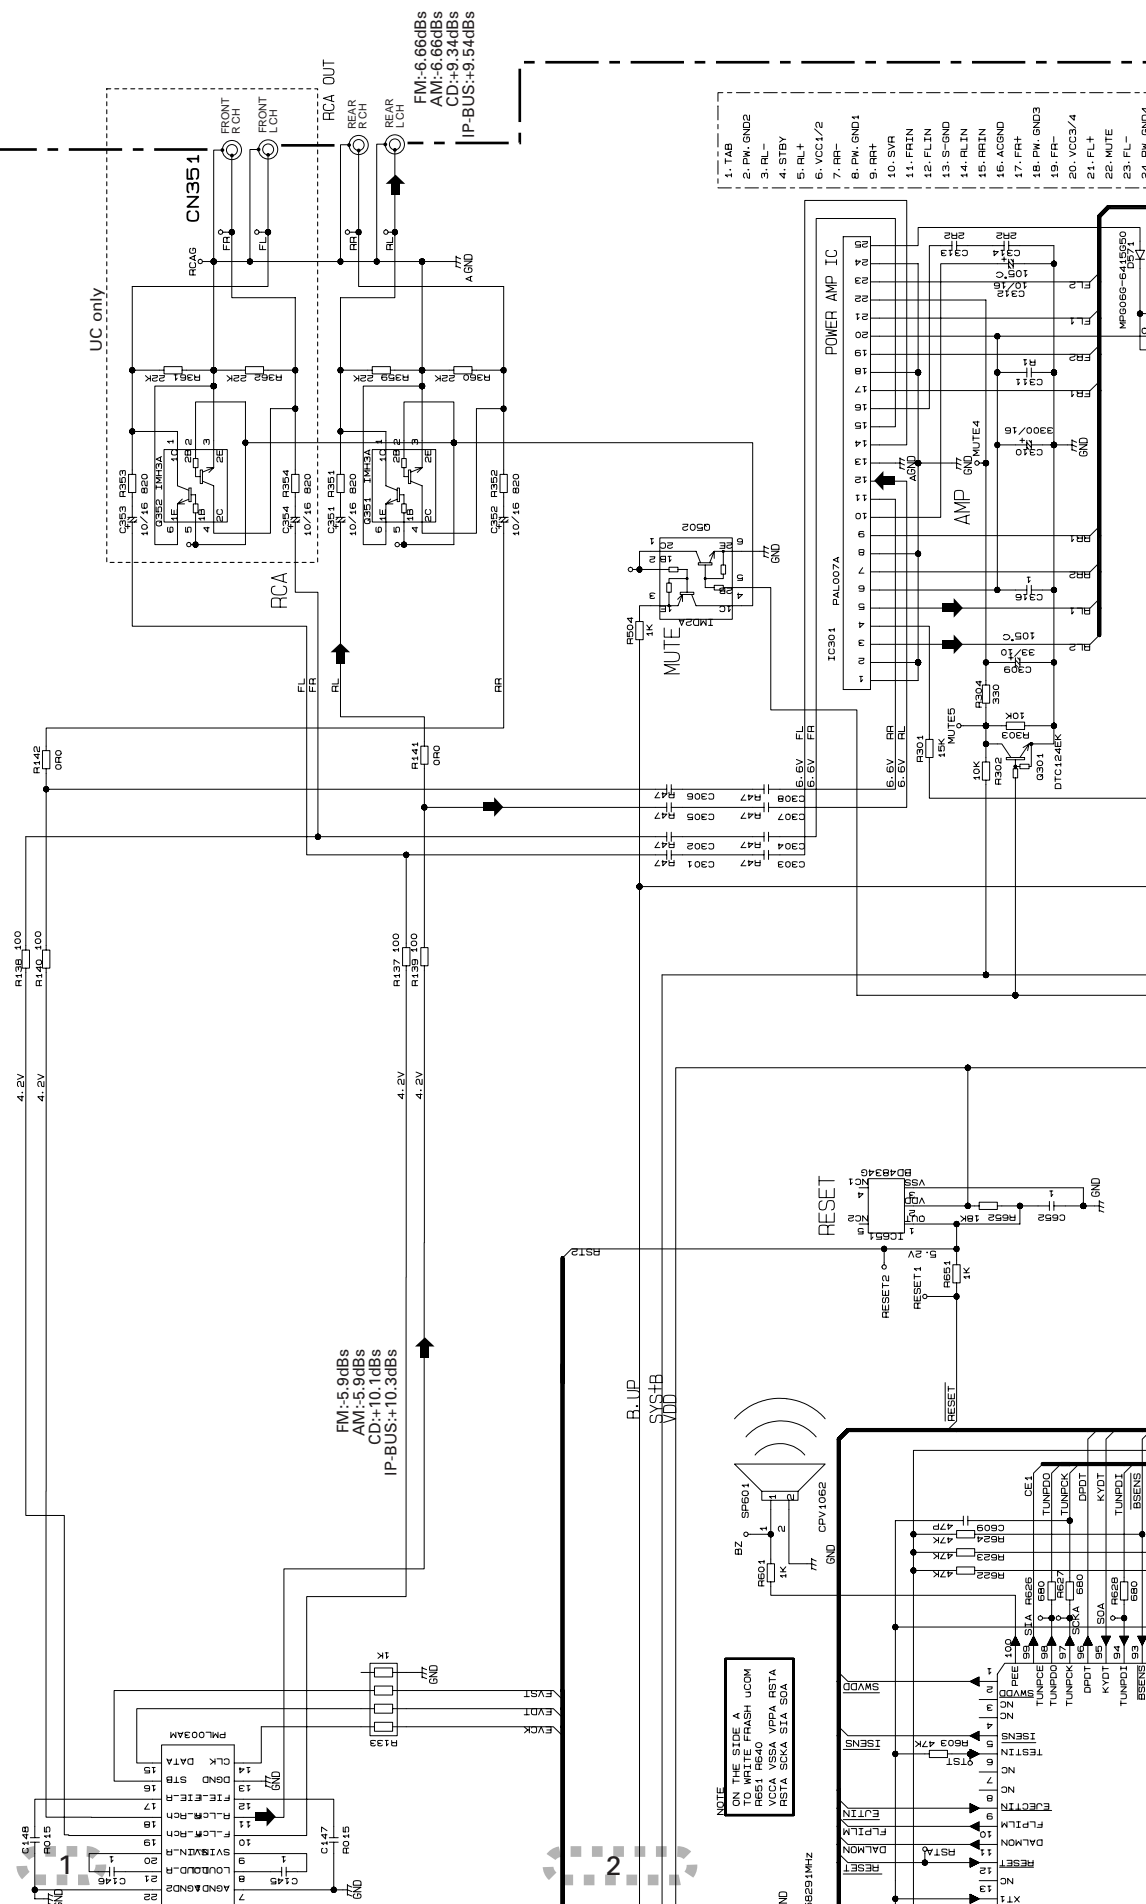A-b

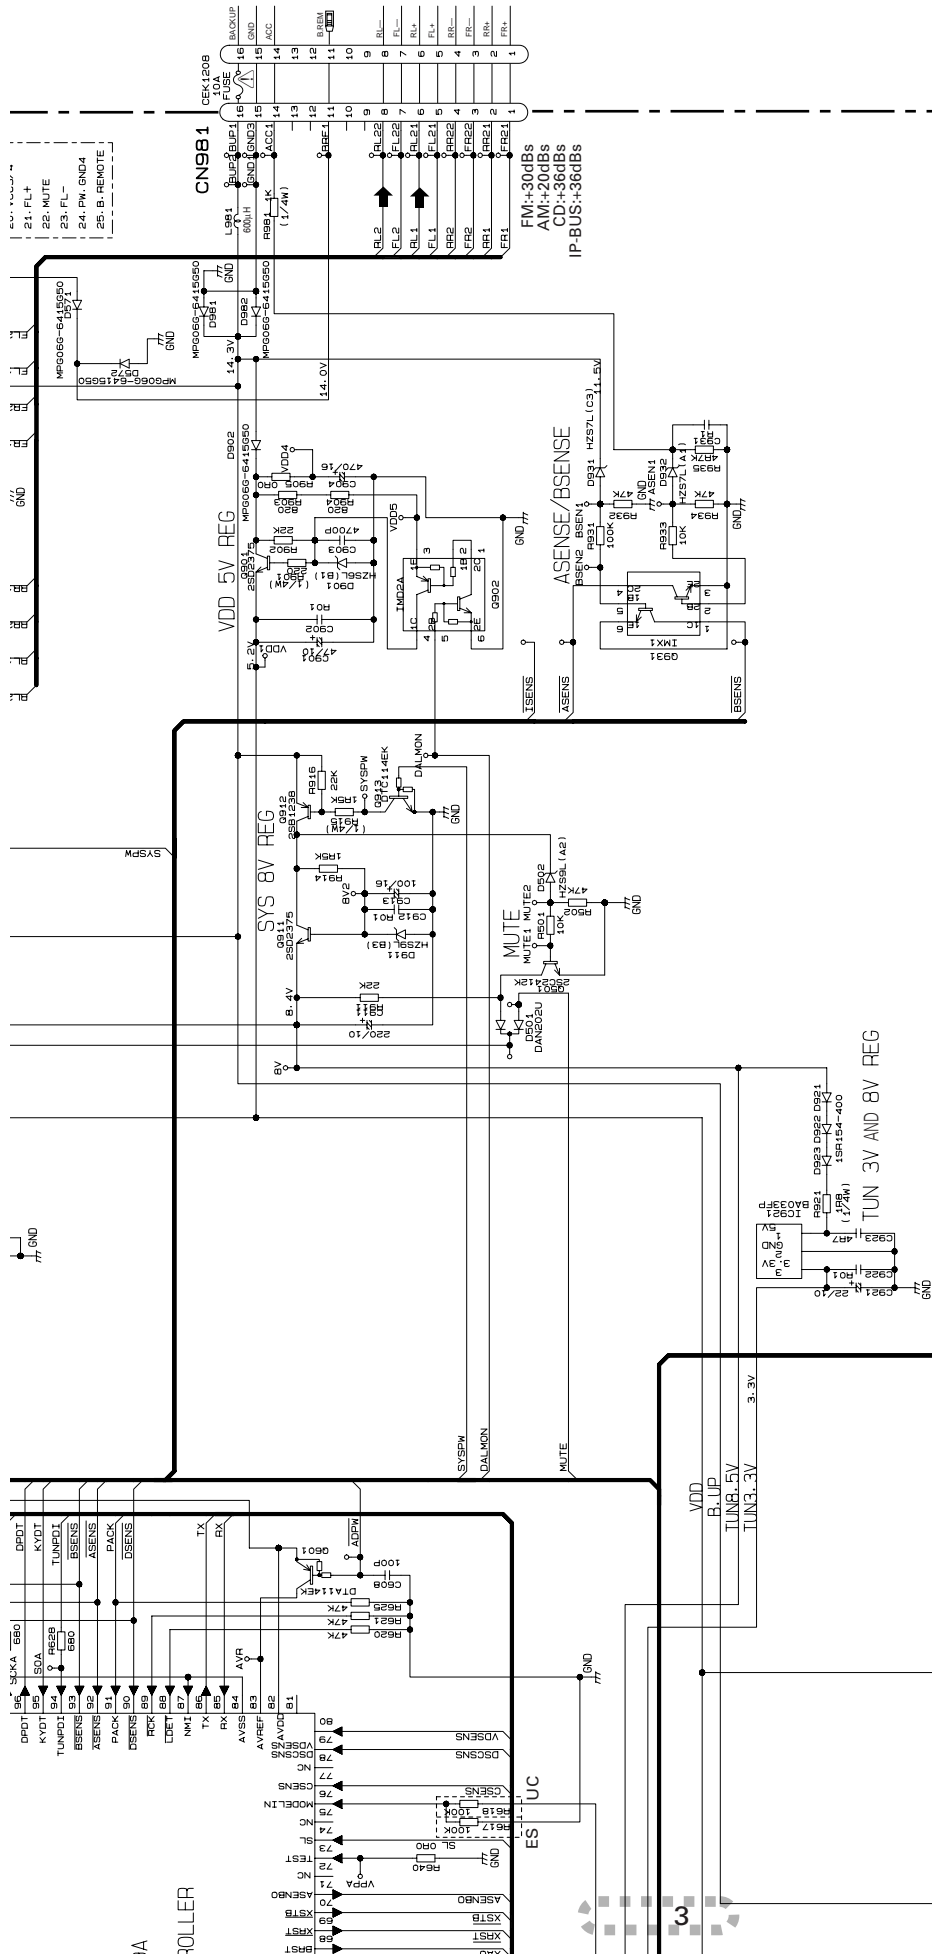

NOTE :

□ Symbol indicates a resistor.

No differentiation is made between chip resistors and discrete resistors.

—|— Symbol indicates a capacitor.

No differentiation is made between chip capacitors and discrete capacitors.


Decimal points for resistor and capacitor fixed values are expressed as :
2.2 → 2R2
0.022 → R022


The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

A-a A-b

A-b

3.3 KEYBOARD UNIT

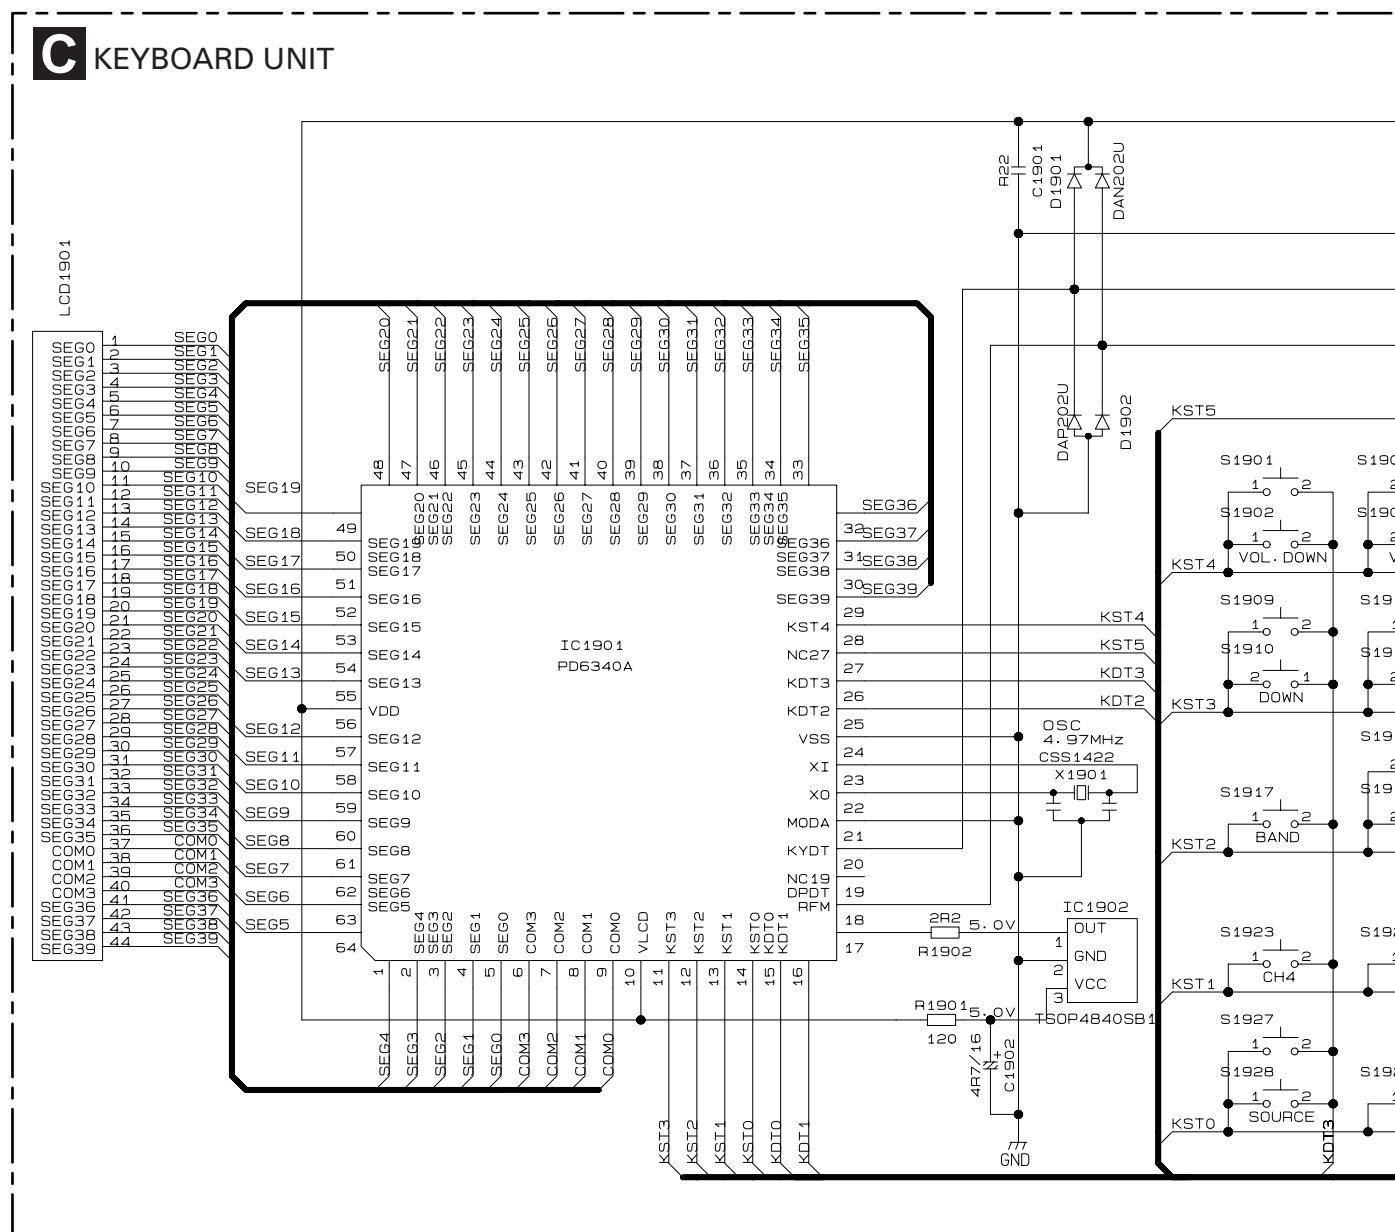

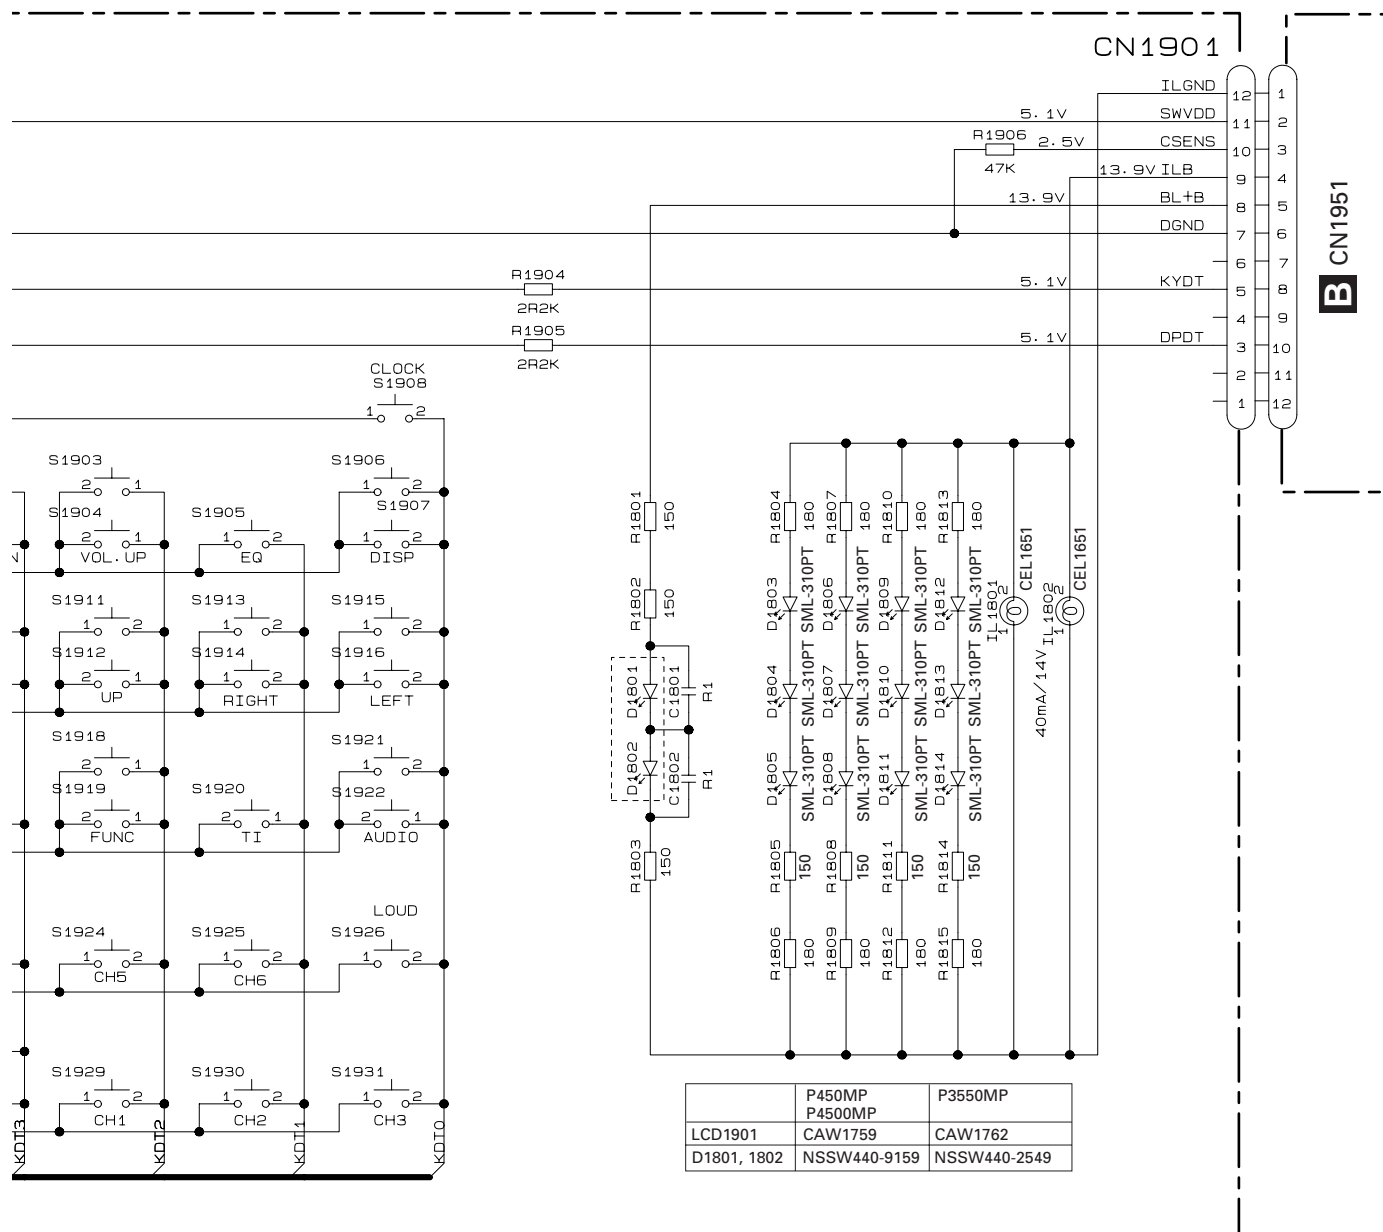


3.4 CD MECHANISM MODULE(GUIDE PAGE)

D-a

PICKUP UNIT(SERVICE)(P10)

E-PS4P10
F-P1+P6

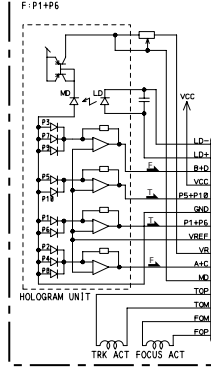


F. ACT: Applying positive voltage to FOP, the lens moves Disc side.
T. ACT: Applying positive voltage to TOP, the lens moves Outer Circumference.

SWITCHES:
CD CORE UNIT
S901 : HOME SWITCH.....ON-OFF
S902 : CLAMP SWITCH.....ON-OFF
S903 : DSCSNS SWITCH.....ON-OFF
S904 : 12EJ SWITCH.....ON-OFF
S905 : 8EJ SWITCH.....ON-OFF
The underlined indicates the original switch position.


MOTOR DRIVER LOGIC TABLE

	LOAD	EJ	PLAY	OFF
CLCONT	H	H	L	L
LOCJ	L	H	-	-
CONT	L	L	H	L

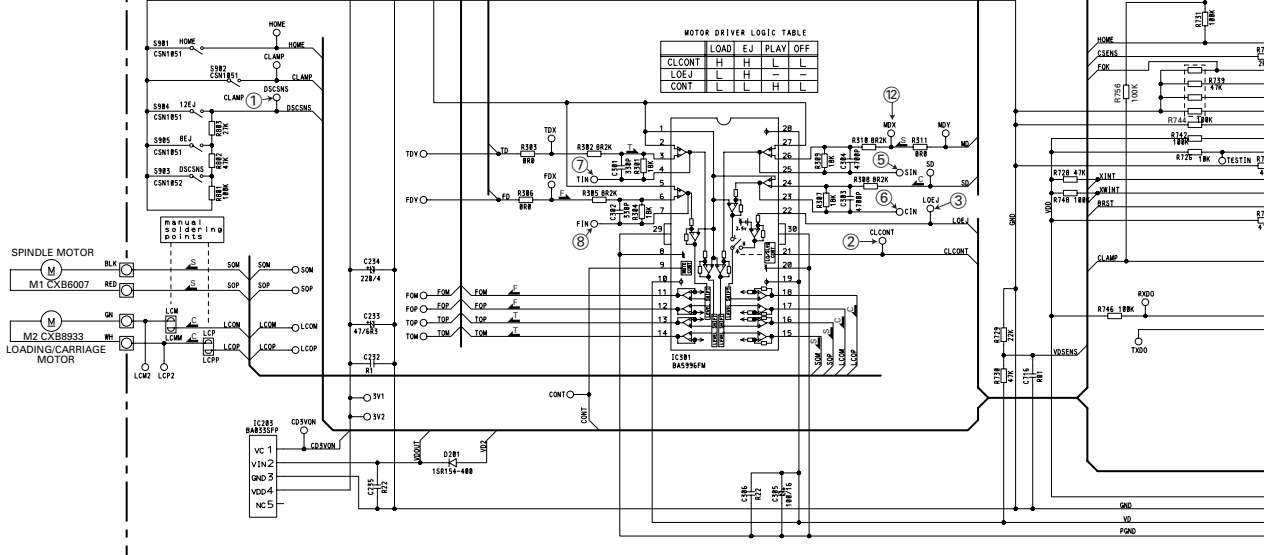

① Monitor land(ø1.2mm)
⊞ Monitor land(ø0.8mm)
⊞ Land for manual soldering

NOTE1) GND ... CD LSI, RFAMP, CPU
PGND ... Actuator, Motor Driver
AGND ... Audio
These GND's are not connected to each other on PCB.
PGND is connected to a Floating mechanism part by a screw.
NOTE2) This schematic applies to CNP6884-

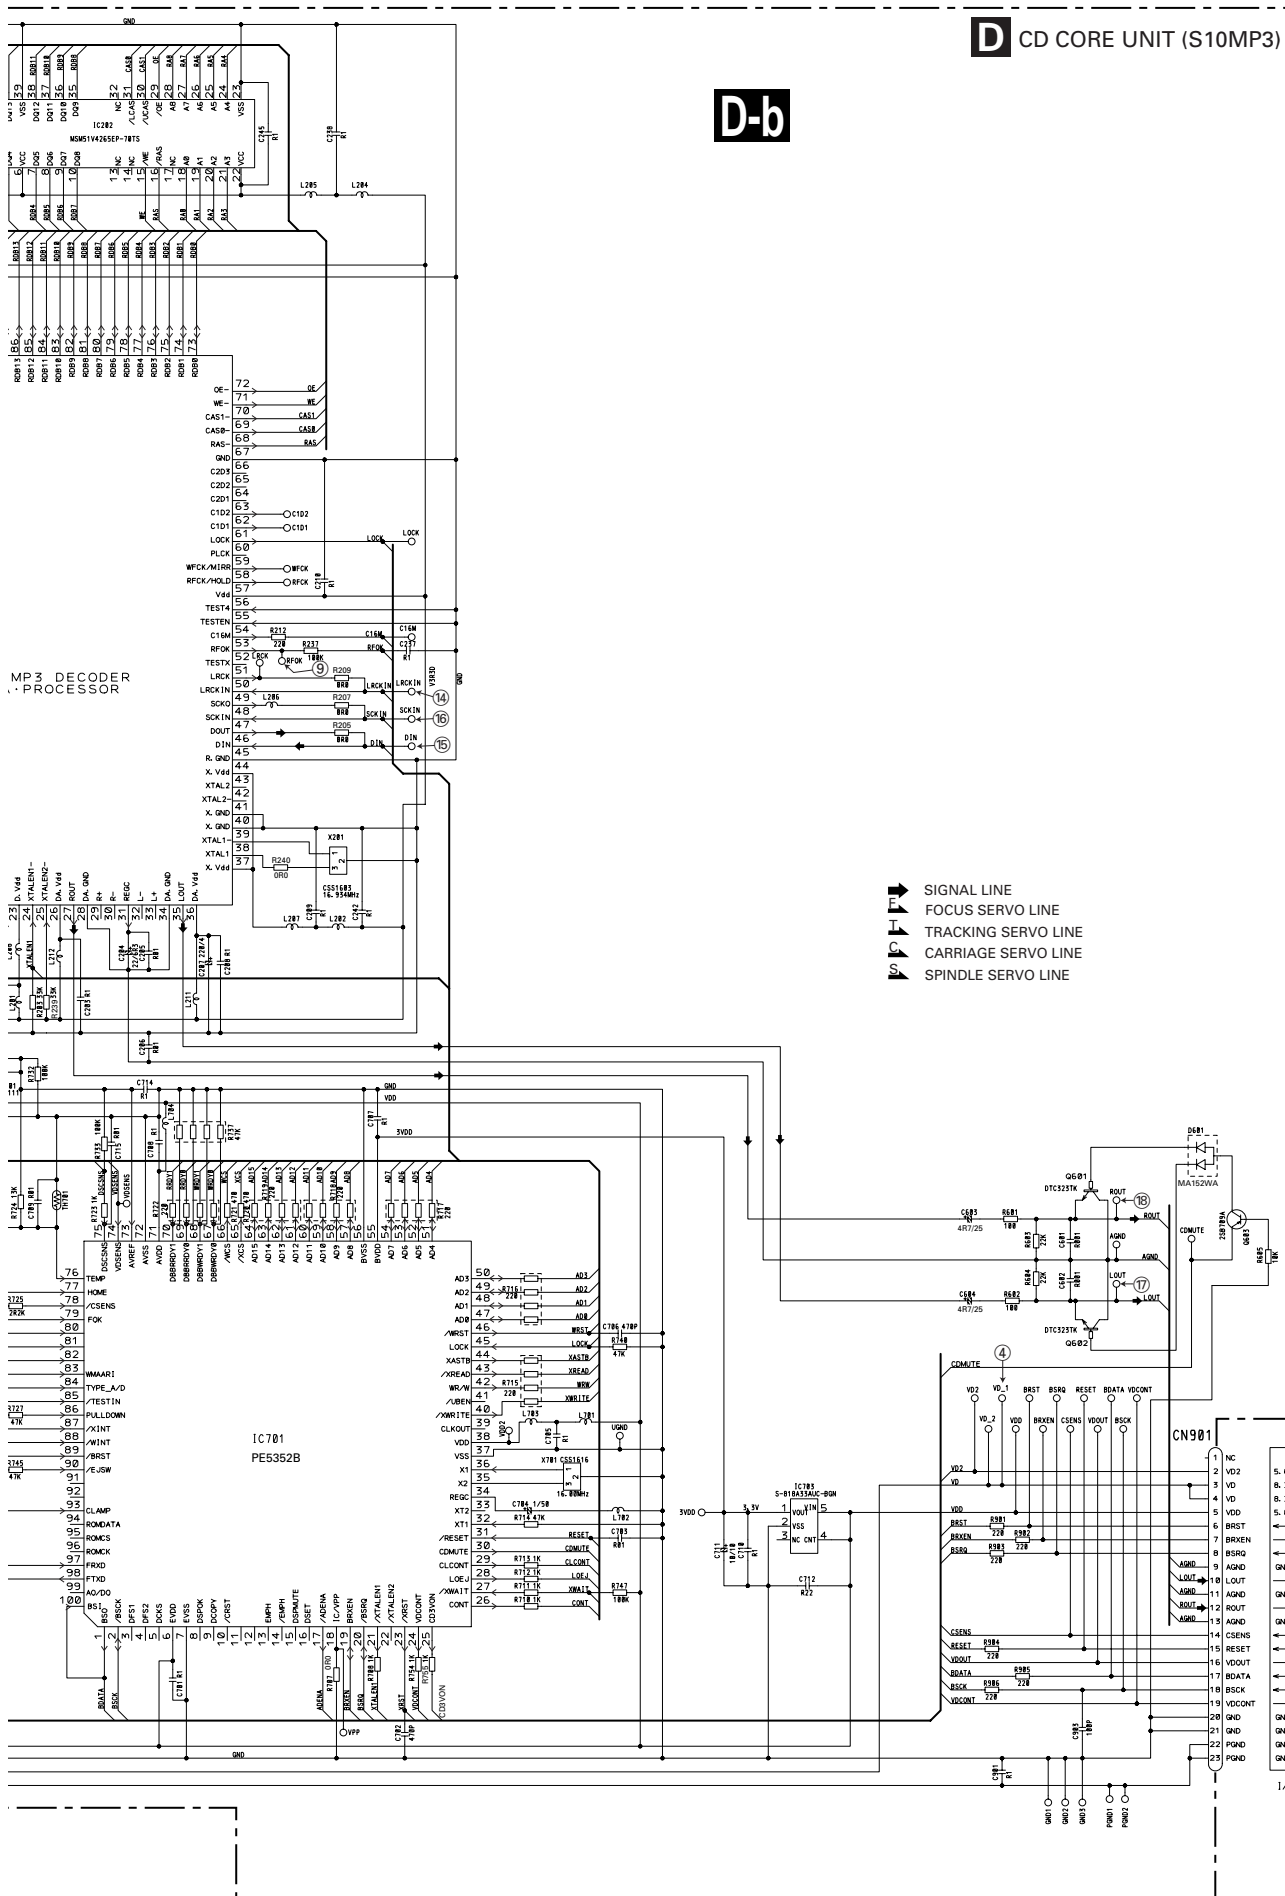

D-b

A


B

C

D

E

F

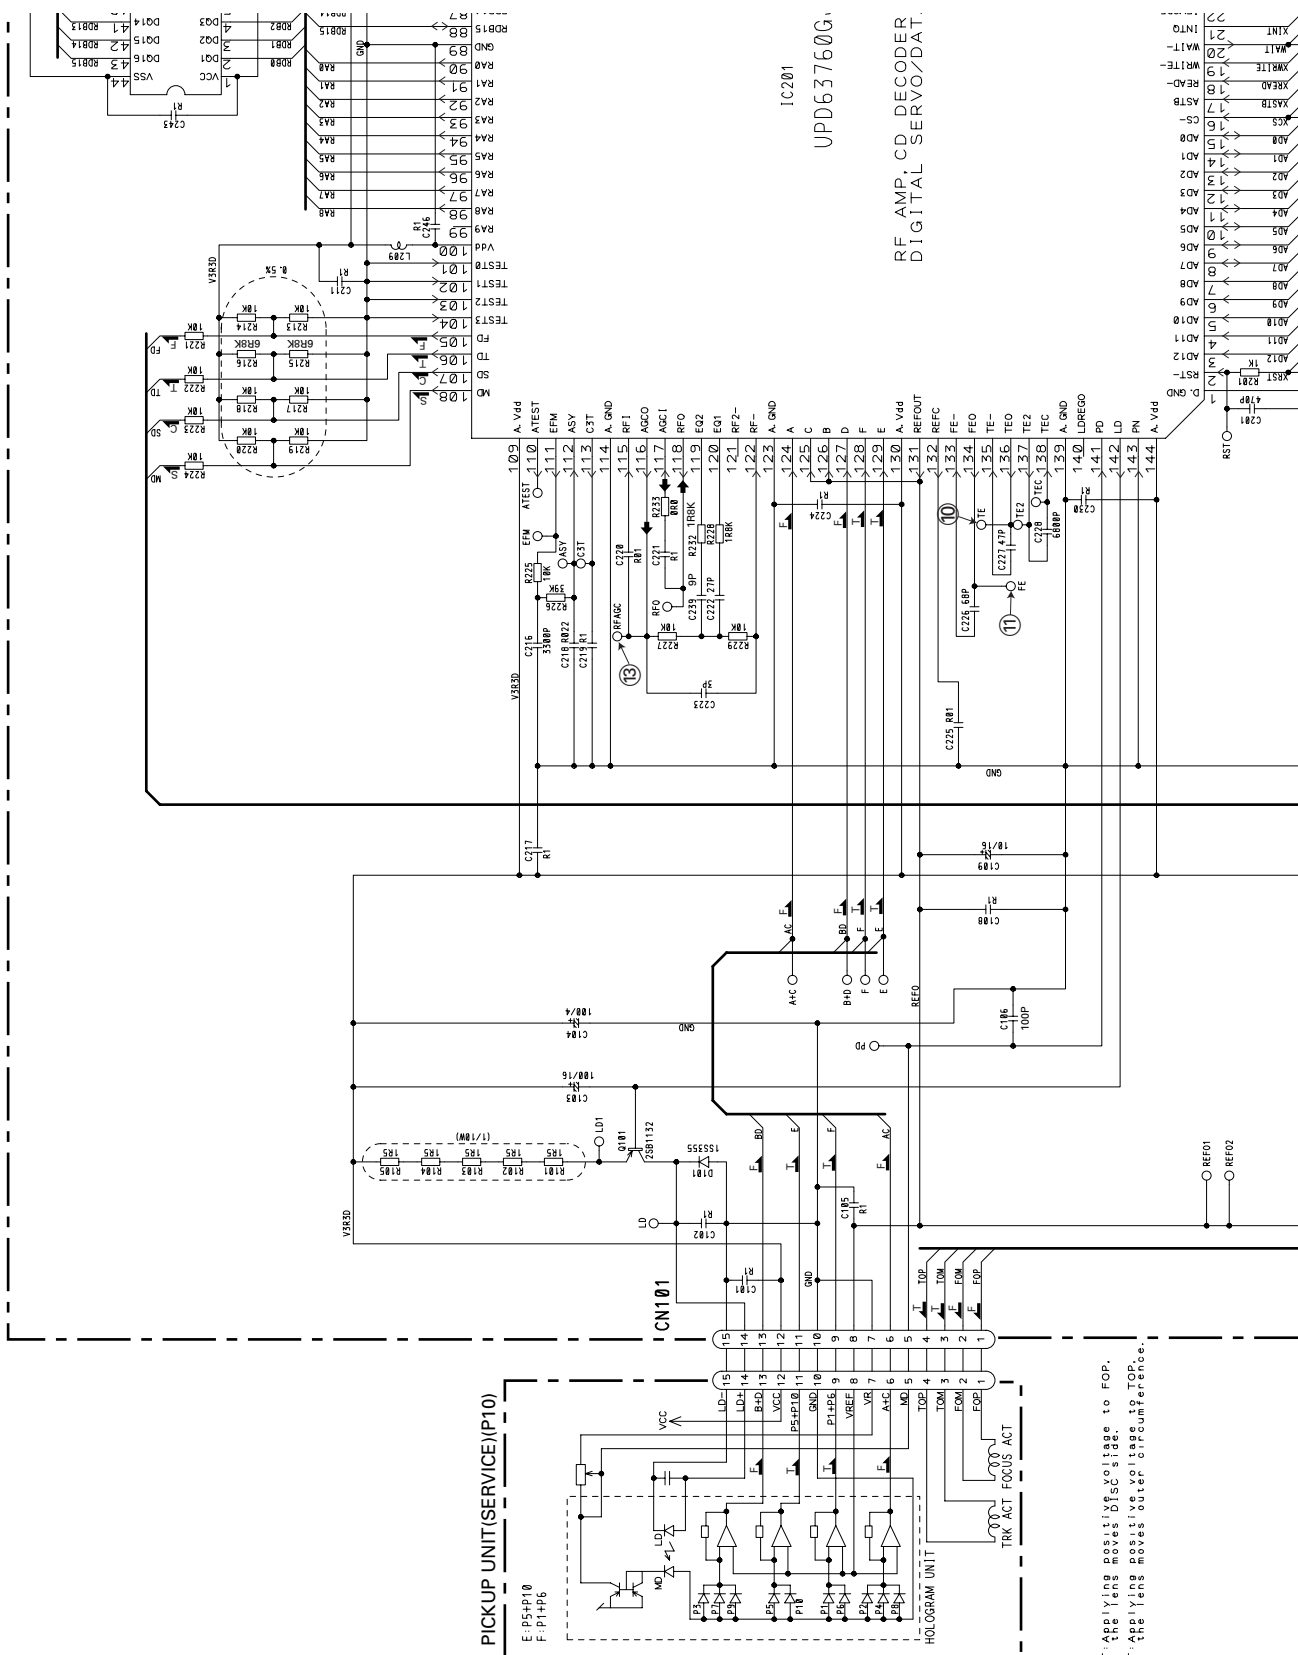

F. ACT: Applying positive voltage to FOP,
the lens moves DISC side.

T. ACT: Applying positive voltage to TOP,
the lens moves outer circumference.

D-a



SWITCHES:

CD CORE UNIT

S901 : HOME SWITCH.....ON-OFF


S902 : CLAMP SWITCH.....ON-OFF

S903 : DSCSNS SWITCH.....ON-OFF

S904 : 12EJ SWITCH.....ON-OFF

S905 : 8EJ SWITCH.....ON-OFF

The underlined indicates the original switch position.

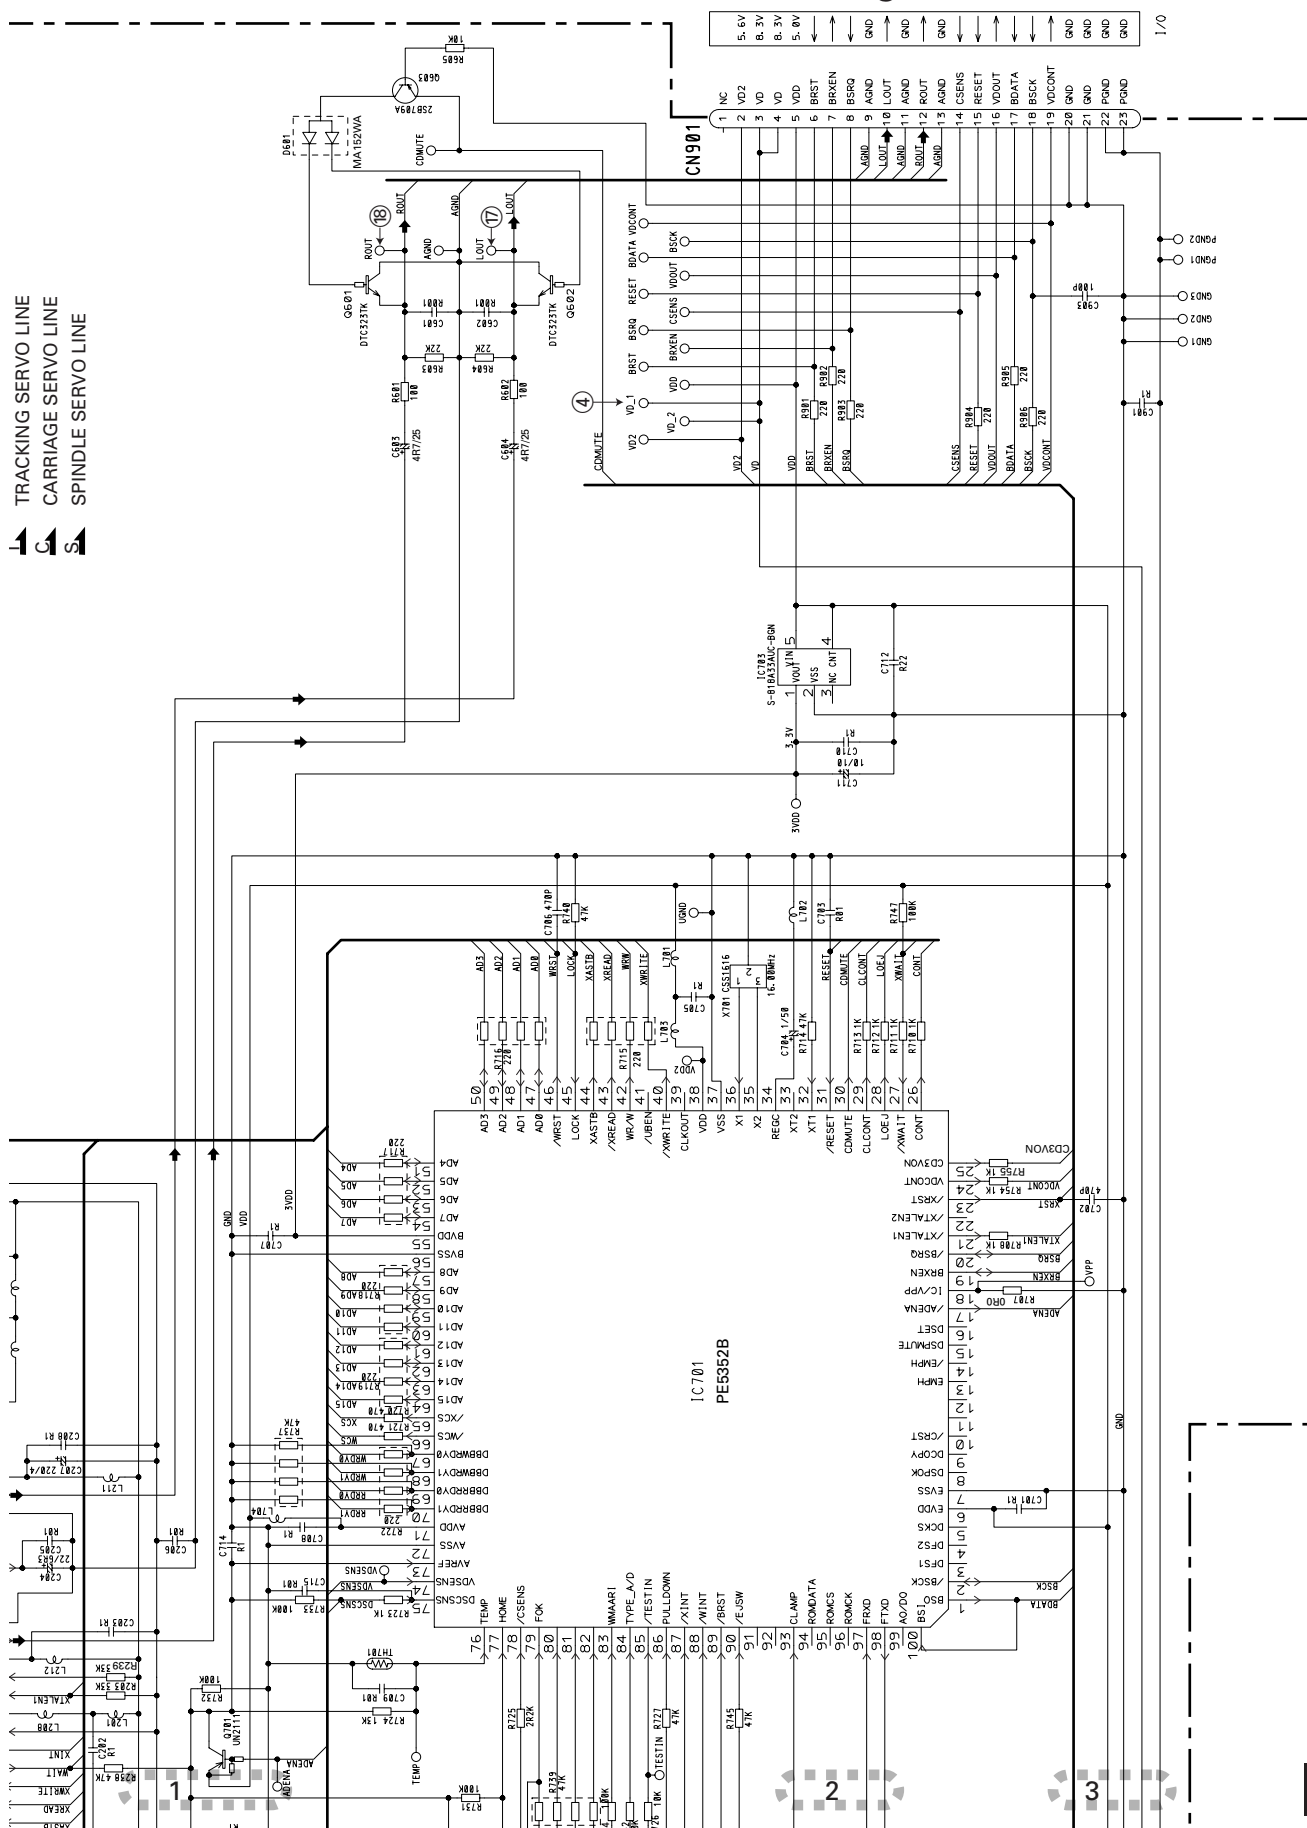[illegible]

D-b

Waveforms

Note : 1. The encircled numbers denote measuring points in the circuit diagram.
2. Reference voltage REFO1(1.65V)

A


B


C

D



E

F

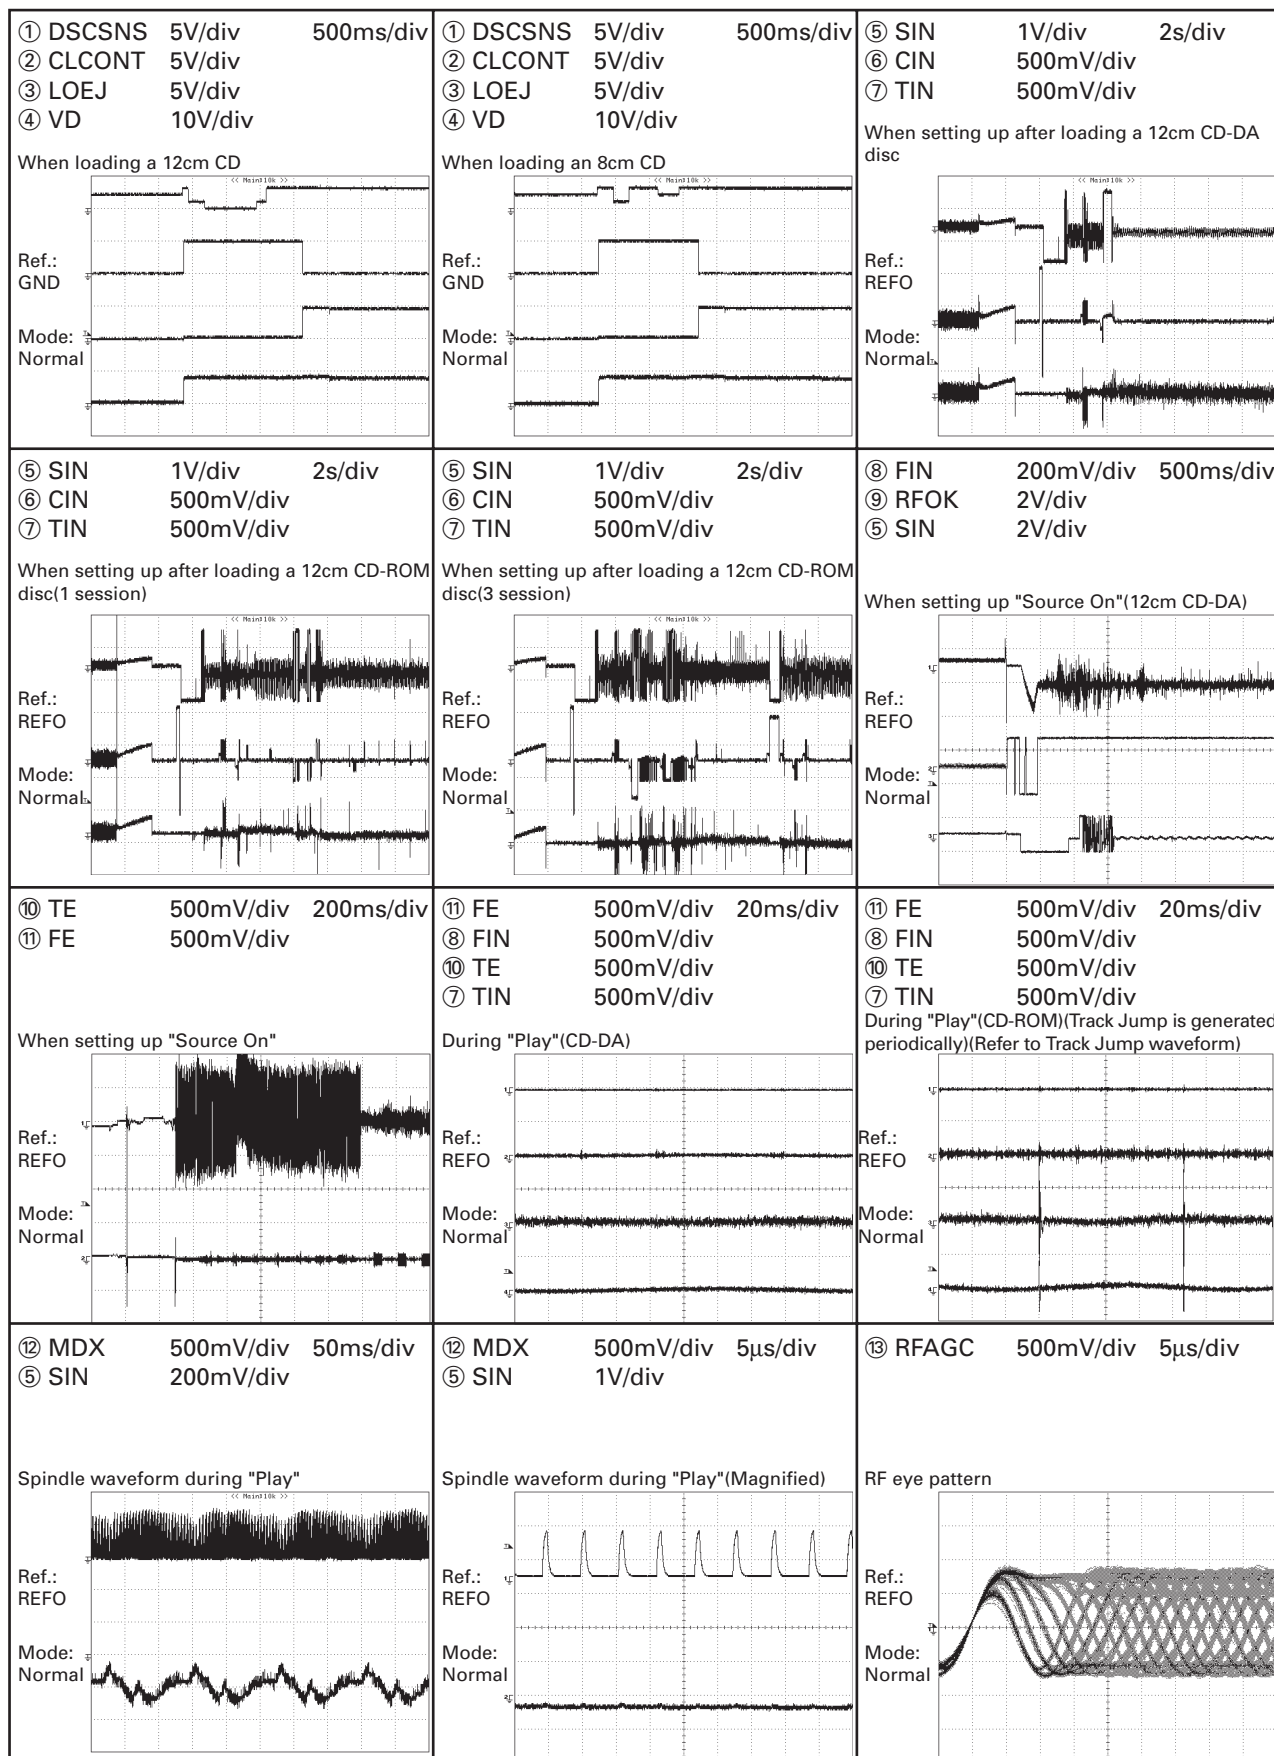

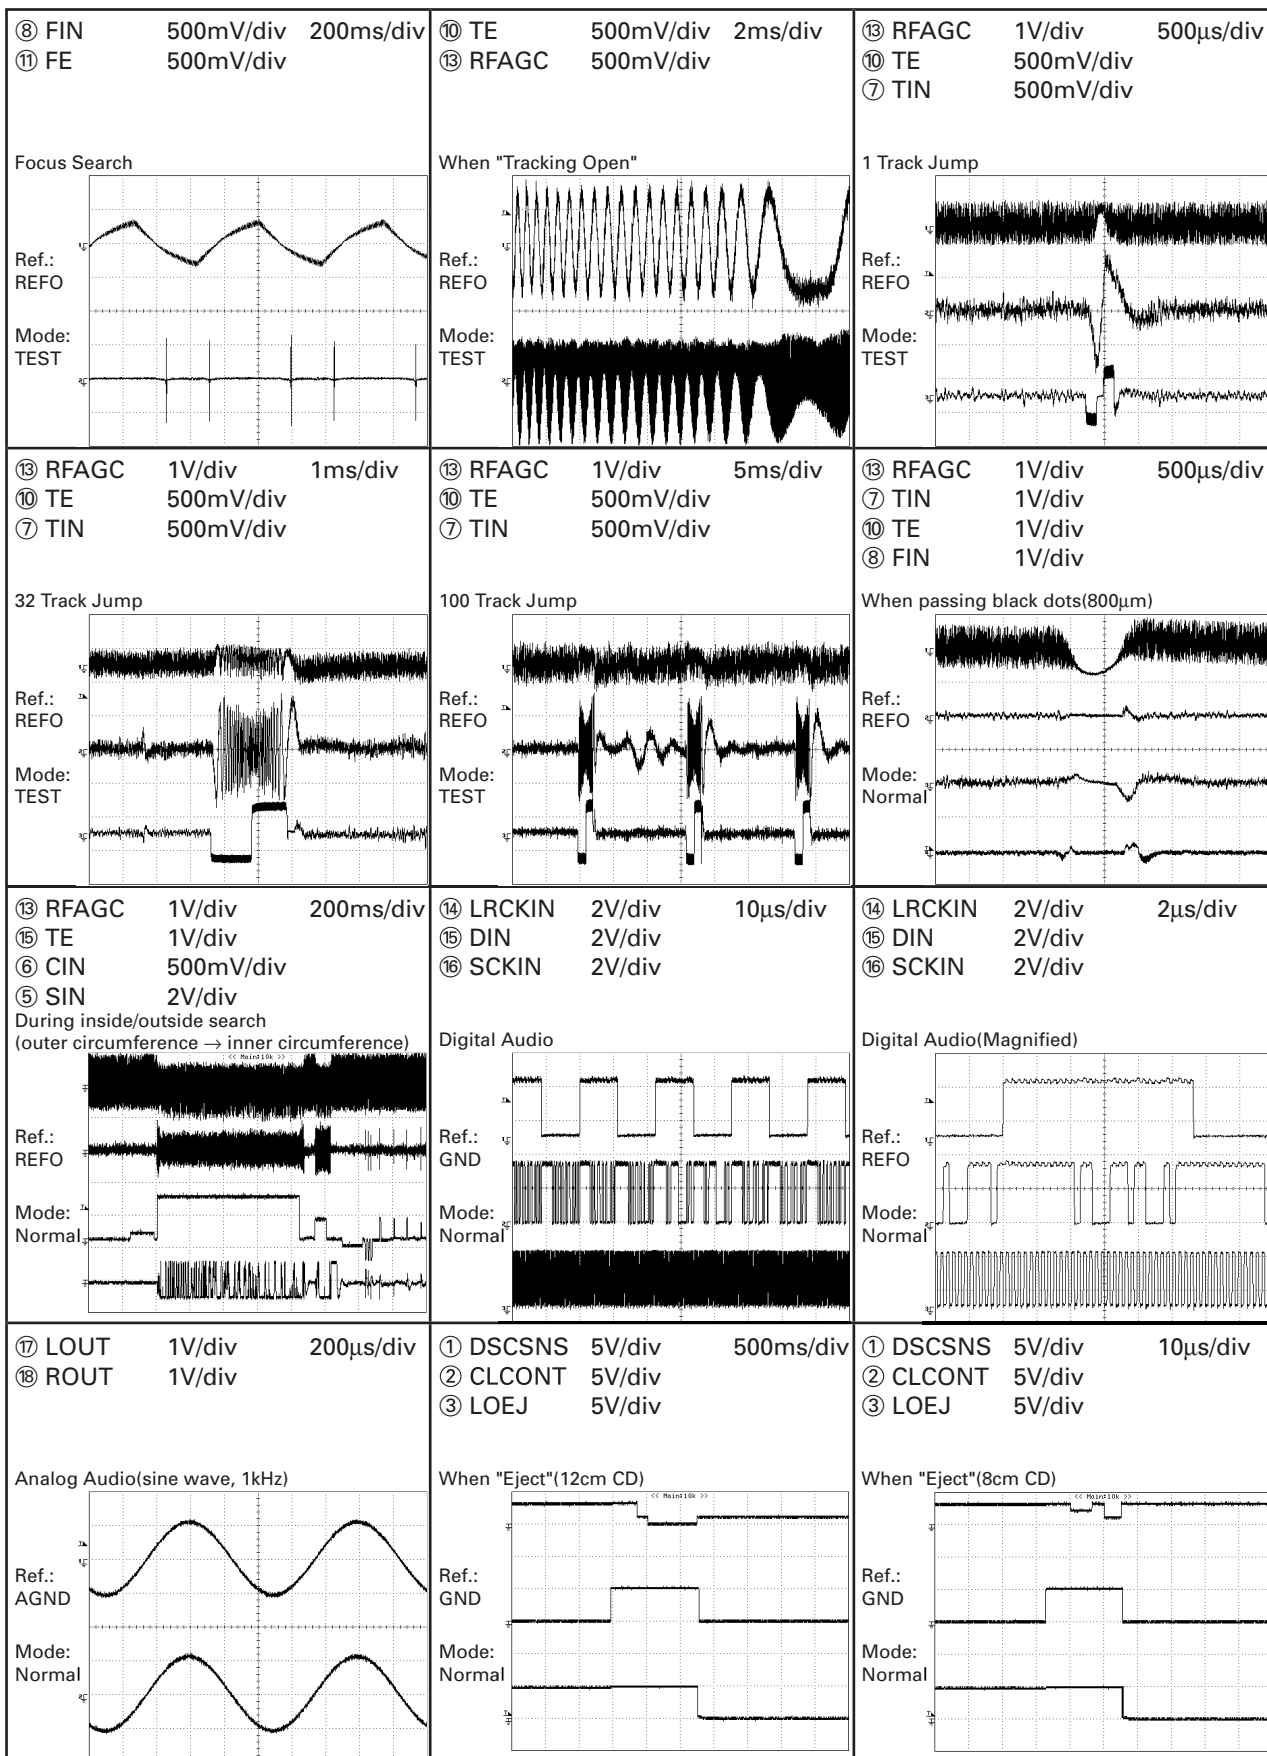

A
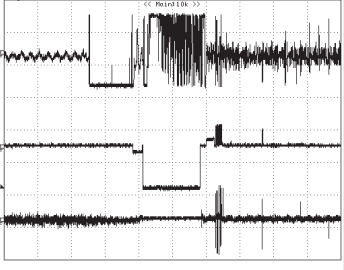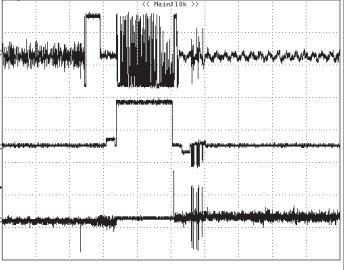
<p>⑤ SIN 1V/div 500ms/div ⑥ CIN 500mV/div ⑦ TIN 500mV/div</p> <p>When switching to CD-ROM from CD-DA (BAND key)</p> 	<p>⑤ SIN 1V/div 500ms/div ⑥ CIN 500mV/div ⑦ TIN 500mV/div</p> <p>When switching to CD-DA from CD-ROM (BAND key)</p> 	

B

C

D

E

F



5



6



7



8



A



B



C



D



E



F



5



6



7



8



4. PCB CONNECTION DIAGRAM

4.1 TUNER AMP UNIT

A

B

C

D

E


F

NOTE FOR PCB DIAGRAMS


1. The parts mounted on this PCB include all necessary parts for several destination.

For further information for respective destinations, be sure to check with the schematic diagram.


2. Viewpoint of PCB diagrams

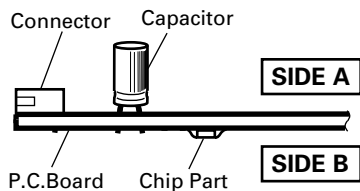

A TUNER AMP UNIT

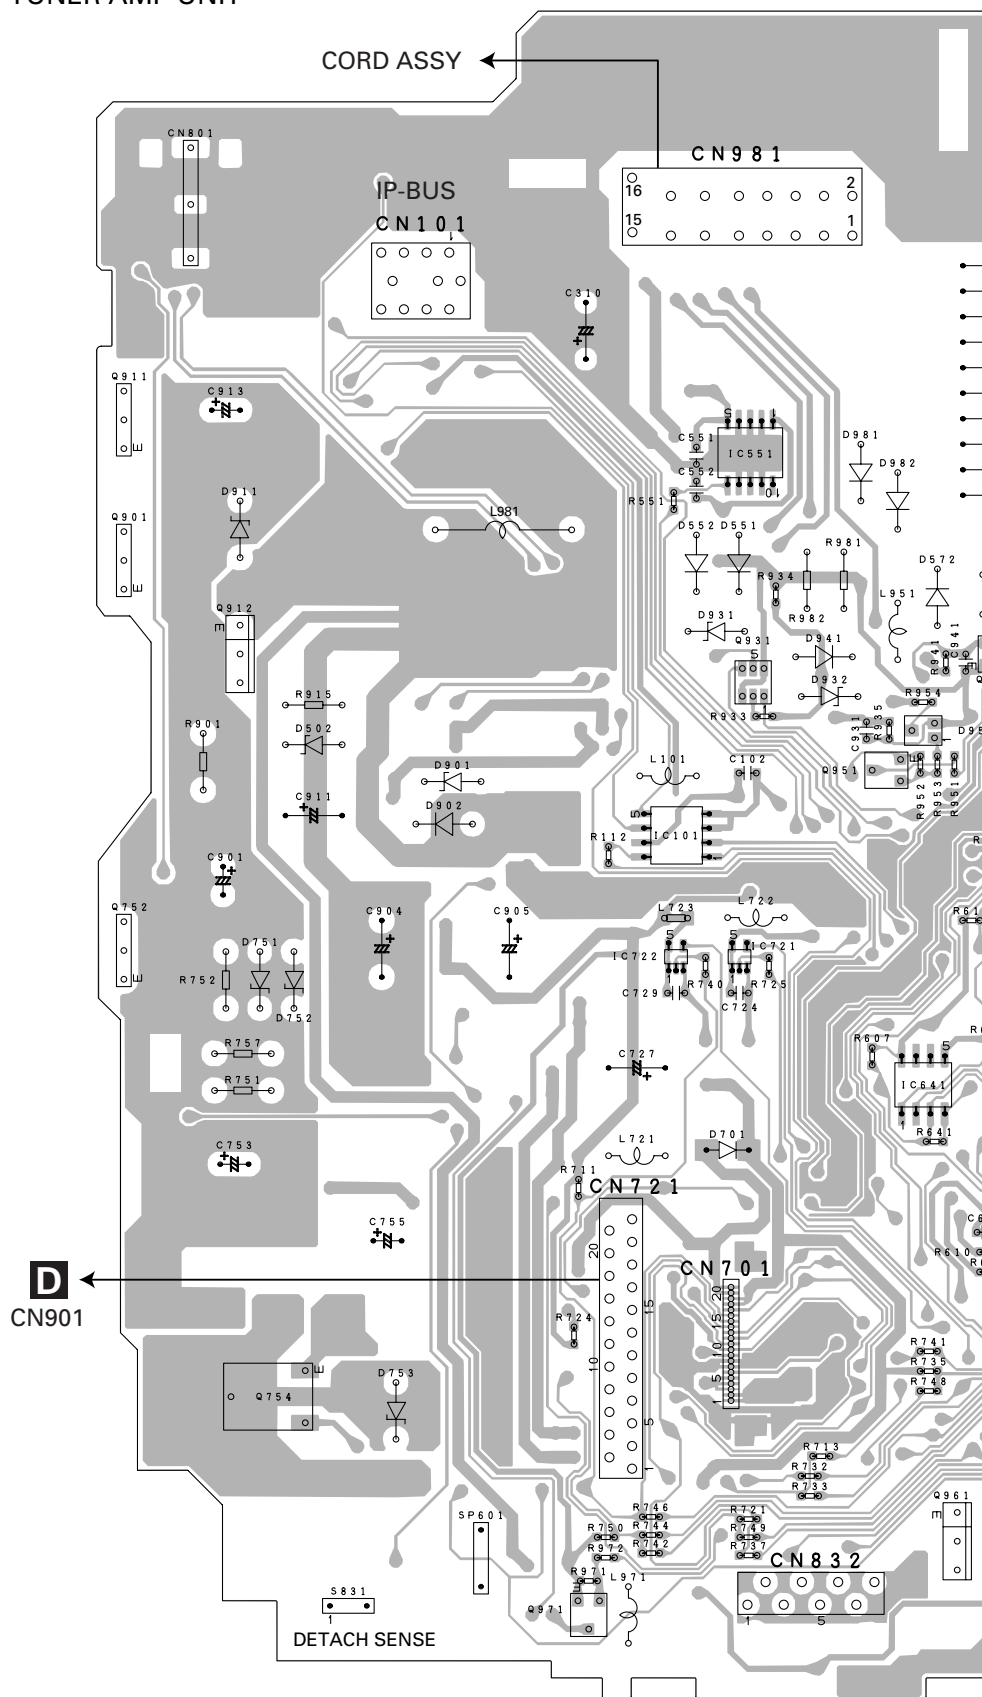

SIDE A

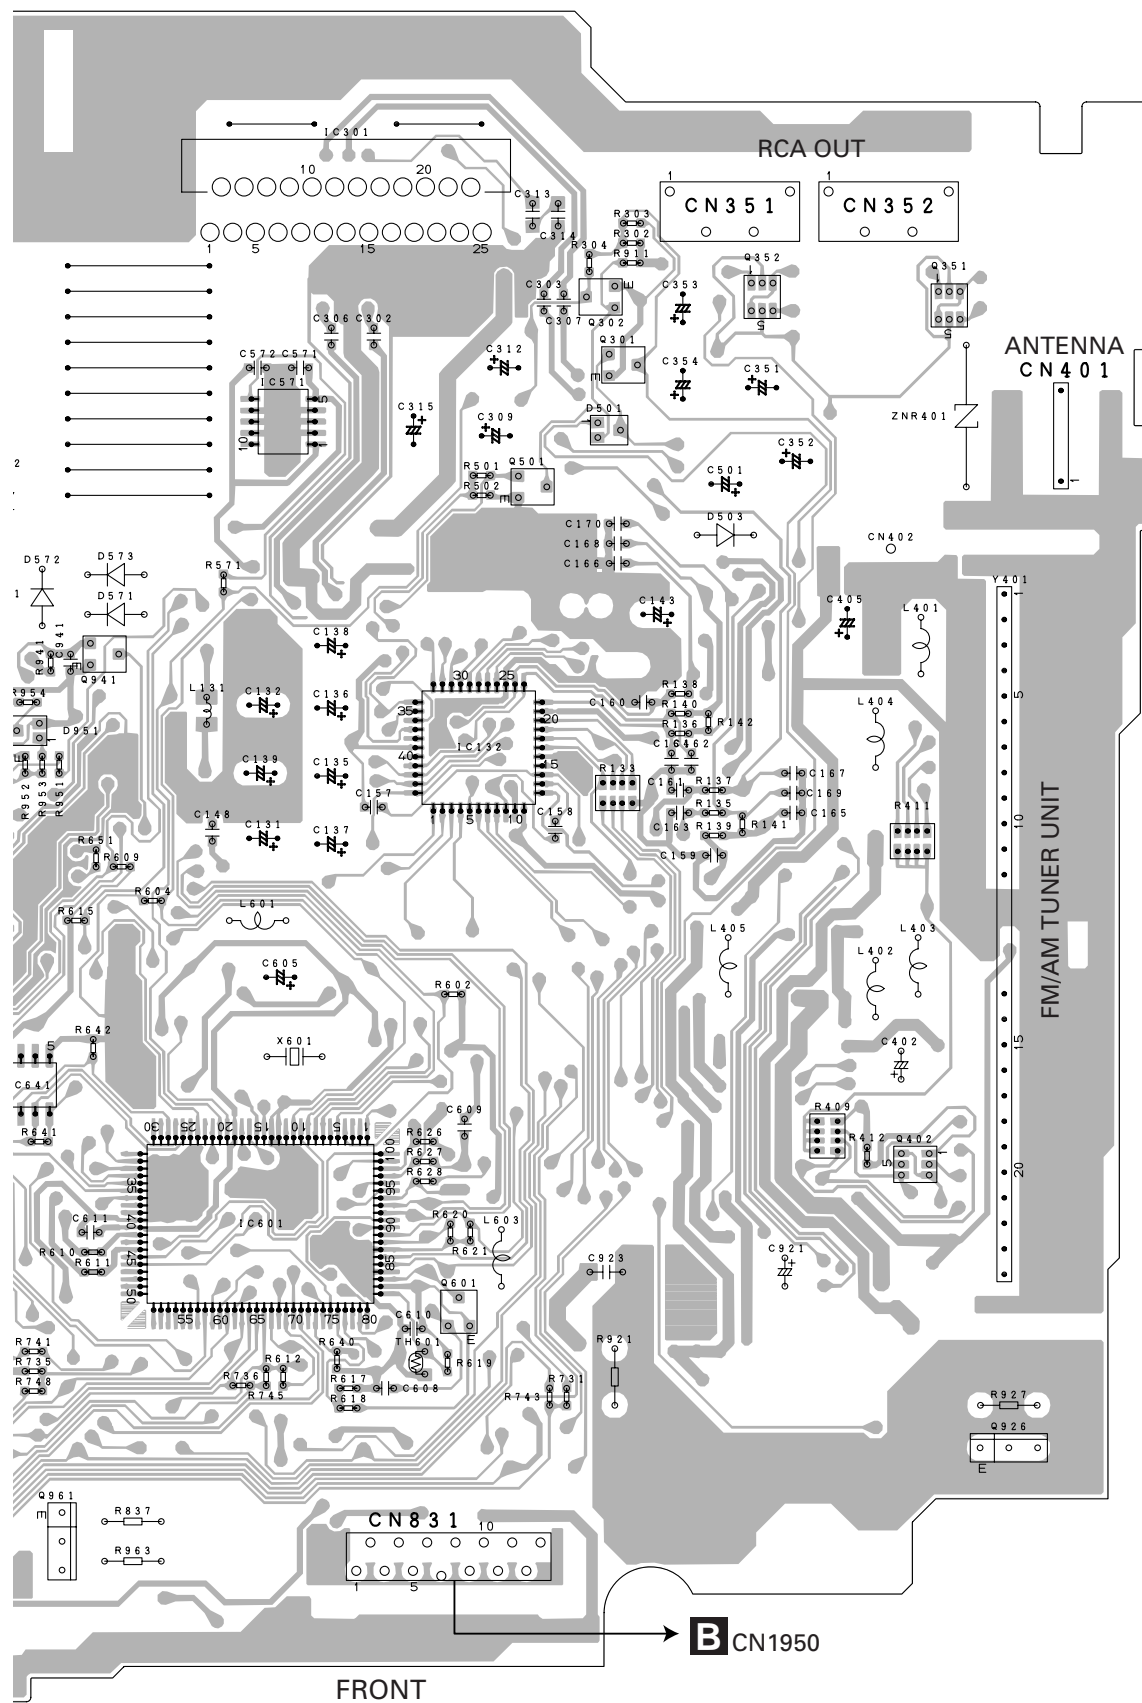

B CN1950


A

DEH-P450MP/XM/UC

4.2 PANEL UNIT


B PANEL UNIT

SIDE A

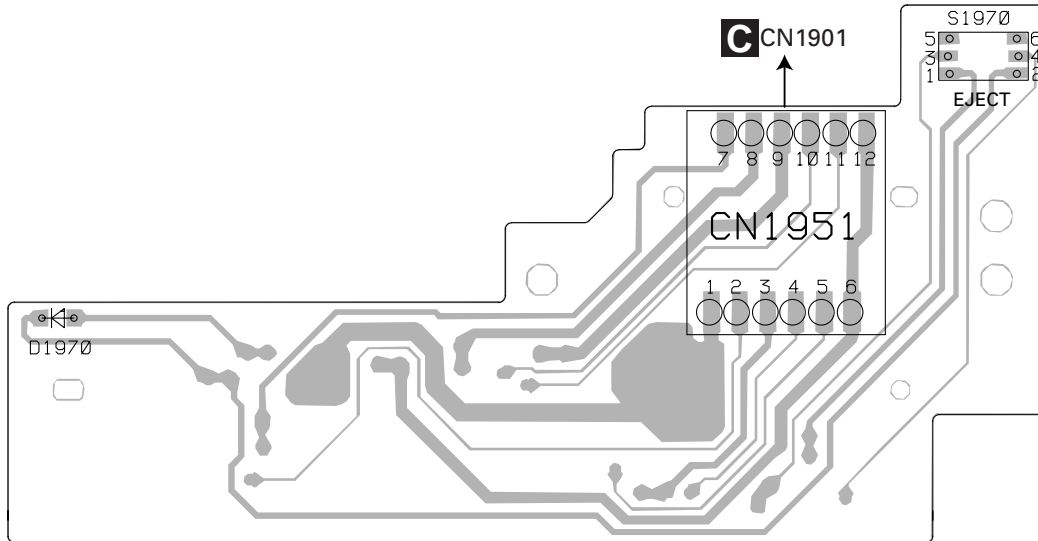

B PANEL UNIT

SIDE B

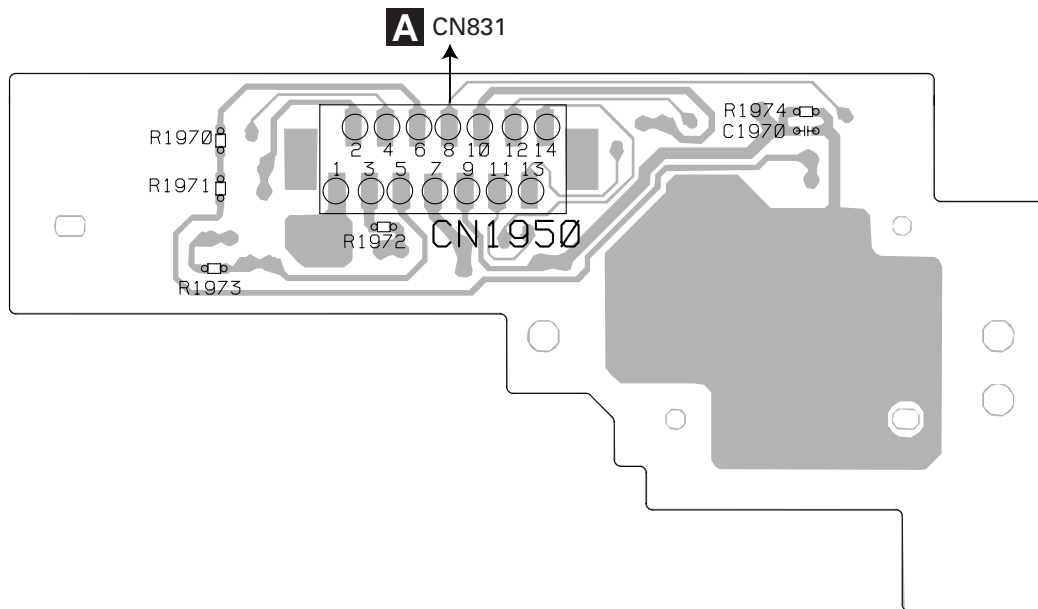


B

4.3 KEYBOARD UNIT


C KEYBOARD UNIT

SIDE A

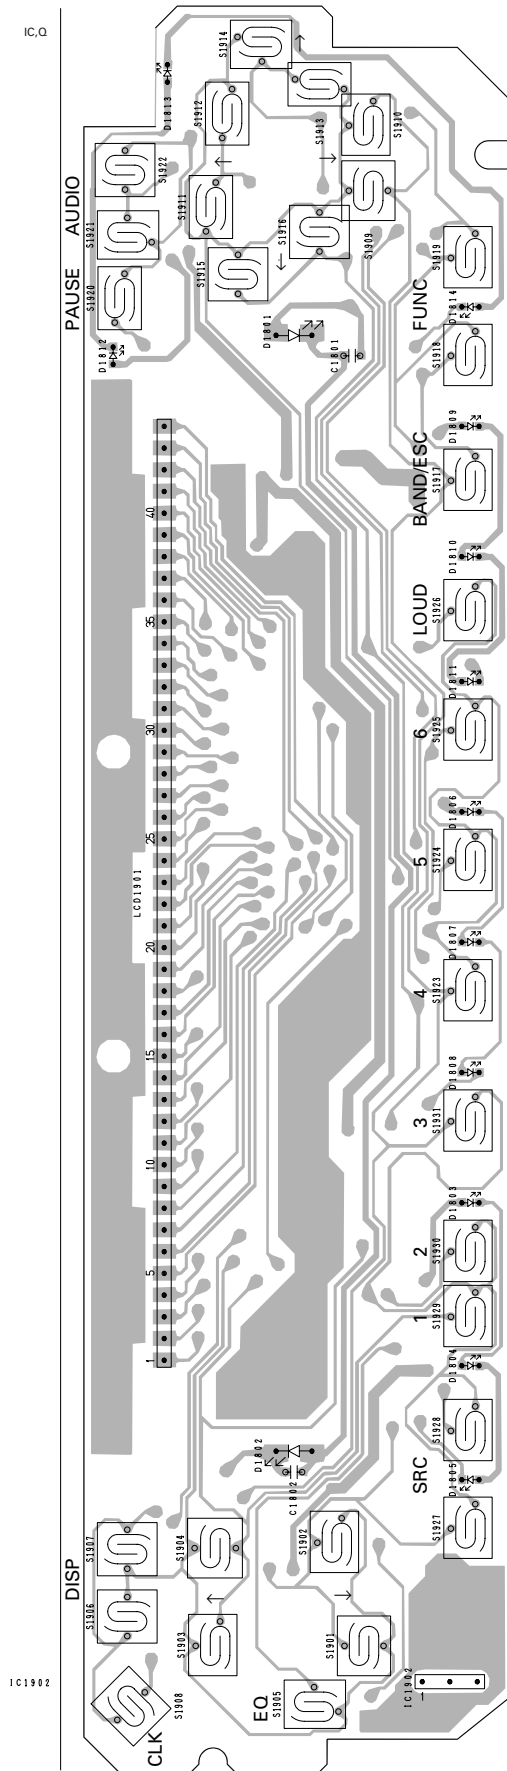

C KEYBOARD UNIT

SIDE B

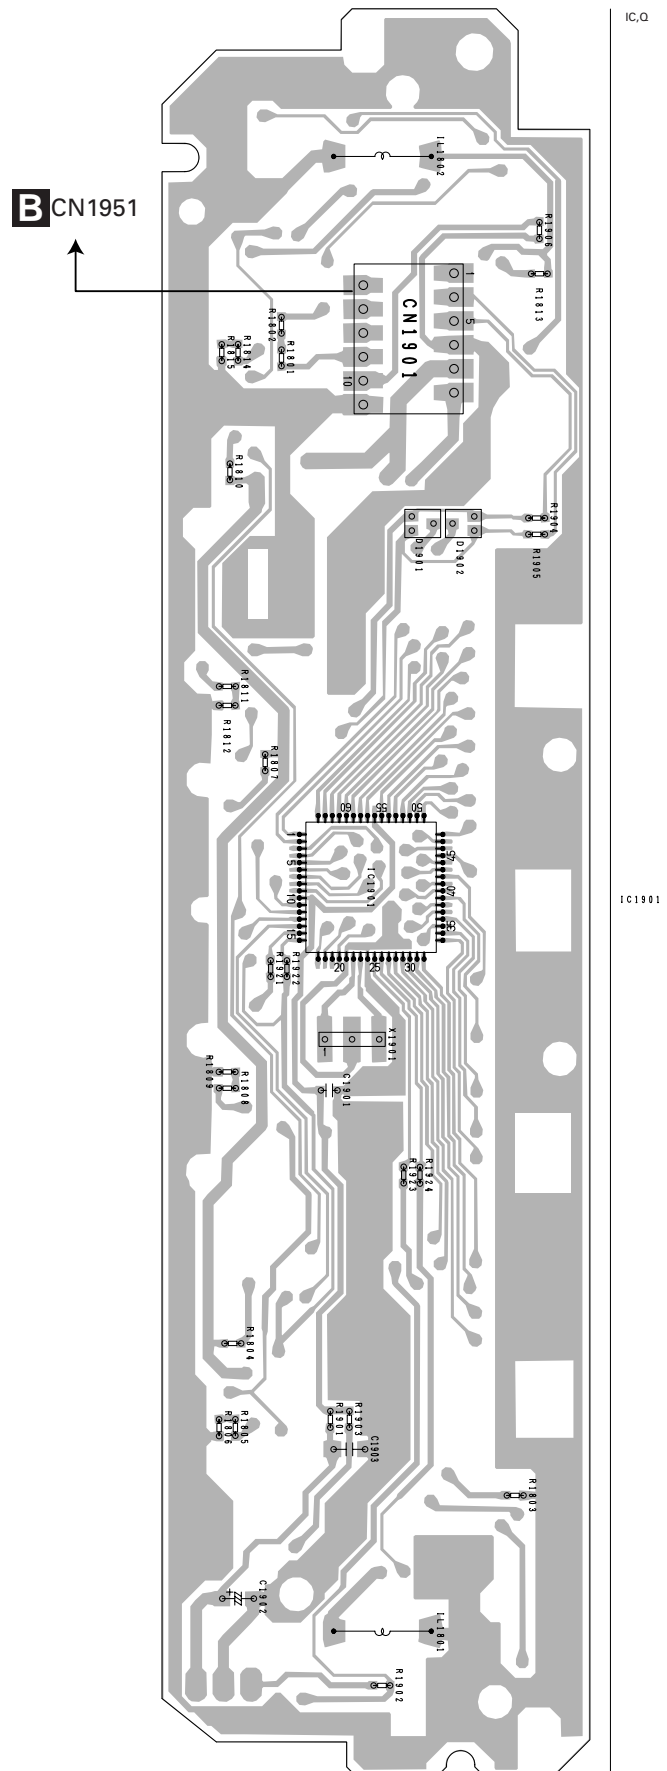

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A Unit Number : CWM8653 (P450MP/XM/UC, P4500MP/XM/UC) : CWM8654 (P3550MP/XM/ES)		D 981 Diode D 982 Diode ZNR 401 Arrester L 131 Inductor L 401 Ferri-Inductor	MPG06G-6415G50 MPG06G-6415G50 DSP-201M LCTA2R2J2520 LAU4R7K
Unit Name : Tuner Amp Unit		L 402 Inductor L 404 Inductor L 601 Inductor L 721 Inductor L 971 Inductor	LAU1R0K LAU1R0K LAU2R2K LAU2R2K LAU2R2K
MISCELLANEOUS		L 981 Choke Coil 600μH X 601 Radiator 12.58291MHz S 831 Switch(DETACH SENSE) SP 601 Buzzer FM/AM Tuner Unit	CTH1280 CSS1402 CSN1039 CPV1062 CWE1646
IC 101 IC IC 131 IC IC 301 IC IC 601 IC IC 651 IC	HA12187FP PML003AM PAL007A PE5393A BD4834G		
IC 921 IC Q 101 Transistor Q 102 Transistor Q 301 Transistor Q 351 Transistor	BA033FP 2SA1037K DTC124EK DTC124EK IMH3A		
Q 352 Transistor (P450MP, P4500MP) Q 501 Transistor Q 502 Transistor Q 601 Transistor Q 751 Transistor	IMH3A 2SC2412K IMD2A DTA114EK IMD2A		
Q 752 Transistor Q 754 Transistor Q 831 Transistor Q 901 Transistor Q 902 Transistor	2SD2375 2SD1760F5 DTC143EK 2SD2375 IMD2A		
Q 911 Transistor Q 912 Transistor Q 913 Transistor Q 931 Transistor Q 961 Transistor	2SD2375 2SB1238 DTC114EK IMX1 2SB1238		
Q 962 Transistor Q 971 Transistor D 501 Diode D 502 Diode D 571 Diode	DTC114EK 2SA1036K DAN202U HZS9L(A2) MPG06G-6415G50		
D 572 Diode D 751 Diode D 753 Diode D 831 Diode D 832 Diode	MPG06G-6415G50 HZS9L(B1) HZS6L(C1) DAN202U DAN202U		
D 833 Diode D 834 Diode D 901 Diode D 902 Diode D 911 Diode	DAP202U DAP202U HZS6L(B1) MPG06G-6415G50 HZS9L(B3)		
D 921 Diode D 922 Diode D 923 Diode D 931 Diode D 932 Diode	1SR154-400 1SR154-400 1SR154-400 HZS7L(C3) HZS7L(A1)		
		R 101 R 102 R 103 R 104 R 105 R 106 R 107 R 108 R 109 R 110 R 111 R 112 R 113 R 114 R 131 R 132 R 133 R 137 R 138 R 139 R 140 R 141 R 142 R 301 R 302 R 303 R 304 R 351 R 352 R 353 R 354 R 359 R 360 R 361 R 362	RS1/16S150J RS1/16S470J RS1/16S101J RS1/16S101J RS1/16S181J RS1/16S181J RS1/16S223J RS1/16S223J RS1/16S102J RS1/16S102J RS1/16S222J RS1/16S103J RS1/16S332J RS1/16S562J RS1/16S471J RS1/16S471J RAB4C102J RS1/16S101J RS1/16S101J RS1/16S101J RS1/16S101J RS1/16S0R0J RS1/16S0R0J RS1/16S153J RS1/16S103J RS1/16S103J RS1/16S331J RS1/16S821J RS1/16S821J RS1/16S821J RS1/16S821J RS1/16S223J RS1/16S223J RS1/16S223J RS1/16S223J
		(P450MP, P4500MP) (P450MP, P4500MP) (P450MP, P4500MP) (P450MP, P4500MP)	

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
R 401	RS1/16S681J	R 904	RS1/16S821J	A
R 403	RS1/16S122J	R 905	RS1/16S0R0J	
R 404	RS1/16S681J	R 911	RS1/16S223J	
R 405	RS1/16S681J	R 914	RS1/16S152J	
R 406	RS1/16S681J	R 915	RD1/4PU152J	
R 501	RS1/16S103J	R 916	RS1/16S223J	
R 502	RS1/16S473J	R 921	RD1/4PU1R8J	
R 504	RS1/16S102J	R 931	RS1/16S104J	
R 601	RS1/16S102J	R 932	RS1/16S473J	
R 603	RS1/16S473J	R 933	RS1/16S103J	
R 605	RS1/16S102J	R 934	RS1/16S473J	
R 606	RS1/16S473J	R 935	RS1/16S472J	
R 607	RS1/16S104J	R 961	RS1/16S223J	B
R 612	RS1/16S0R0J	R 962	RS1/16S182J	
R 617 (P3550MP)	RS1/16S104J	R 963	RD1/4PU1R0J	
R 618 (P450MP, P4500MP)	RS1/16S104J	R 965	RS1/16S182J	
R 620	RS1/16S473J	R 971	RS1/16S153J	
R 621	RS1/16S473J	R 972	RS1/16S153J	
R 622	RS1/16S473J	R 973	RS1/16S222J	
R 623	RS1/16S473J	R 981	RD1/4PU102J	
R 624	RS1/16S473J	R 9101	RD1/4PU0R0J	
R 625	RS1/16S473J	R 9403	RD1/4PU0R0J	
R 626	RS1/16S681J	R 9405	RD1/4PU0R0J	
R 627	RS1/16S681J			
R 628	RS1/16S681J	CAPACITORS		
R 640	RS1/16S0R0J	C 101	CKSRYB104K25	C
R 651	RS1/16S102J	C 131	CEJQ1R0M50	
R 652	RS1/16S183J	C 132	CEJQ1R0M50	
R 711	RS1/16S682J	C 133	CKSRYB104K25	
R 718	RS1/16S473J	C 134	CKSRYB104K25	
R 721	RS1/16S0R0J	C 135	CEJQ1R0M50	
R 722	RS1/16S682J	C 136	CEJQ1R0M50	
R 723	RS1/16S682J	C 137	CEJQ1R0M50	
R 724	RS1/16S682J	C 138	CEJQ1R0M50	
R 726	RS1/16S0R0J	C 139	CEJQ470M16	
R 727	RS1/16S821J	C 140	CKSRYB104K25	
R 728	RS1/16S821J	C 141	CCSRCH102J25	
R 734	RS1/16S102J	C 143	CEJQ100M16	
R 738	RS1/16S0R0J	C 145	CKSRYB105K10	
R 739	RS1/16S0R0J	C 146	CKSRYB105K10	D
R 743	RS1/16S221J	C 147	CKSRYB153K50	
R 744	RS1/16S221J	C 148	CKSRYB153K50	
R 745	RS1/16S221J	C 172	CCSRCH102J25	
R 746	RS1/16S221J	C 301	CKSRYB474K10	
R 747	RS1/16S221J	C 302	CKSRYB474K10	
R 748	RS1/16S221J	C 303	CKSRYB474K10	
R 751	RD1/4PU821J	C 304	CKSRYB474K10	
R 752	RD1/4PU221J	C 305	CKSRYB474K10	
R 755	RS1/16S331J	C 306	CKSRYB474K10	
R 757	RD1/4PU0R0J	C 307	CKSRYB474K10	
R 831	RS1/16S222J	C 308	CKSRYB474K10	
R 832	RS1/16S222J	C 309	CEHAR330M10	
R 833	RS1/16S222J	C 310	CCH1486	E
R 834	RS1/16S222J	C 311	CKSRYB104K25	
R 835	RS1/16S473J	C 312	CEHAR100M16	
R 836	RS1/16S473J	C 313	CKSQYB225K10	
R 837	RD1/4PU391J	C 314	CKSQYB225K10	
R 838	RS1/16S102J	C 316	CKSQYB105K16	
R 839	RS1/16S102J	C 351	CEJQ100M16	
R 840	RS1/16S102J	C 352	CEJQ100M16	
R 841	RS1/16S102J	C 353 (P450MP, P4500MP)	CEJQ100M16	
R 845	RS1/16S102J	C 354 (P450MP, P4500MP)	CEJQ100M16	
R 901	RD1/4PU221J	C 401	CKSRYB103K50	
R 902	RS1/16S223J	C 402	CEJQ470M6R3	
R 903	RS1/16S821J	C 403	CKSRYB103K50	

A	====Circuit Symbol and No.====Part Name	Part No.
	C 404	CKSRYB103K50
	C 405	CEJQ101M16
	C 407	CKSYB475K10
	C 602	CKSRYB105K10
	C 603	CCSRCH200J50
	C 604	CCSRCH200J50
	C 605	CEJQ4R7M35
	C 606	CKSRYB104K25
	C 608	CCSRCH101J50
	C 609	CCSRCH470J50
	C 611	CKSRYB104K25
	C 652	CKSRYB105K10
	C 725	CCSRCH102J25
	C 726	CCSRCH102J25
	C 727	CCH1331
	470μF/16V	
	C 751	CKSRYB224K10
	C 752	CKSRYB102K50
	C 753	CEJQ101M16
	C 754	CKSRYB473K50
	C 755	CEJQ101M16
	C 901	CEJQ470M10
	C 902	CKSRYB103K50
	C 903	CKSRYB472K50
	C 904	CCH1331
	C 911	CEJQ221M10
	470μF/16V	
	C 912	CKSRYB103K50
	C 913	CEJQ101M16
	C 921	CEJQ220M10
	C 922	CKSRYB103K50
	C 923	CKSYB475K10
	C 931	CKSRYB104K25
	C 961	CKSRYB473K50

C Unit Number : CWM8635
(P450MP/XM/UC, P4500MP/XM/UC)
CWM8631
(P3550MP/XM/ES)
Unit Name : Keyboard Unit

D	MISCELLANEOUS
IC 1901	IC PD6340A
IC 1902	IC TSOP4840SB1
D 1801	LED (P450MP, P4500MP)
D 1801	LED (P3550MP)
D 1802	LED (P450MP, P4500MP)
D 1802	LED (P3550MP)
D 1803	LED
D 1804	LED
D 1805	LED
D 1806	LED
D 1807	LED
D 1808	LED
D 1809	LED
D 1810	LED
D 1811	LED
D 1812	LED
D 1813	LED
D 1814	LED
D 1901	Diode
D 1902	Diode
X 1901	Ceramic Resonator 4.97MHz
IL 1801	Lamp 14V 40mA
IL 1802	Lamp 14V 40mA
LCD1901	LCD (P450MP, P4500MP)
LCD1901	LCD (P3550MP)

F

====Circuit Symbol and No.====Part Name	Part No.
RESISTORS	
R 1801	RS1/16S151J
R 1802	RS1/16S151J
R 1803	RS1/16S151J
R 1804	RS1/16S181J
R 1805	RS1/16S151J
R 1806	RS1/16S181J
R 1807	RS1/16S181J
R 1808	RS1/16S151J
R 1809	RS1/16S181J
R 1810	RS1/16S181J
R 1811	RS1/16S151J
R 1812	RS1/16S181J
R 1813	RS1/16S181J
R 1814	RS1/16S151J
R 1815	RS1/16S181J
R 1901	RS1/16S121J
R 1902	RS1/16S2R2J
R 1904	RS1/16S222J
R 1905	RS1/16S222J
R 1906	RS1/16S473J
CAPACITORS	
C 1801	CKSRYB104K16
C 1802	CKSRYB104K16
C 1901	CKSRYB224K10
C 1902	CSZS4R7M16

B Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

D Unit Number : CWX2742
Unit Name : CD Core Unit(S10MP3)

MISCELLANEOUS

IC 201	IC	UPD63760GJ
IC 202	IC	MSM51V4265EP-70TS
IC 203	IC	BA033SFP
IC 301	IC	BA5996FM
IC 701	IC	PE5352B
IC 702	IC	TC74VHCT08AFT
IC 703	IC	S-818A33AUC-BGN
Q 101	Transistor	2SB1132
Q 601	Transistor	DTC323TK
Q 602	Transistor	DTC323TK
Q 603	Transistor	2SB709A
Q 701	Transistor	UN2111
D 101	Diode	1SS355
D 201	Diode	1SR154-400
D 601	Diode	MA152WA
L 201	Inductor	CTF1386
L 202	Inductor	CTF1386
L 204	Inductor	CTF1386
L 205	Inductor	CTF1386
L 206	Inductor	CTF1386

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
L 207 Inductor	CTF1386	R 310	RS1/16SS822J	A
L 208 Inductor	CTF1386	R 311	RS1/16SS0R0J	
L 209 Inductor	CTF1386	R 601	RS1/16S101J	
L 211 Inductor	CTF1386	R 602	RS1/16S101J	
L 212 Inductor	CTF1386	R 603	RS1/16S223J	
L 701 Inductor	CTF1386	R 604	RS1/16S223J	
L 702 Inductor	LCYBR22J1608	R 605	RS1/16SS103J	
L 703 Inductor	CTF1386	R 707	RS1/16SS0R0J	
L 704 Inductor	CTF1386	R 708	RS1/16SS102J	
TH 701 Thermistor	CCX1037	R 710	RS1/16SS102J	
X 201 Ceramic Resonator 16.934MHz	CSS1603	R 711	RS1/16SS102J	B
X 701 Ceramic Resonator 16.00MHz	CSS1616	R 712	RS1/16SS102J	
S 901 Switch(HOME)	CSN1051	R 713	RS1/16SS102J	
S 902 Switch(CLAMP)	CSN1051	R 714	RS1/16SS473J	
S 903 Spring Switch(DSCSNS)	CSN1052	R 715	RAB4CQ221J	
S 904 Switch(12EJ)	CSN1051	R 716	RAB4CQ221J	
S 905 Switch(8EJ)	CSN1051	R 717	RAB4CQ221J	
		R 718	RAB4CQ221J	
		R 719	RAB4CQ221J	
		R 720	RS1/16SS471J	
RESISTORS				
R 101	RS1/10S1R5J	R 721	RS1/16SS471J	
R 102	RS1/10S1R5J	R 722	RAB4CQ221J	
R 103	RS1/10S1R5J	R 723	RS1/16SS102J	
R 104	RS1/10S1R5J	R 724	RN1/16SE1302D	
R 105	RS1/10S1R5J	R 725	RS1/16SS222J	
R 201	RS1/16SS102J	R 726	RS1/16SS103J	C
R 202	RS1/16SS333J	R 727	RS1/16SS473J	
R 203	RS1/16SS333J	R 728	RS1/16SS473J	
R 205	RS1/16SS0R0J	R 729	RS1/16SS223J	
R 207	RS1/16SS0R0J	R 730	RS1/16SS473J	
R 209	RS1/16SS0R0J	R 731	RS1/16SS104J	
R 212	RS1/16SS221J	R 732	RS1/16SS104J	
R 213	RS1/16SS1002D	R 733	RS1/16SS104J	
R 214	RS1/16SS1002D	R 737	RAB4CQ473J	
R 215	RS1/16SS6801D	R 739	RAB4CQ473J	
R 216	RS1/16SS6801D	R 740	RS1/16SS473J	
R 217	RS1/16SS1002D	R 742	RS1/16SS104J	
R 218	RS1/16SS1002D	R 744	RS1/16SS104J	
R 219	RS1/16SS1002D	R 745	RS1/16SS473J	
R 220	RS1/16SS1002D	R 746	RS1/16SS104J	
R 221	RS1/16SS103J	R 747	RS1/16SS104J	D
R 222	RS1/16SS103J	R 748	RS1/16SS104J	
R 223	RS1/16SS103J	R 754	RS1/16SS102J	
R 224	RS1/16SS103J	R 755	RS1/16SS102J	
R 225	RS1/16SS103J	R 756	RS1/16SS104J	
R 226	RS1/16SS393J	R 801	RS1/16SS104J	
R 227	RS1/16SS103J	R 802	RS1/16SS473J	
R 228	RS1/16SS182J	R 803	RS1/16SS273J	
R 229	RS1/16SS103J	R 901	RS1/16SS221J	
R 231	RS1/16SS0R0J	R 902	RS1/16SS221J	
R 232	RS1/16SS182J	R 903	RS1/16SS221J	E
R 233	RS1/16SS0R0J	R 904	RS1/16SS221J	
R 237	RS1/16SS104J	R 905	RS1/16SS221J	
R 238	RS1/16SS473J	R 906	RS1/16SS221J	
R 239	RS1/16SS333J			
R 240	RS1/16SS0R0J	CAPACITORS		
R 301	RS1/16SS183J	C 101	CKSSYB104K10	
R 302	RS1/16SS822J	C 102	CKSSYB104K10	
R 303	RS1/16SS0R0J	C 103	CEV101M16	
R 304	RS1/16SS183J	C 104	CEV101M4	
R 305	RS1/16SS822J	C 105	CKSSYB104K10	
R 306	RS1/16SS0R0J	C 106	CCSRCH101J50	
R 307	RS1/16SS183J	C 108	CKSSYB104K10	
R 308	RS1/16SS822J	C 109	CEV100M16	
R 309	RS1/16SS183J	C 201	CKSSYB471K50	
		C 202	CKSSYB104K10	


====Circuit Symbol and No.==Part Name		Part No.
A	C 203	CKSSYB104K10
	C 204	CEV220M6R3
	C 205	CKSSYB103K16
	C 206	CKSSYB103K16
	C 207	CEV221M4
	C 208	CKSSYB104K10
	C 209	CKSSYB104K10
	C 210	CKSSYB104K10
	C 211	CKSSYB104K10
	C 216	CKSSYB332K50
B	C 217	CKSSYB104K10
	C 218	CKSSYB223K16
	C 219	CKSSYB104K10
	C 220	CKSSYB103K16
	C 221	CKSSYB104K10
	C 222	CCSSCH270J50
	C 223	CCSSCJ3R0C50
	C 224	CKSSYB104K10
	C 225	CKSSYB103K16
	C 226	CCSSCH680J50
	C 227	CCSSCH470J50
	C 228	CKSSYB682K25
	C 230	CKSSYB104K10
	C 232	CKSSYB104K10
	C 233 47μF/6.3V	CCH1436
C	C 234	CEV221M4
	C 235	CKSRYB224K16
	C 237	CKSSYB104K10
	C 238	CKSSYB104K10
	C 239	CCSSCH9R0D50
	C 242	CKSSYB104K10
	C 243	CKSSYB104K10
	C 245	CKSSYB104K10
	C 246	CKSSYB104K10
	C 301	CKSSYB331K50
D	C 302	CKSSYB331K50
	C 303	CKSSYB472K25
	C 304	CKSSYB472K25
	C 305	CEV101M16
	C 306	CKSRYB224K16
	C 601	CCSRCH102J50
	C 602	CCSRCH102J50
	C 603 4.7μF/25V	CCH1508
	C 604 4.7μF/25V	CCH1508
	C 701	CKSSYB104K10
	C 702	CKSSYB471K50
	C 703	CKSSYB103K16
	C 704	CEV1R0M50
	C 705	CKSSYB104K10
	C 706	CKSSYB471K50
E	C 707	CKSSYB104K10
	C 708	CKSSYB104K10
	C 709	CKSSYB103K16
	C 710	CKSSYB104K10
	C 711 10μF/10V	CCH1349
	C 712	CKSRYB224K16
	C 713	CKSSYB104K10
	C 714	CKSSYB104K10
	C 715	CKSSYB103K16
	C 716	CKSSYB103K16
	C 901	CKSSYB104K10
	C 903	CCSRCH101J50

Miscellaneous Parts List

F	M	1	Pickup Unit(Service)(P10)	CXX1641
	M	2	Motor Unit(SPINDLE)	CXB6007
	M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933

6. ADJUSTMENT

6.1 JIG CONNECTION DIAGRAM

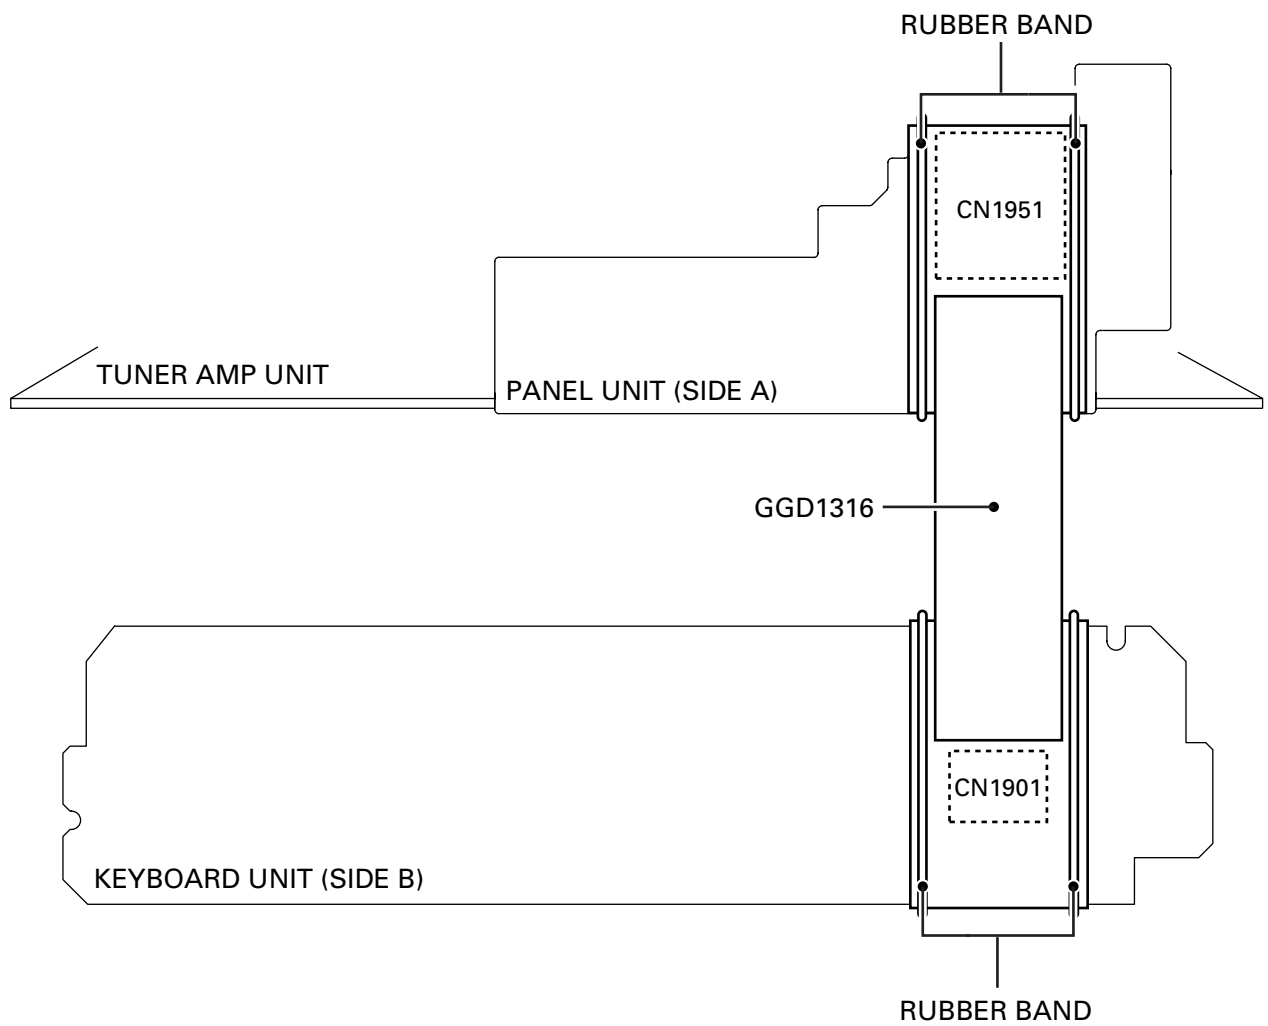

6.2 CD ADJUSTMENT

1) Cautions on adjustments

• In this product the single voltage (3.3V) is used for the regulator. The reference voltage is the REFO1 (1.65V) instead of the GND.

If you should mistakenly short the REFO1 with the GND during adjustment, accurate voltage will not be obtained, and the servo's misoperation will apply excessive shock to the pickup. To avoid such problems:

a. Do not mix up the REFO1 with the GND when connecting the (-) probe of measuring instruments. Especially on an oscilloscope, avoid connecting the (-) probe for CH1 to the GND.

b. In many cases, measuring instruments have the same potential as that for the (-) probe. Be sure to set the measuring instruments to the floating state.

c. If you have mistakenly connected the REFO1 to the GND, turn off the regulator or the power immediately.

• Before mounting and removing filters or leads for adjustment, be sure to turn off the regulator.

• For stable circuit operation, keep the mechanism operating for about one minute or more after the regulator is turned on.

• In the test mode, any software protections will not work. Avoid applying any mechanical or electrical shock to the mechanism during adjustment.

• The RFI and RFO signals with a wide frequency range are easy to oscillate. When observing the signals, insert a resistor of 1k ohms in series.

• The load and eject operation is not guaranteed with the mechanism upside down. If the mechanism is blocked due to mistaken eject operation, reset the product or turn off and on the ACC to restore it.

2) Test mode

This mode is used to adjust the CD mechanism module.

• To enter the test mode.

While pressing the 4 and 6 keys at the same time, reset.

• To exit from the test mode.

Turn off the ACC and back up.

Notes:

a. During ejection, do not press any other keys than the EJECT key until the loaded disc is ejected.


b. If you have pressed the (→) key or (←) key during focus search, turn off the power immediately to protect the actuator from damage caused by the lens stuck.

c. For the TR jump modes except 100TR, the track jump operation will continue even if the key is released.

d. For the CRG move and 100TR jump modes, the tracking loop will be closed at the same time when the key is released.

e. When the power is turned off and on, the jump mode is reset to the single TR (91), the RF amp gain is set to 0dB, and the auto-adjustment values are reset to the default settings.

Flow Chart

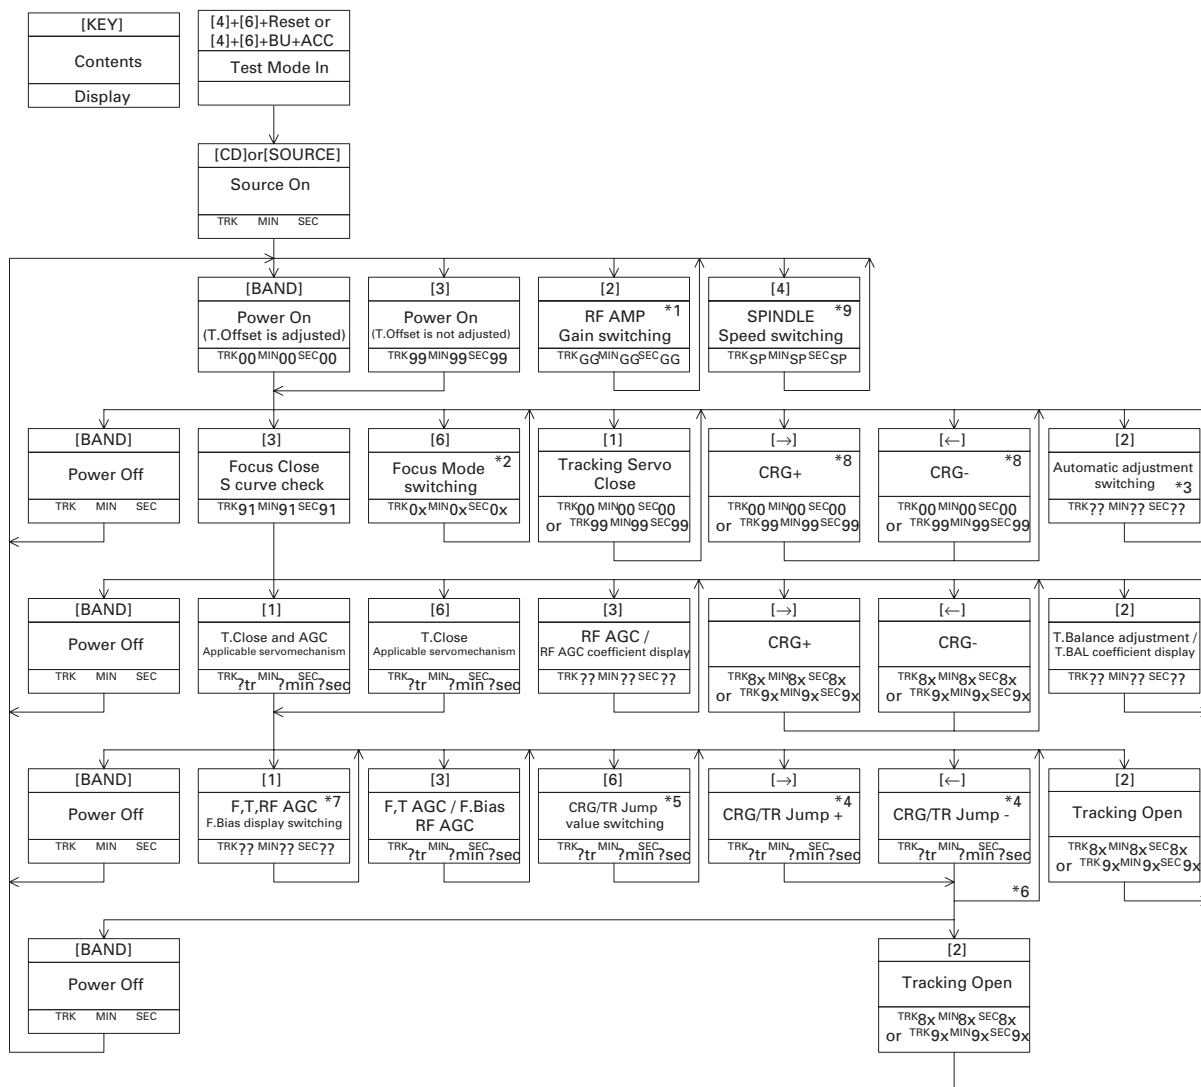

- *1) TYP → -6dB → -12dB
TRK MIN SEC → TRK 06 MIN 06 SEC 06 → TRK 12 MIN 12 SEC 12
- *2) Focus Close → S.Curve check setting → F.EQ measurement setting
TRK 00 MIN 00 SEC 00 → TRK 01 MIN 01 SEC 01 → TRK 02 MIN 02 SEC 02
(TRK 99 MIN 99 SEC 99)
- *3) F.Offset Display → T.Offset Display → Switch to the order of the original display
- *4) 1TR / 32TR / 100TR
- *5) Single TR → 32TR → 100TR → CRG Move
9x(8x) : 91(81) 92(82) 93(83) 94(84)
- *6) Only at the time of CRG move, 100TR jump
- *7) TRK/MIN/SEC → F.AGC → T.AGC → F Bias → RF AGC

*8) CRG motor voltage = 2[V]

*9) Applicability : A, B, C, D, E, F
TYP(1X) → 2X → 1X
TRK MIN SEC → TRK 22 MIN 22 SEC 22 → TRK 11 MIN 11 SEC 11
As for the double speed (2x), audio output cannot be supported

Applicability : G
TYP(2X) → 1X → 2X
TRK MIN SEC → TRK 11 MIN 11 SEC 11 → TRK 22 MIN 22 SEC 22

[Key]	Operation
[BAND]	Power On / Off
[→]	CRG + / TR Jump + (Direction of the external surface)
[←]	CRG - / TR Jump - (Direction of the internal surface)
[1]	U.CLS and AGC and Applicable servomechanism / AGC, AGC display setting
[2]	RF Gain switching / Offset adjustment display / T.Balance adjustment / T.Open
[3]	Close, S.Curve / Rough Servo and RF AGC / F, T, RF AGC
[4]	SPDL 1X / 2X switching As for the double speed (2x), audio output cannot be supported.
[5]	Error Rate measurement 1st - ON : ERR count Beginning (30Sec) 2nd - ON : BER display data [%]
[6]	F.Mode switching / Tracking Close / CRG • TR Jump switching

6.3 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT



• Note :

The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

• Purpose :


To check that the grating is within an acceptable range when the PU unit is changed.

• Symptoms of Mal-adjustment :

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

• Method :

- | | |
|-----------------------|----------------------------|
| • Measuring Equipment | • Oscilloscope, Two L.P.F. |
| • Measuring Points | • E, F, REFO1 |
| • Disc | • ABEX TCD-782 |
| • Mode | • TEST MODE |

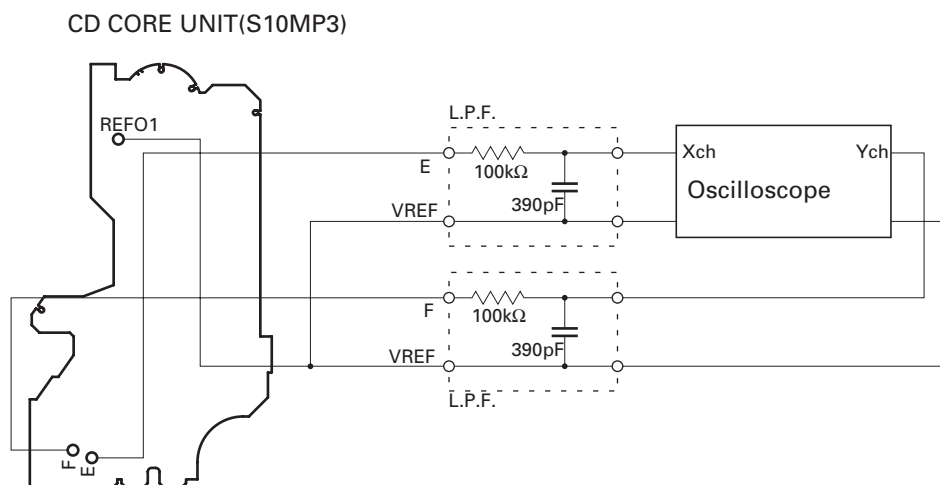

• Checking Procedure

1. In test mode, load the disc and switch the 3V regulator on.
2. Using the → and ← buttons, move the PU unit to the innermost track.
3. Press key 3 to close focus, the display should read "91". Press key 2 to implement the tracking balance adjustment the display should now read "81". Press key 3. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75°. Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than 75° try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• Note

Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• Hint


Reloading the disc changes the clamp position and may decrease the "wobble".

Grating waveform


Ech → Xch 20mV/div, AC

Fch → Ych 20mV/div, AC


0°

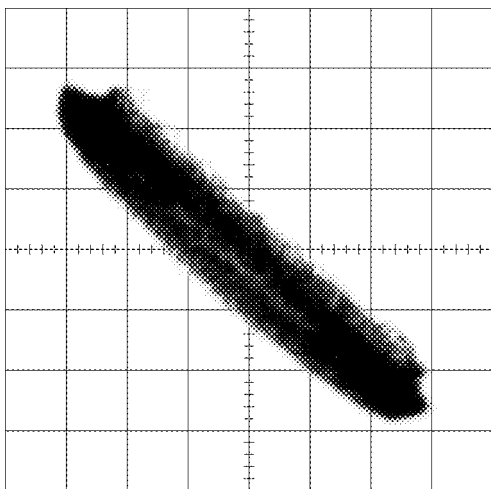


30°

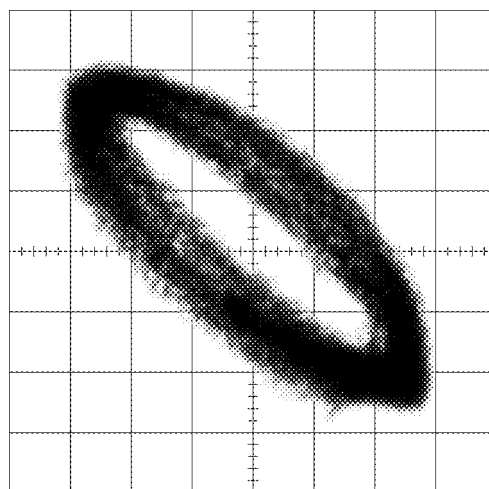


45°

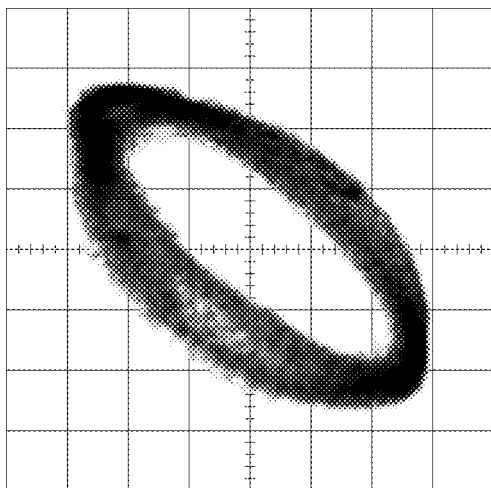


60°

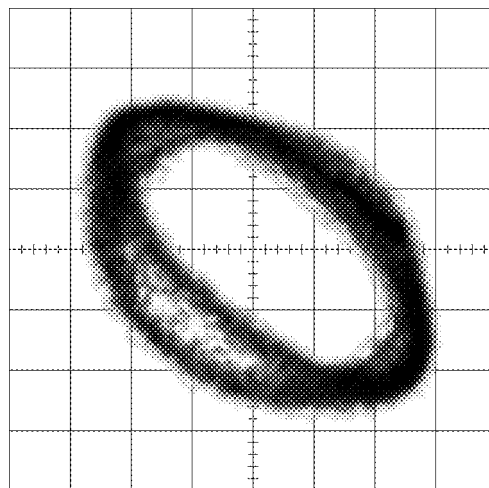

75°

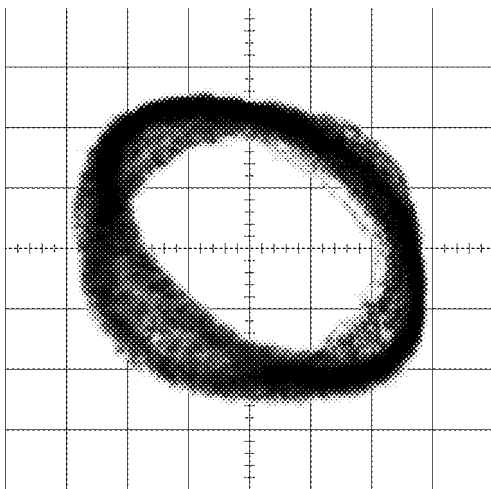

90°

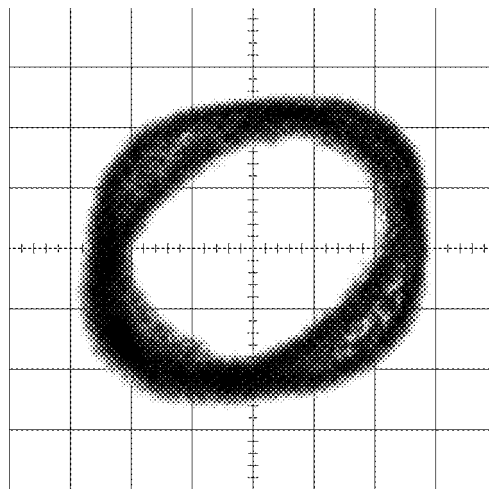

6.4 ERROR MODE

● Error Messages

Error is displayed with number for Error cause when CD is inoperative or stops with Error during operation. The purpose is to reduce nonsense calls from users as well as to assist all related analysis and repair for defects at service station.

(1) Basic Display Method

1) When CSMOD (CD mode area for system) is SERRORM, Error code will be written in DMIN (minutes area for display), DSEC (seconds area for display). The same data shall be written in DMIN and DSEC. DTNO is blank as usual.

2) Display Example of Head Unit

The following is about LCD display ability. xx is Error number.

8 digits	6 digits	4 digits
ERROR-xx	ERR-xx	E-xx
	OR	
	Err-xx	

*) In case of OEM, Error display will follow the specification defined by OEM makers.

(2) Error Code List

No.	Classification	Contents	Details • Cause
10	Electricity	Carriage Home NG	CRG can't move to the inner. CRG can't move from the inner. → HOME SW failure, CRG movement failure.
11	Electricity	Focus Search NG	Focus can't be caught. → Back of Disc / Severe dirt and vibration.
12	Electricity	Spindle Lock NG Subcode NG RF-amp NG	Not spindle, lock. Wrong subcode (can't read). → Defective Spindle. Scratch and dirt on Disc. Intense vibration. The appropriate gain of the RF amp cannot be obtained. → Defective spindle. → Scratched or dirty disc. Severe vibration. Abnormal CD signals. → Blanc CD-R disc. Disc inserted upside down.
17	Electricity	Setup NG	AGC protection doesn't work, out of Focus soon. → Scratch on Disc/Severe dirt and vibration.
22	Disc	Impossible to play	There is no playable MP3 or WMA file present in a disc. → No MP3 or WMA file exists in a CD-ROM disc inserted.
23	Disc	File Format NG	Contents are stored in an incompatible file format. → The contents in a CD-ROM disc inserted are recorded in a file format other than ISO9660 Level-1 and 2.
30	Electricity	Search Time Out	Can't reach the target address. → Defective CRG/tracking, or scratch on Disc.
44	Disc	Impossible to play	There is no playable TRK No. present in a disc. → All TRK Nos. In a disc inserted are specified as a track which should be skipped, in the track skip information.
50	Mecha	Disc Load / Eject NG	Disc loading/ejection cannot be complete. → Foreign objects entered into the mechanism. Disc caught in between during loading/ejection.
A0	System	Power NG	Power supply (VD) isn't connected to the ground. → Defective SW transistor. Abnormal power (failed connector)

Note : Error doesn't display in mechanism only. (CD off causes mechanism off)

If TOC can't be read, error wouldn't occur, but mechanism still continues its operation.

When newly design head unit, be sure to apply as the display examples above.

The upper digits of error code is mainly classified by 3 kinds as follows:

1x: Setup related error, 3x: Search related error, Ax: Other errors.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● Removing the Case (not shown)

1. Remove the Case.

● Removing the CD Mechanism Module (Fig.1)

1 Remove the four screws.

Disconnect the connector and then remove the CD Mechanism Module.

● Removing the Grille Assy (Fig.1)

2 Remove the two screws and then remove the Grille Assy.

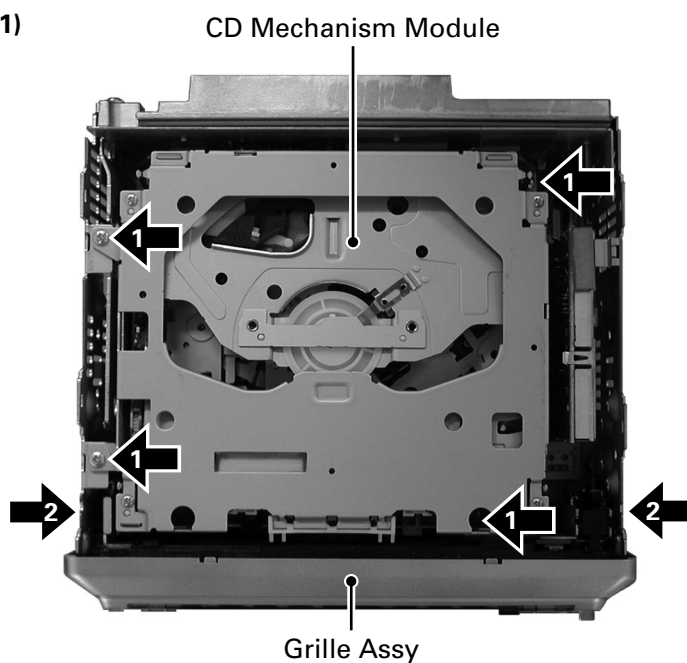


Fig.1

● Removing the Tuner Amp Unit (Fig.2)

1 Remove the screw.

2 Remove the three screws.

3 Straight the tabs at three locations indicated.

4 Remove the screw and then remove the Tuner Amp Unit.


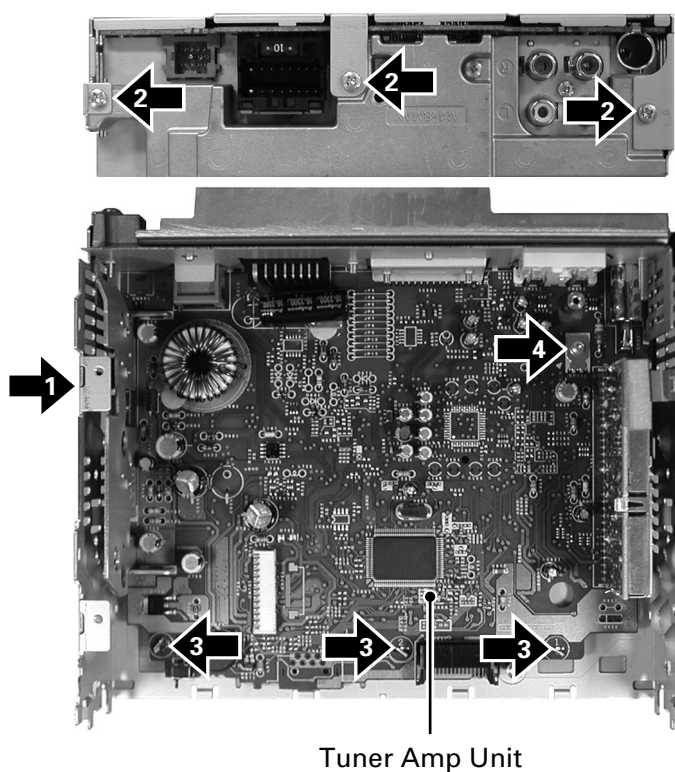


Fig.2

● How to hold the Mechanism Unit

1. Hold the top and bottom frame.
2. Do not squeeze top frame's front portion too tight, because it is fragile.

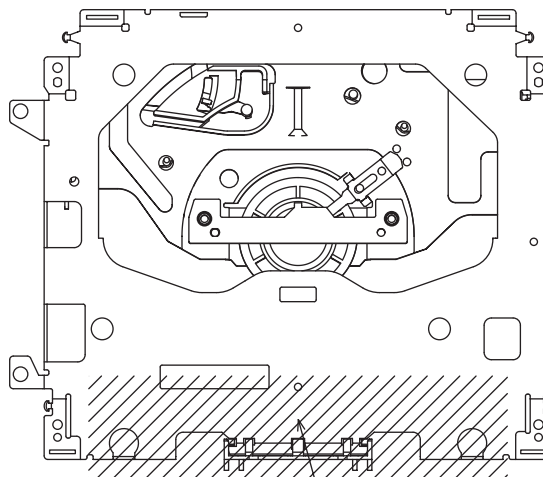


Do not squeeze.

● Removing the Upper and Lower Frames

1. With a disc clamped, remove the four springs (A), the two springs (B), the two springs (C), and the four screws.
2. To remove the upper frame, open it on the fulcrum A.
3. While lifting the carriage mechanism, remove the three dampers.
4. With the frames removed, insert the connectors coming from the main unit and eject the disc.


Caution: Before installing the carriage mechanism in the frames, be sure to apply some alcohol to the dampers and set the mechanism to the clamp mode.

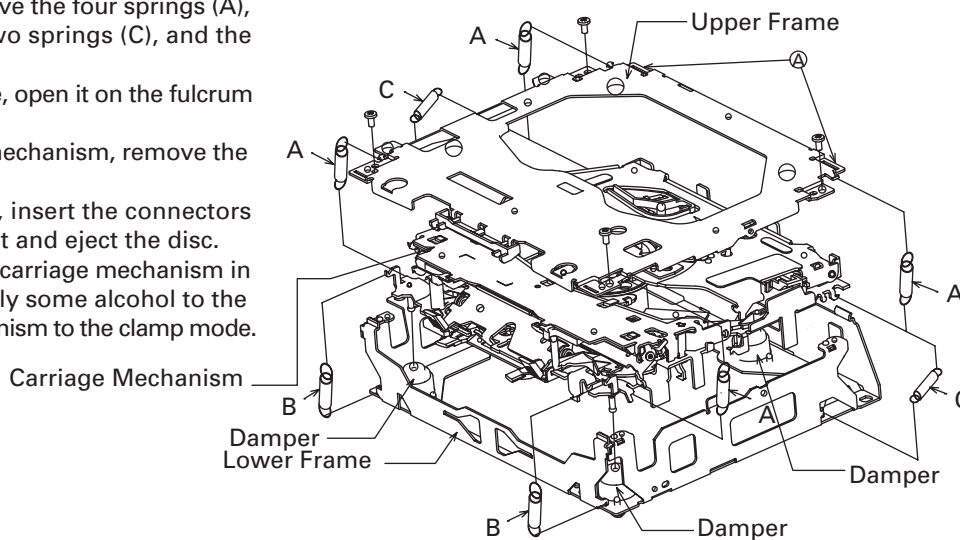

● Removing the Pickup Unit


1. Set the mechanism to the clamp mode.
2. Remove the lead wires from the inner holder.
3. Remove the two washers, styling holder, change arm, and pickup lock arm.
4. While releasing from the hook of the inner holder, lift the end of the feed screw.

Caution: In assembling, move the planet gear to the load/eject position before setting the feed screw in the inner holder.

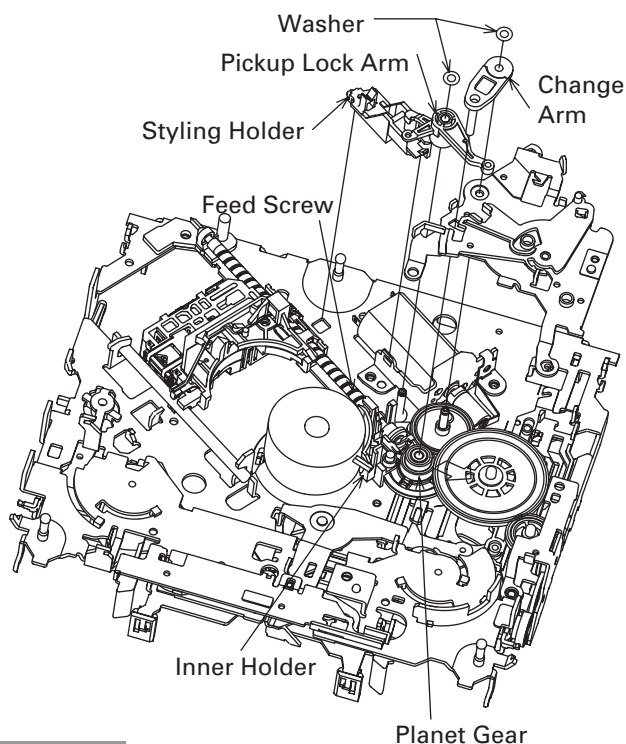

7.1.2 CONNECTOR FUNCTION DESCRIPTION

● DEH-P450MP/XM/UC, P4500MP/XM/UC

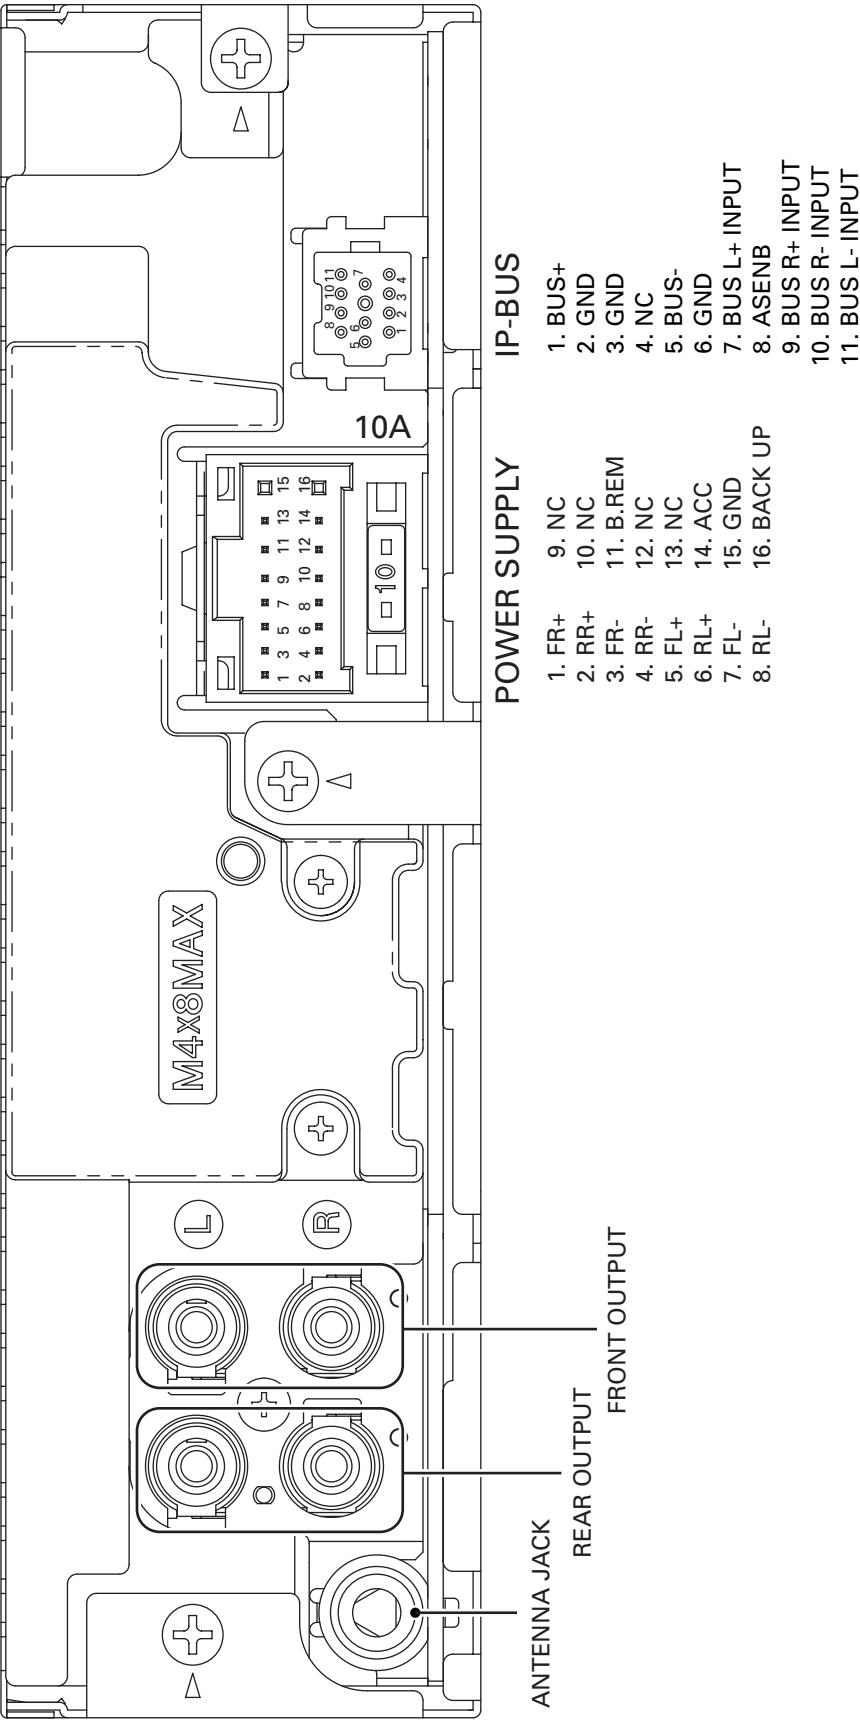

● DEH-P3550MP/XM/ES

A


B

C

D

E

F

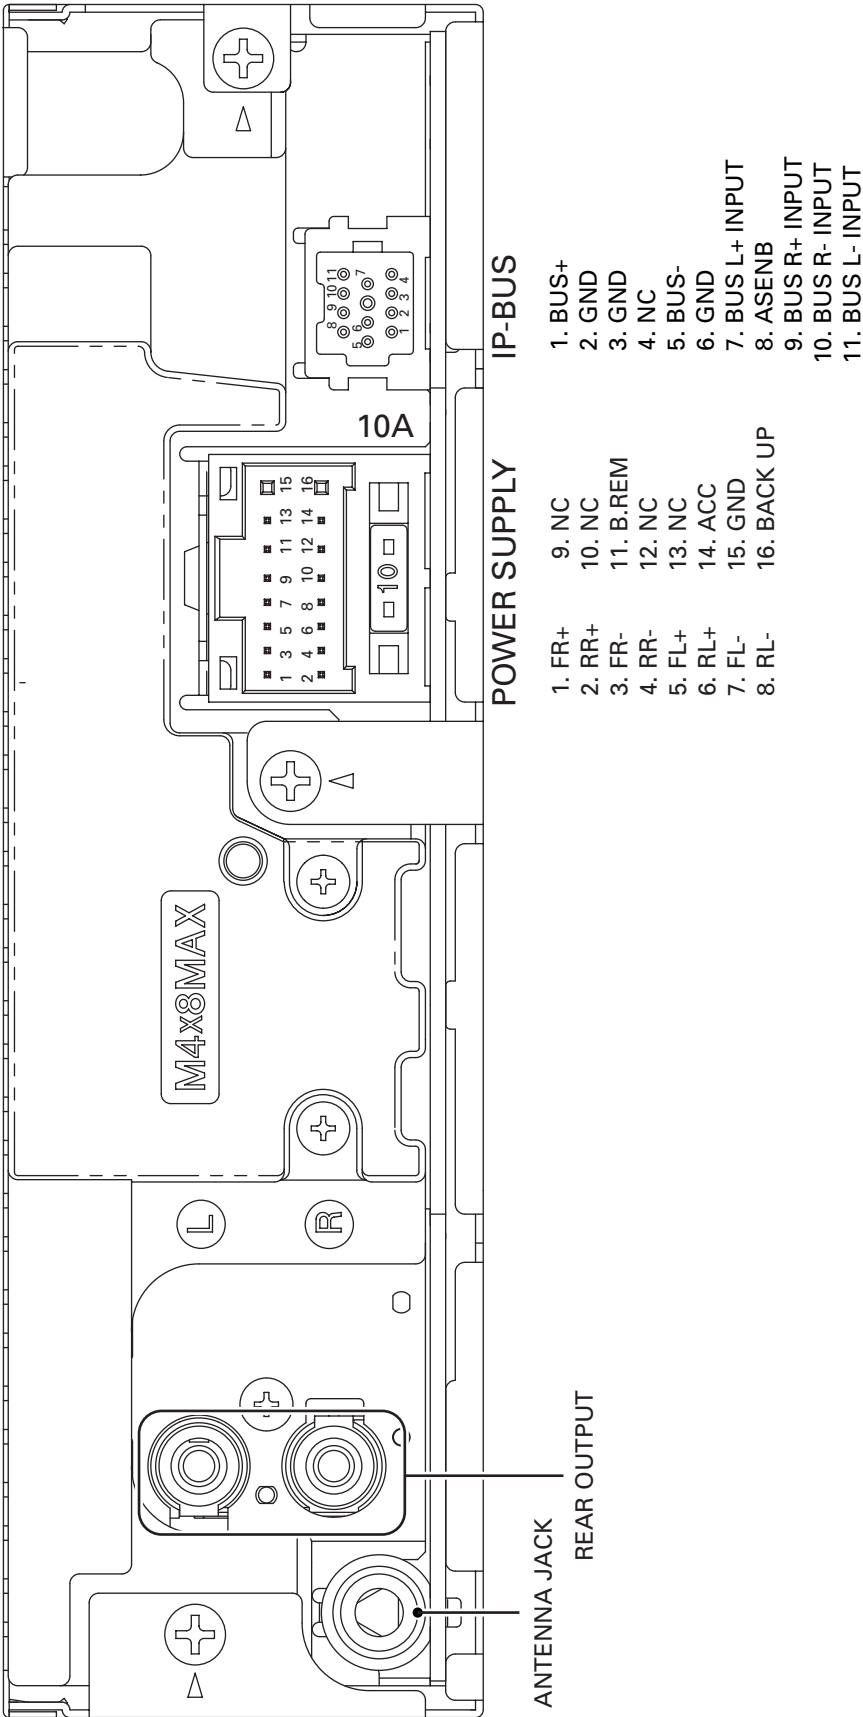

7.2 PARTS

7.2.1 IC

● Pin Functions(PE5393A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	SWVDD	O	C	Grille : Chip enable output
2-4	NC			Not used
5	TESTIN	I		Test program mode input
6	LCDPW	O	C	LCD back light power supply control output
7	TELIN	I		Telephone mute input
8	EJECTIN	I		Eject sense input
9	FLPILM	I		Flap illumination input
10	DALMON	I/O	C	For consumption low-current
11	RESET	I		Reset input
12	XT2			Not used
13	XT1	I		Clock connection pin
14	VSS			GND
15	X2			Crystal oscillator connection pin
16	X1	I		Crystal oscillator connection pin
17	REGOFF	I		Regulator operation specification signal
18	REGC			Capacitor for regulator connect pin
19	VDD			Power supply
20	ILMPW	O		Illumination power supply control output
21	SYSPW	O	C	System power control output
22	ADPW	O	C	A/D converter power supply control output
23	NC			Not used
24	IPPW	O	C	Power supply control output for IP BUS interface IC
25	NC			Not used
26	ROMDATA	O	C	ROM correction data output
27	ROMCLK	O	C	ROM correction clock output
28	ROMCS	O		ROM correction chip select output
29-31	NC			Not used
32	TUNPCE2	O		PLL chip enable output2
33	VST	O		E.VOL : Strobe output
34	VCK	O		E.VOL : Clock output
35	VDT	O		E.VOL : Data output
36	ANTPW	O		Antenna power output
37	MUTE	O	C	System mute output
38, 39	NC			Not used
40	VSS			GND
41	VDD			Power supply
42	RDS57K	I		57kHz count pulse input
43	DRST	O	C	RDS : Decoder reset output
44	RDSLK	I	C	RDS : Decoder clock input
45	RDT	O	C	RDS : Decoder data input
46	DORAON	O	C	TUNER : 3V power supply
47-57	NC			Not used
58	STRKEY2	I		Steering remote controller input
59	CDLOEJ	O	C	CD : Load Moter Load/Eject output
60	CLCONT	I		CD : Driver input switch output
61	CONT	O	C	CD : Servo driver power supply control output
62	PCL	O	C	Clock adjustment
63	CLAMPSW	I		Clamp SW input
64	VDCONT	O	C	CD : VD power control output
65	X \overline SCK(TSCK)	O		CD LSI clock output
66	XSI(TSI)	I		CD LSI data input
67	XSO(TSO)	O	C	CD LSI data output
68	XAO	O	C	CD LSI command/data control output
69	XRST	O	C	CD : LSI reset control output
70	XSTB	O		CD LSI strobe output
71	ASENBO	O		IP-BUS : Slave power supply control output
72	EMUTE	O		E.VOL : Mute control output
73	TEST			GND
74	SL	I	C	TUNER : Signal level input
75	STRKEY1	I	C	Steering remote controller input


A

Pin No.	Pin Name	I/O	Format	Function and Operation
76	MODELIN	I		Model select input
77	CSENS	I		Flap close sense input
78	NC			Not used
79	DSCSNS	I		CD : Disc insert sense input
80	VDSNS	I		CD : VD voltage sense input
81	TEMP	I		CD : Temperature sense input
82	AVDD			A/D converter power supply terminal
83	AVREF			A/D converter reference voltage terminal
84	AVSS			GND
85	RX	I		IP-BUS : Data input
86	TX	O		IP-BUS : Data output
87	NMI			GND
88	LDET	I		PLL lock sense input
89	RCK	I		RDS : Clock input
90	DSENS	I		Grille detach sense input
91	PACK	I		PACK input
92	ASENS	I		ACC power sense input
93	BSENS	I		Back up power sense input
94	TUNPDI	I		PLL IC data input
95	KYDT	I		Grille data input
96	DPDT	O	C	Grille data output
97	TUNPCK	O		PLL clock output
98	TUNPDO	O	C	PLL data output
99	TUNPCE	O	C	PLL chip enable output
100	PEE	O	C	Beep tone output

B

C

* PE5393A

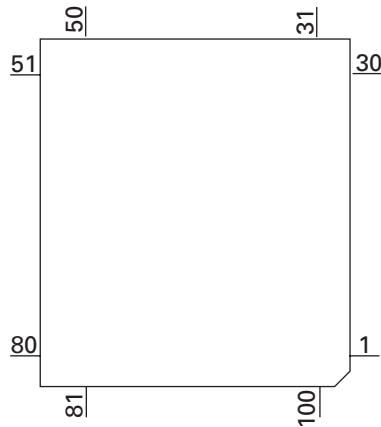

D


Format	Meaning
C	CMOS


IC's marked by * are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

E

F

BD4834G

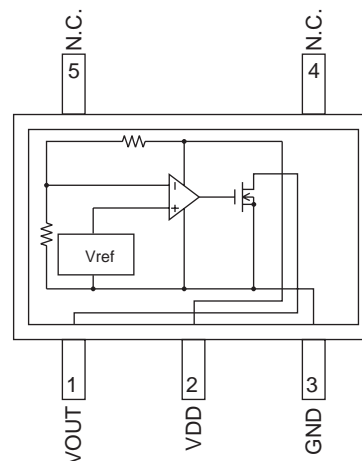


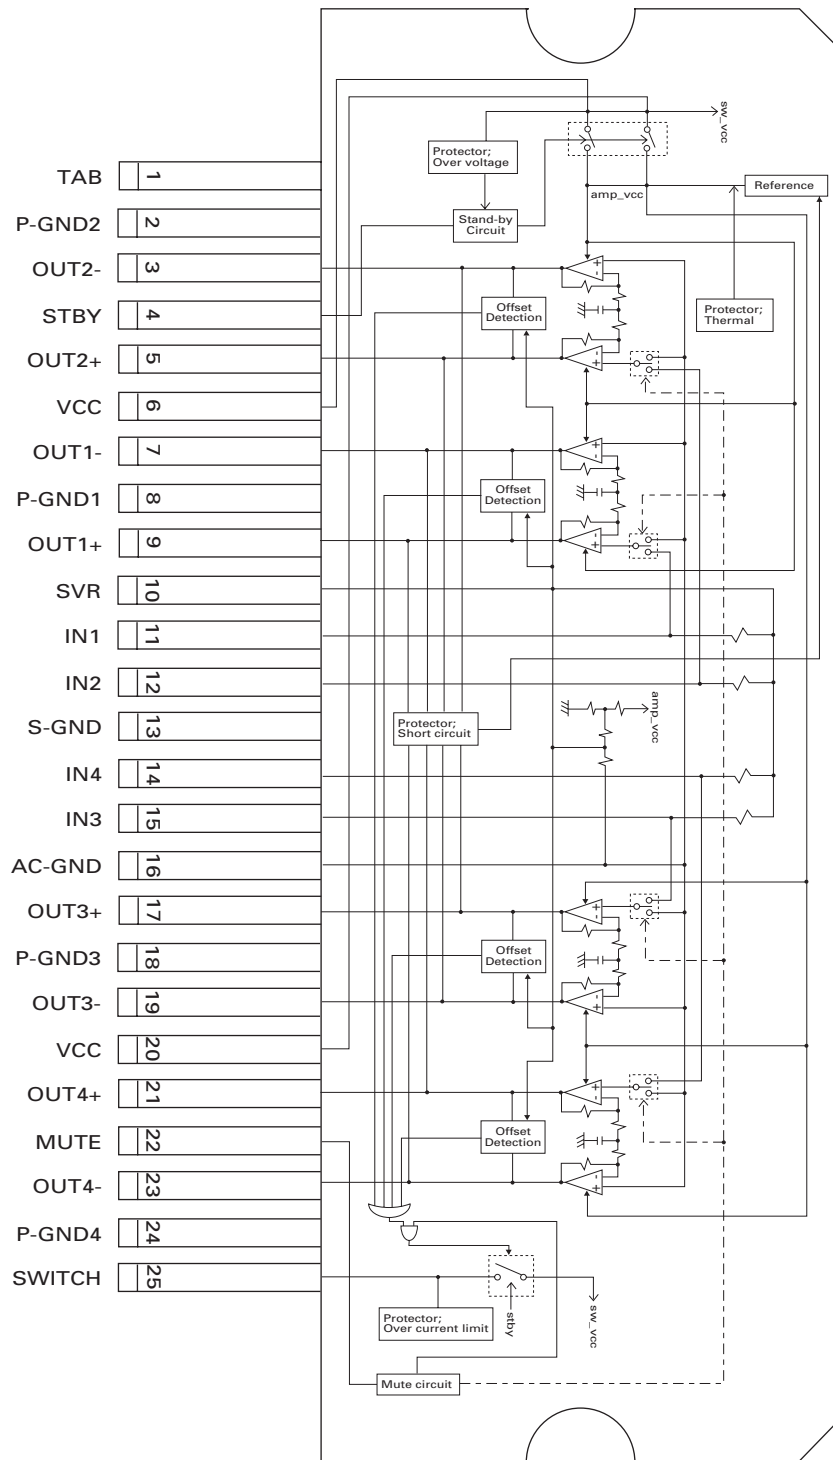


● Pin Functions (PD6340A)

Pin No.	Pin Name	I/O	Function and Operation
1-5	SEG4-0	O	LCD segment output
6-9	COM3-0	O	LCD common output
10	VLCD		LCD drive power supply
11-14	KST3-0	O	Key strobe output
15,16	KDT0,1	I	Key data input (analogue input)
17	REM	I	Remote control reception input
18	DPDT	I	Display data input
19	NC		Not used
20	KYDT	O	Key data output
21	MODA		GND
22	X0		Crystal oscillator connection pin
23	X1		Crystal oscillator connection pin
24	VSS		GND
25,26	KDT2,3	I	Key data input
27	NC		Not used
28	KST4	O	Key strobe output
29-32	NC		Not used
33-55	SEG35-13	O	LCD segment output
56	VDD		Power supply
57-64	SEG12-5	O	LCD segment output

*PD6340A

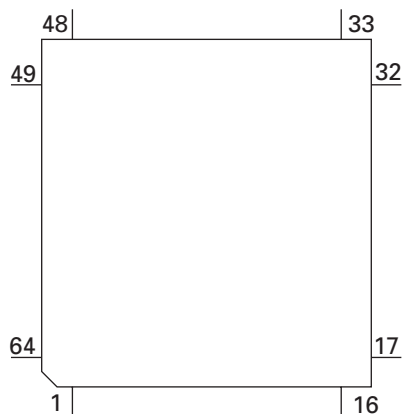

TSOP4840SB1

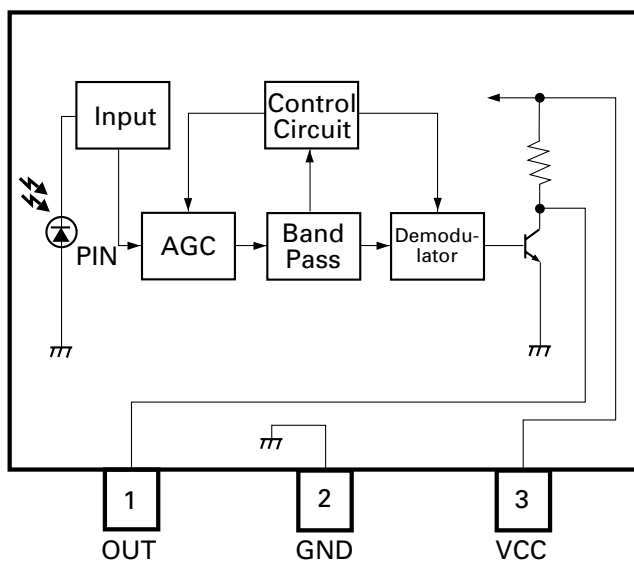


Pin Functions (UPD63760GJ)

Pin No.	Pin Name	I/O	Function and Operation
1	R.GND		GND for DRAM I/F
2	RST	I	Input of reset
3-7	AB12-8	I	Address bus 12-8 from the microcomputer
8-15	AD7-0	I/O	Address/data bus 7-0 to the microcomputer
16	CS	I	Chip selection
17	ASTB	I	Address strobe
18	READ	I	Control signals (read)
19	WRITE	I	Control signals (write)
20	WAIT	O	Control signals (wait)
21	INTQ		Interruption signals to the external microcomputer
22	IFMODE	I	Switching between the data buses (16bit/8bit)
23	D.VDD		Power supply for digital circuits
24	XTALEN1	I	Permission to oscillate 16.9344MHz
25	XTALEN2	I	Permission to oscillate 24.576MHz
26	DA.VDD		Power supply for DAC
27	ROUT	O	Output of audio for the right channel
28	DA.GND		GND for DAC
29	R+	O	Output of the right channel audio PWM
30	R-	O	Output of the right channel audio PWM
31	REGC		Connected to the capacitor for band gap
32	L-	O	Output of the left channel audio PWM
33	L+	O	Output of the left channel audio PWM
34	DA.GND		GND for DAC
35	LOUT	O	Output of audio for the left channel
36	DA.VDD		Power supply for DAC
37	X.VDD		Power supply for the crystal oscillator
38	XTAL1		Connected to the crystal oscillator (16.9344MHz)
39	XTAL1		Connected to the crystal oscillator (16.9344MHz)
40, 41	X.GND		Ground for the crystal oscillator
42	XTAL2		Connected to the crystal oscillator (24.576MHz)
43	XTAL2		Connected to the crystal oscillator (24.576MHz)
44	X.VDD		Power supply for the crystal oscillator
45	D.GND		GND for digital circuits
46	DIN	I	Input of audio data
47	DOUT	O	Output of audio data
48	SCKIN	I	Clock input for audio data
49	SCKO	O	Clock output for audio data
50	LRCKIN	I	Input of LRCK for audio data
51	LRCK	O	Output LRCK for audio data
52	TESTX	O	Output for tests
53	RFOK	O	Output of RFOK
54	C16M	O	Output of 16.9344MHz
55	TESTEN	I	Connected to GND
56	TEST4	I	Connected to GND
57	D.VDD		Power supply for digital circuits
58	RFCK/HOLD	O	Output of RFCK/HOLD signal
59	WFCK/MIRR	O	Output of WFCK/MIRR signal
60	PLCK	O	Output of PLCK
61	LOCK	O	Output of LOCK
62	C1D1	O	Information on error correction
63	C1D2	O	Information on error correction
64	C2D1(RMUTE)	O	Information on error correction (mute for Rch)
65	C2D2(LMUTE)	O	Information on error correction (mute for Lch)
66	C2D3	O	Information on error correction
67	D.GND		Ground for digital circuits
68	RAS	O	Output of DRAM RAS
69	CAS0	O	Output of DRAM Lower CAS
70	CAS1	O	Output of DRAM Upper CAS
71	WE	O	Output of DRAM WE
72	OE	O	Output of DRAM OE

Pin No.	Pin Name	I/O	Function and Operation
73-88	RDB0-15	I/O	Input/output of DRAM Data0-15
89	D.GND		Ground for digital circuits
90-99	RA0-9	O	Output of DRAM Address0-9
100	D.VDD		Power supply for digital circuits
101-104	TEST0-3	I	Connected to GND
105	FD	O	Output of focus drive PWM
106	TD	O	Output of tracking drive PWM
107	SD	O	Output of thread drive PWM
108	MD	O	Output of spindle drive PWM
109	A.VDD		Power supply for the analog system
110	ATEST	O	Analog tests
111	EFM	O	Output of EFM signals
112	ASY	I	Input of asymmetry
113	C3T		Connection to the capacitor for detecting 3T
114	A.GND		Ground for the analog system
115	RFI	I	Input of RF
116	AGCO	O	Output of RF
117	AGCI	I	Input of AGC
118	RFO	O	Output of RF(AGC)
119, 120	EQ2, 1		Equalizer 2, 1
121	RF2-	I	Reversal input of RF2
122	RF-	I	Reversal input of RF
123	A.GND		Ground for the analog system
124	A	I	Input of A
125	C	I	Input of C
126	B	I	Input of B
127	D	I	Input of D
128	F	I	Input of F
129	E	I	Input of E
130	A.VDD		Power supply for the analog system
131	REFOUT	O	Output of reference voltage
132	REFC		Connected to the capacitor for output of REFOUT
133	FE-	I	Reversal input of FE
134	FEO	O	Output of FE
135	TE-	I	Reversal input of TE
136	TEO	O	Output of TE
137	TE2	O	TE2
138	TEC	I	TEC
139	A.GND		Ground for the analog system
140	LDREGO	O	Output of REG voltage for APC
141	PD	I	Input of PD
142	LD	O	Output of LD
143	PN	I	Assignment of pickup polarity
144	A.VDD		Power supply for the analog system

* UPD63760GJ

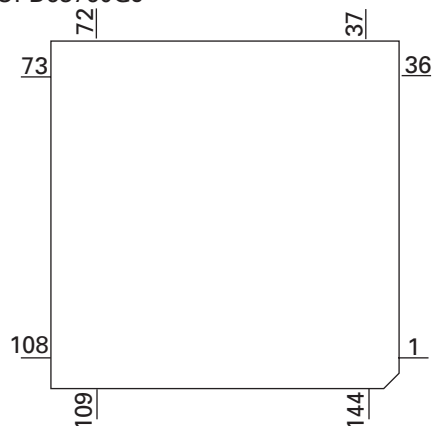


Pin Functions (PE5352B)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	BSO	O	C	P-Bus serial data output
2	BSCK	I/O	/C	P-Bus serial clock input/output
3, 4	DFS1, 2	O	C	DA I/F IC sampling frequency setting output 1, 2
5	DCKS	O	C	DA I/F IC clock subharmonic number selection output
6	EVDD			E power supply Positive power supply
7	EVSS			E power supply GND
8	DSPOK	I		DSP microcomputer initialization OK input
9	DCOPY	O	C	DA I/F IC copy flag setting output
10	CRST	O	C	Compression IC reset control output
11, 12	NC			Not used
13	EMPH	O	C	Emphasis information output
14	EMPH	O	C	Emphasis information output
15	DSPMUTE	O	C	DOUT mute output
16	DSET	O	C	Disc set indicator lighting output
17	ADENA	O	C	A/D reference voltage supply control output
18	IC/VPP			IC : VSS direct connection/VPP : Pull-down
19	BRXEN	I/O	/C	P-Bus reception is possible
20	BSRQ	I/O	/C	P-Bus service request demand
21	XTALEN1	O	C	CD LSI 16.9344MHz oscillation permission output
22	XTALEN2	O	C	CD LSI 24.576MHz oscillation permission output
23	XRST	O	C	CD LSI reset control output
24	VDCONT	O	C	VD power supply control output
25	CD3VON	O	C	CD +3.3V power supply control output
26	CONT	O	C	Servo driver power supply control output
27	XWAIT	I		CD LSI wait control signal input
28	LOEJ	O	C	The direction change output of LOAD/EJECT
29	CLCONT	O	C	Driver input change output
30	CDMUTE	O	C	CD mute control output
31	RESET	I		System reset input
32	XT1	I		Connected to the oscillator for subclock (connected to VSS via the resistor)
33	XT2			Connected to the oscillator for subclock (Open)
34	REGC			Connected to the capacity stabilizing output of the regulator (an electrolytic capacitor of about 1μF)
35	X2			Oscillator connection for mainclock
36	X1	I		Oscillator connection for mainclock
37	VSS			GND
38	VDD			Positive power supply (5V)
39	CLKOUT	O	C	Internal system clock output (Open)
40	XWRITE	O		CD LSI write control signal output
41	UBEN	O		Not used (Open)
42	WR/W	O		WMA decoder Read/Write control signal output
43	XREAD	O		CD LSI read control signal output
44	XASTB	O		CD LSI address strobe output
45	LOCK	I		Spindle lock input
46	WRST	O	C	WMA decoder reset control output
47-54	AD0-7	I/O	/C	Address/Data bus 0-7
55	BVDD			B power supply Positive power supply (3.3V)
56	BVSS			B power supply GND
57-64	AD8-15	I/O	/C	Address/Data bus 8-15
65	XCS	O	C	CD LSI chip selection output
66	WCS	O	C	WMA decoder chip selection output
67, 68	DBBWRDY0, 1	I		Input of write-ready flag with WMA decoder DBBI0, 1
69, 70	DBBRRDY0, 1	I		Input of read-ready flag with WMA decoder DBBO0, 1
71	AVDD			A power supply Positive power supply (5V)
72	AVSS			A power supply GND
73	AVREF			The reference voltage input for A/D converter
74	VDSENS			VD power supply short sense input
75	DSCSNS			Disc state sense input
76	TEMP			Temperature information sense input


Pin No.	Pin Name	I/O	Format	Function and Operation
77	HOME	I		Home SW sense input
78	CSENS	I		Flap closing sense input
79	RFOKIN	I		RFOK input chatter count input
80-82	NC			Connected to AVDD or AVSS via the resistor
83	WMAARI	I		Input of sensing existence of WMA decoder and DA I/F IC
84	TYPE_A/D	I		CD-DA Analog/Digital output change setup
85	TESTIN	I		Chip check test program starting input
86	NC			Connected to EVDD or EVSS via the resistor
87	XINT			CD LSI interruption signal input
88	WINT			WMA decoder interruption signal input
89	BRST	I		P-Bus reset input
90	EJSW	I		Eject key input
91, 92	NC			Open
93	CLAMP	I	C	CLAMP SW sense input
94	ROMDATA	I/O	/C	E2PROM data input/output
95	ROMCS	O	C	E2PROM chip selection output
96	ROMCK	O	C	E2PROM clock output
97	FRXD	I		For flash rewriting (received signal)
98	FTXD	O	C	For flash rewriting (transmitted signal)
99	AO/DO	O	C	The output for Analog/Digital voice output distinction
100	BSI	I		P-Bus serial data input

* PE5352B


Format	Meaning
C	CMOS

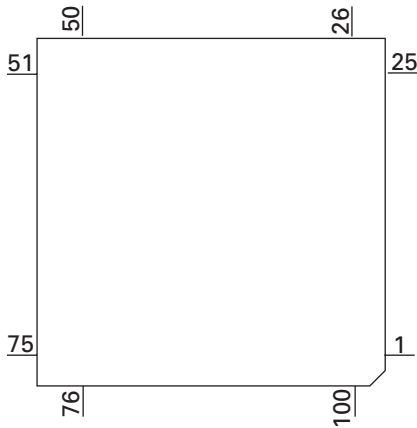

MSM51V4265EP-70TS

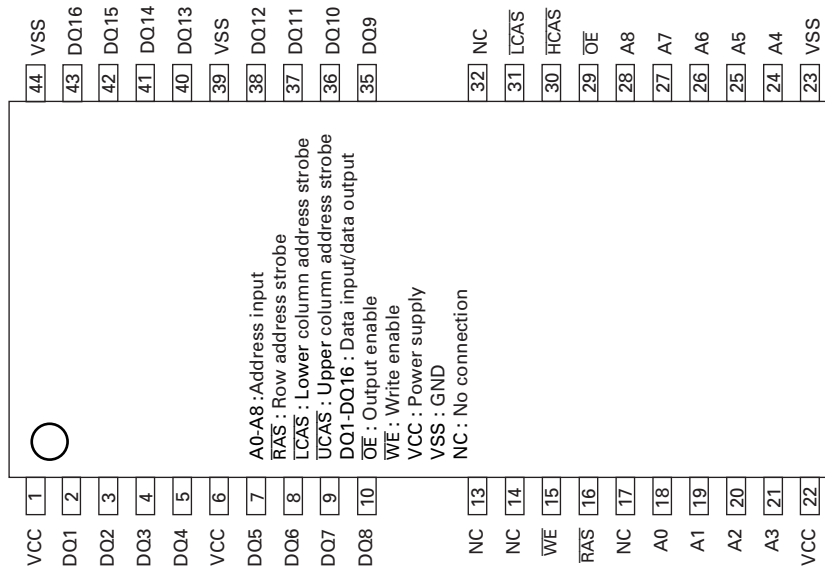

● FM/AM Tuner Unit

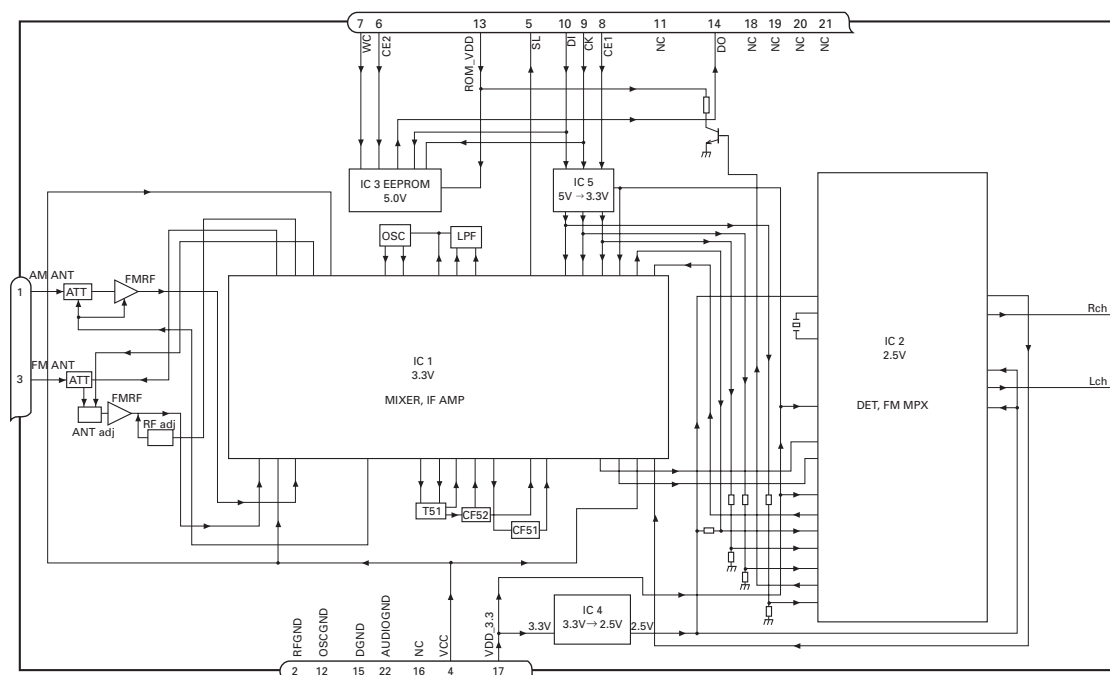

No.	Symbol	I/O	Explain	
1	AMANT	I	AM antenna input	AM antenna input high impedance AMANT pin is connected with an all antenna by way of 4.7μH. (LAU type inductor) A series circuit including an inductor and a resistor is connected with RF ground for the countermeasure against the ham of power transmission line.
2	RFGND		RF ground	Ground of antenna block
3	FMANT	I	FM antenna input	Input of FM antenna 75Ω Surge absorber(DSP-201M-S00B) is necessary.
4	VCC		power supply	The power supply for analog block. D.C 8.4V ± 0.3V
5	SL	O	signal level	Output of FM/AM signals level
6	CE2	I	chip enable-2	Chip enable for EEPROM "Low" active
7	WC	I	write control	You can write EEPROM, when EEPROM write control is "Low". Ordinary non connection
8	CE1	I	chip enable-1	Chip enable for AF•RF "High" active
9	CK	I	clock	Clock
10	DI	I	data in	Data input
11	NC		non connection	Not used
12	OSCGND		osc ground	Ground of oscillator block
13	ROM_VDD		power supply	Power supply for EEPROM pin 13 is connected with a power supply of micro computer.
14	DO	O	data out	Data output
15	DGND		digital ground	Ground of digital block
16	NC		non connection	Not used
17	VDD_3.3		power supply	The power supply for digital block. 3.3V ± 0.2V
18	NC		non connection	Not used
19	NC		non connection	Not used
20	NC		non connection	Not used
21	NC		non connection	Not used
22	AUDIOGND		audio ground	Ground of audio block
23	L ch	O	L channel output	FM stereo "L-ch" signal output or AM audio output
24	R ch	O	R channel output	FM stereo "R-ch" signal output or AM audio output

7.2.2 DISPLAY

● LCD (CAW1759 (DEH-P450MP/XM/UC, DEH-P4500MP/XM/UC))

A


B

C



D

E

F

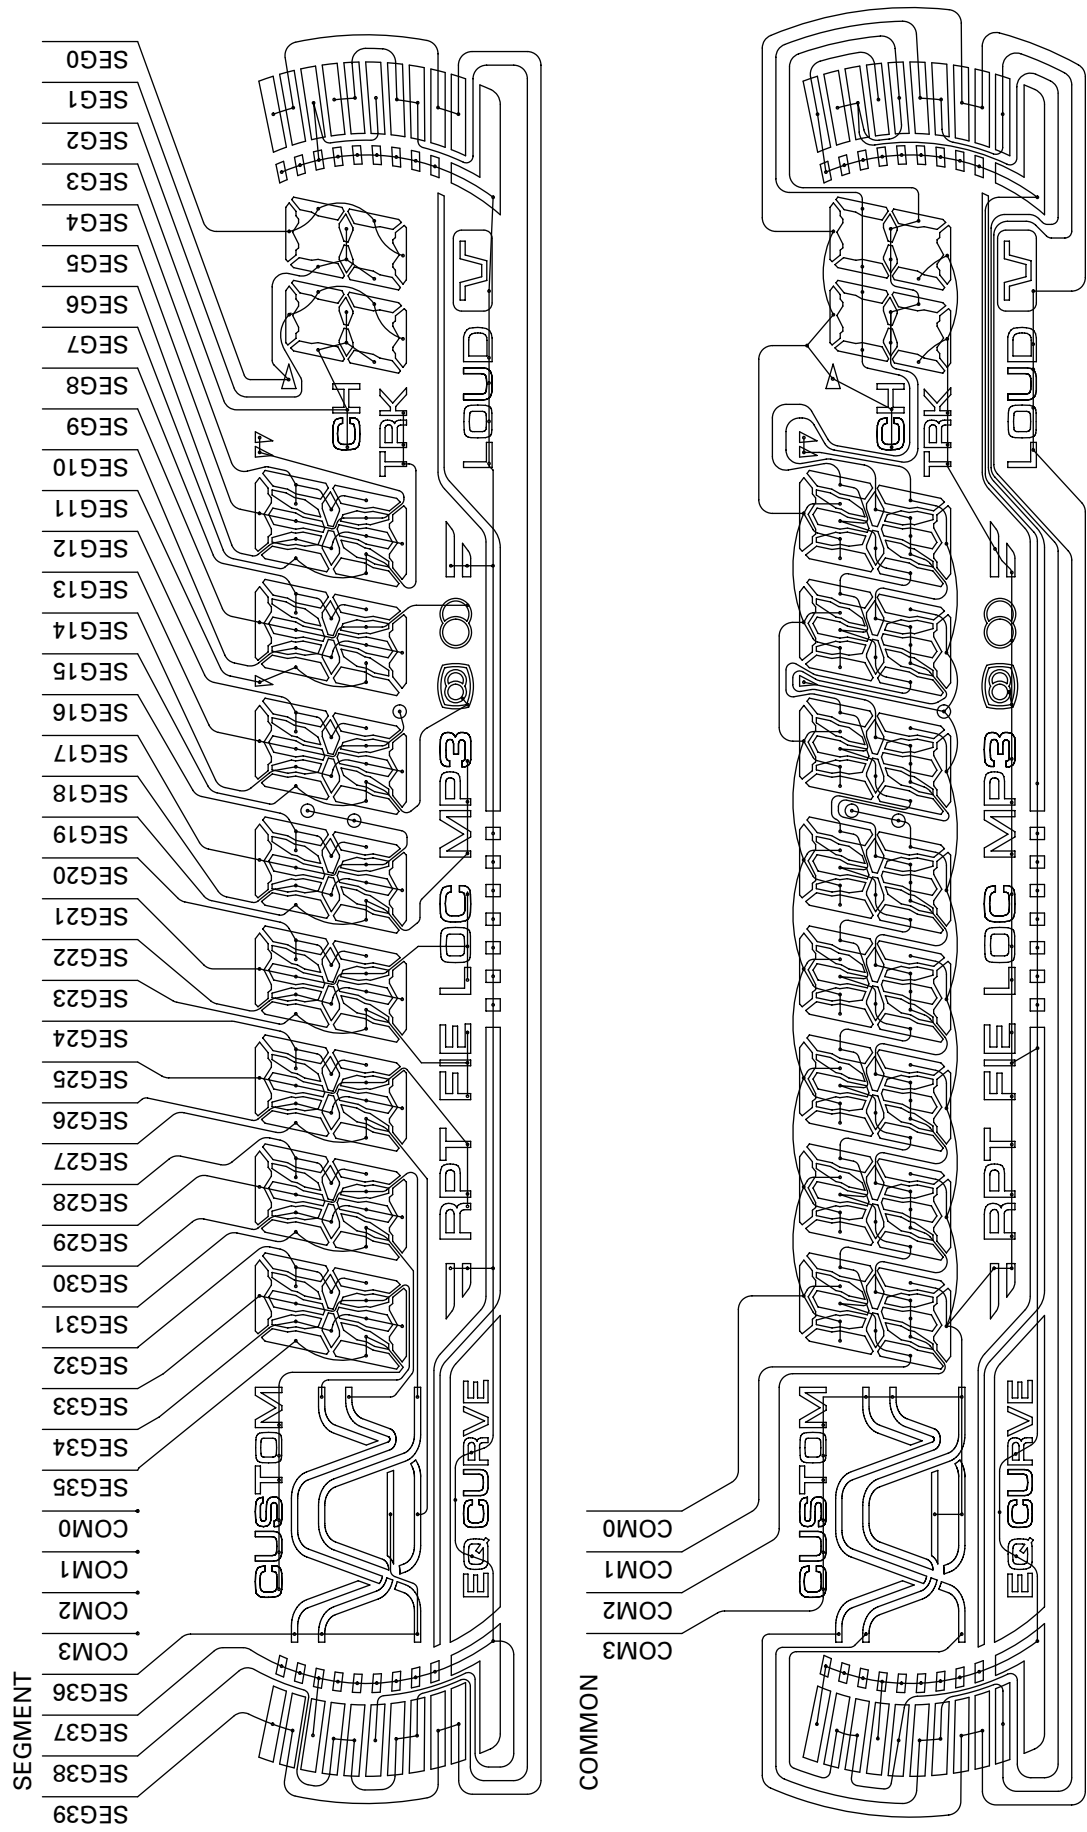


● LCD (CAW1762 (DEH-P3550MP/XM/ES))

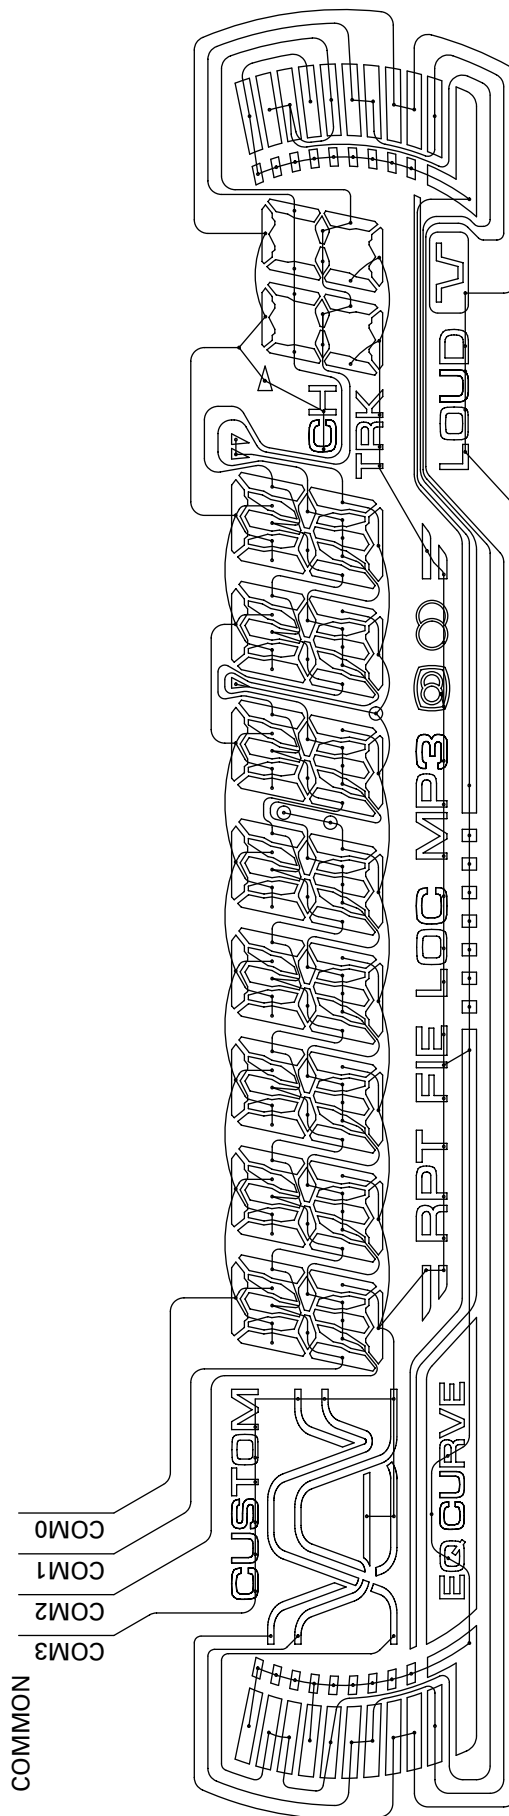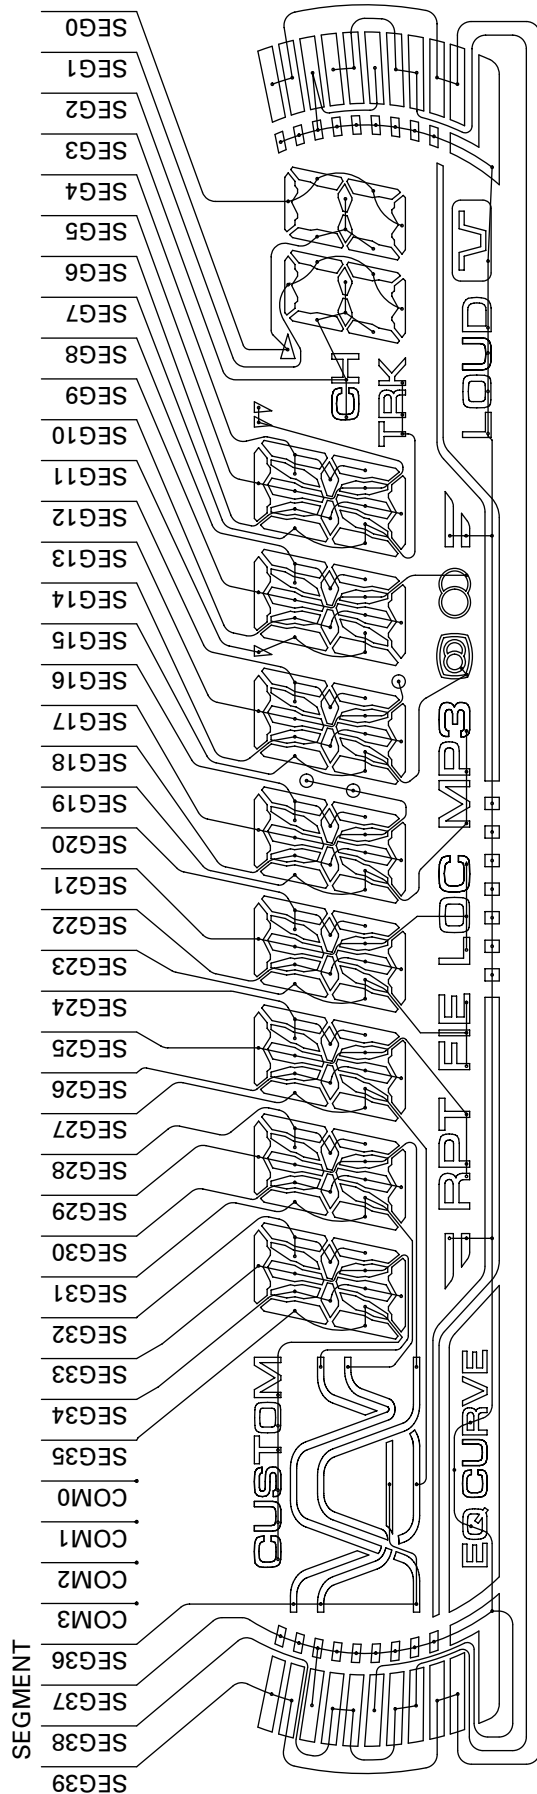


7.3 OPERATIONAL FLOW CHART

A

Power ON

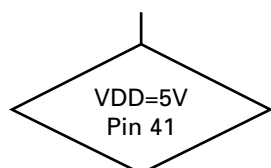VDD=5V
Pin 41

 
B

BSNS
Pin 93

BSNS=L



ASNS
Pin 92

 ASNS=L

DSNS
Pin 90

DSNS=L


 
 
C

ASENBO←H
Pin 71CSNS
Pin 77


2V < CSNS < 3V

● CSNS ≤ 2V, 3V ≤ CSNS
Last source returns.
CD loading functions are available.
Keys except for EJECT key are not available.

   
D

Starts communication
with Grille
microcomputer.SWVDD←H
Pin 1Source keys
operative

 E




Source ON

 SYSPW←H
Pin 21

F

Completes power-on operation.
(After that, proceed to each source operation)

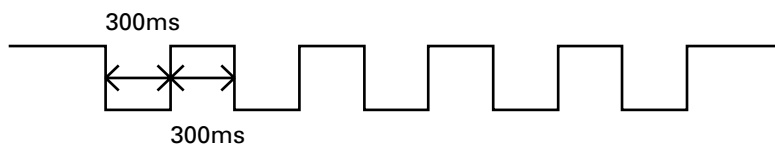

In case of the above signal, the communication
with Grille microcomputer may fail.
If the time interval is not 300msec, the oscillator
may be defective.

■

5

■

6

■

7

■

8

■

7.4 CLEANING

A

Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

Portions to be cleaned	Cleaning tools
CD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

■

B


C

D

E

F

8. OPERATIONS

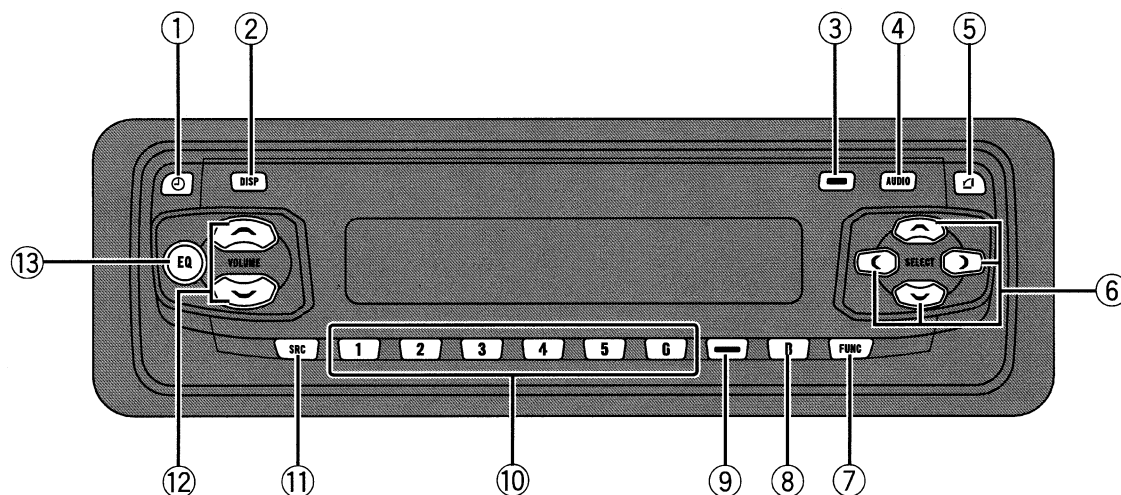

Head unit

① CLOCK button

Press to change to the clock display.

② DISPLAY button

Press to select different displays.

③ PAUSE button

Press to turn pause on or off.

④ AUDIO button

Press to select various sound quality controls.

⑤ OPEN button

Press to open the front panel.

⑥ ▲/▼/◀/▶ buttons

Press to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

⑦ FUNCTION button

Press to select functions.

⑧ BAND button

Press to select among three FM and one AM bands and cancel the control mode of functions.

⑨ LOUDNESS button

Press to turn loudness on or off.

⑩ 1-6 buttons

Press for preset tuning and disc number search when using a multi-CD player.

⑪ SOURCE button



This unit is turned on by selecting a source. Press to cycle through all of the available sources.

⑫ VOLUME

Press to increase or decrease the volume.

⑬ EQ button

Press to select various equalizer curves. 

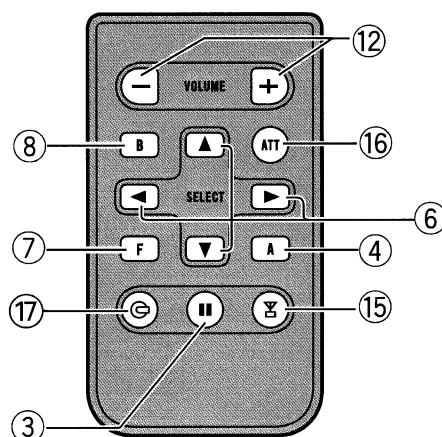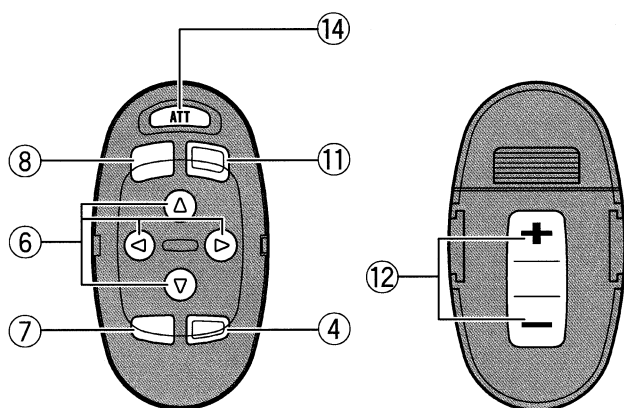

Remote control

Operation is the same as when using the button on the head unit. See the explanation of the head unit about the operation of each button with the exception of **ATT**, which is explained below.

⑭ **ATT button**

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.



Note

If you press **FUNCTION** on the remote control while pressing **BAND** on it, the remote control will not function properly. To cancel this setting, press **AUDIO** on the remote control while pressing **BAND** on it to return to the previous setting. ■

⑮ **TUNER button**

Press to select the tuner as the source.


⑯ **ATT button**

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level. ■

⑰ **CD button**

Press to select the built-in or multi-CD player as the source.

Playing a CD

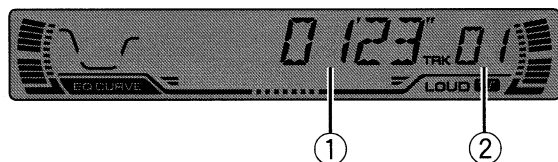

These are the basic steps necessary to play a CD with your built-in CD player.

① Play time indicator

Shows the elapsed playing time of the current track.

② Track number indicator

Shows the track currently playing.

1 Press OPEN to open the front panel.


CD loading slot appears.

- After a CD has been inserted, press **SOURCE** to select the built-in CD player.

2 Insert a CD into the CD loading slot.

Playback will automatically start.

CD loading slot

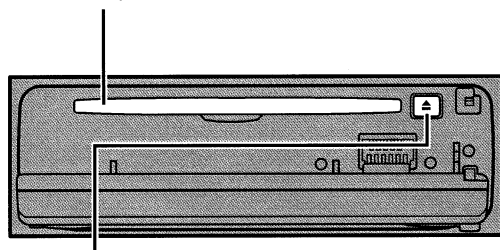

EJECT button

- You can eject a CD by pressing **EJECT**.
- To avoid a malfunction, make sure that no metal object comes into contact with the terminals when the front panel is open.

3 Close the front panel.

4 Use VOLUME to adjust the sound level.

Press to increase or decrease the volume.

5 To perform fast forward or reverse, press and hold ◀ or ▶.

- If you select the search method to **ROUGH**, pressing and holding ◀ or ▶ enables you to search every ten track in the current disc.

6 To skip back or forward to another track, press ◀ or ▶.

Pressing ▶ skips to the start of the next track. Pressing ◀ once skips to the start of the current track. Pressing again will skip to the previous track.




Notes

- The built-in CD player plays one, standard, 12-cm or 8-cm (single) CD at a time. Do not use an adapter when playing 8-cm CDs.
- Do not insert anything other than a CD into the CD loading slot.
- If you cannot insert a disc completely or if after you insert a disc the disc does not play, check that the label side of the disc is up. Press **EJECT** to eject the disc, and check the disc for damage before inserting the disc again.
- If the built-in CD player does not operate properly, an error message such as **ERROR-11** may be displayed.
- When a CD TEXT disc is inserted, the disc and track titles begin to scroll to the left automatically.


Fixing the Front Panel

If you do not operate the Detaching and Replacing the Front Panel Function, use the supplied fixing screws and fix the front panel to this unit.


1. Attach the holders to both sides of the front panel.

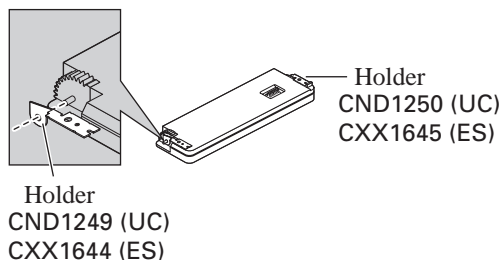


2. Replace the front panel to the unit.

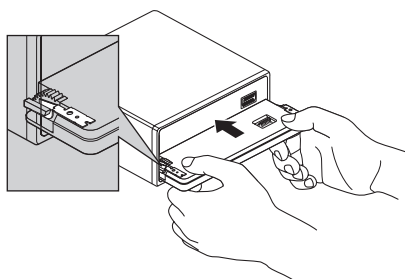


3. Flip the holders into upright positions.

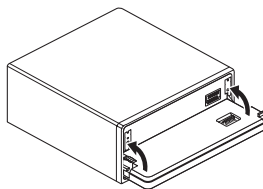

4. Fix the front panel to the unit using fixing screws.

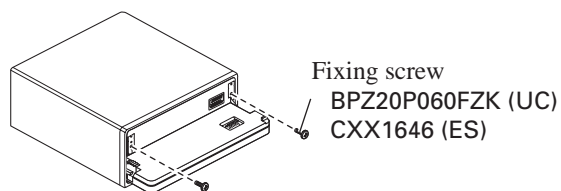

● CONNECTION DIAGRAM

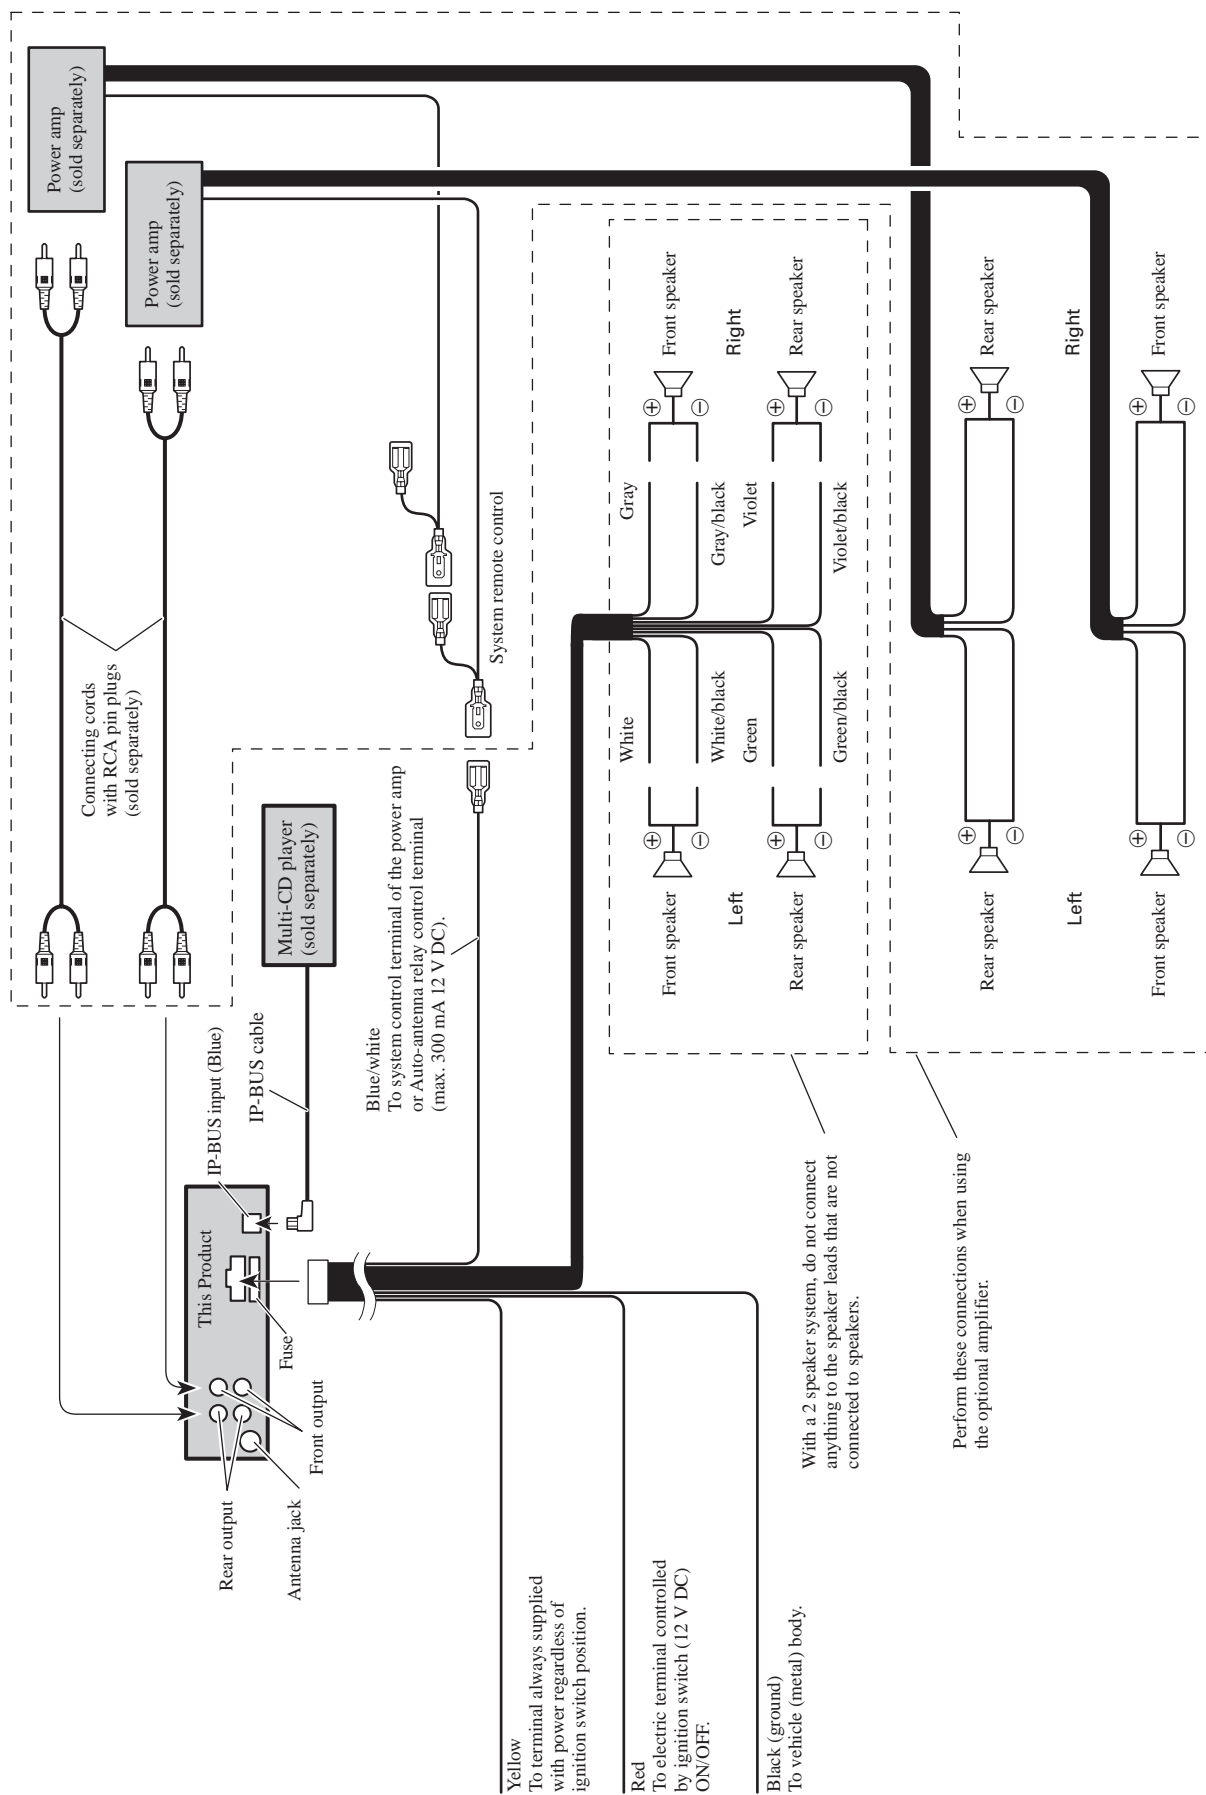

Service Manual

ORDER NO.
CRT3026

CD MECHANISM MODULE(S10MP3)

CX-3057

- This service manual describes the operation of the CD mechanism module incorporated in models listed in the table below.
- When performing repairs use this manual together with the specific manual for model under repair.

Model	Service Manual	CD Mechanism Module
DEH-P450MP/XM/UC DEH-P4500MP/XM/UC DEH-P3550MP/XM/ES	CRT3019	CXK5660
DEH-P3500MP/XM/EW	CRT3020	
DEH-P550MP/XN/UC DEH-P5500MP/XN/UC DEH-P5550MP/XN/ES	CRT3002	CXK5661
DEH-P5530MP/XN/EW DEH-P5500MP/XN/EW	CRT3003	

CONTENTS

1. CIRCUIT DESCRIPTIONS	2
2. MECHANISM DESCRIPTIONS.....	20
3. DISASSEMBLY	22

1. CIRCUIT DESCRIPTIONS

Recently, most CD LSI's have included DAC, RF amplifier and other peripheral circuits, as well as the core circuit DSP. This series of mechanisms employ a multi-task LSI UPD63760GJ, which has CD-ROM decoder and MP3 decoder in addition to the CD block as shown in the Fig.1.0.1. This enables to reproduce a CD-ROM where MP3 data is recorded.

Plus, in this lineup, there are WMA supported models available where WMA decoder UPD61002GC is added.

CXK5660 --- WMA non-supported

CXK5661 --- WMA supported

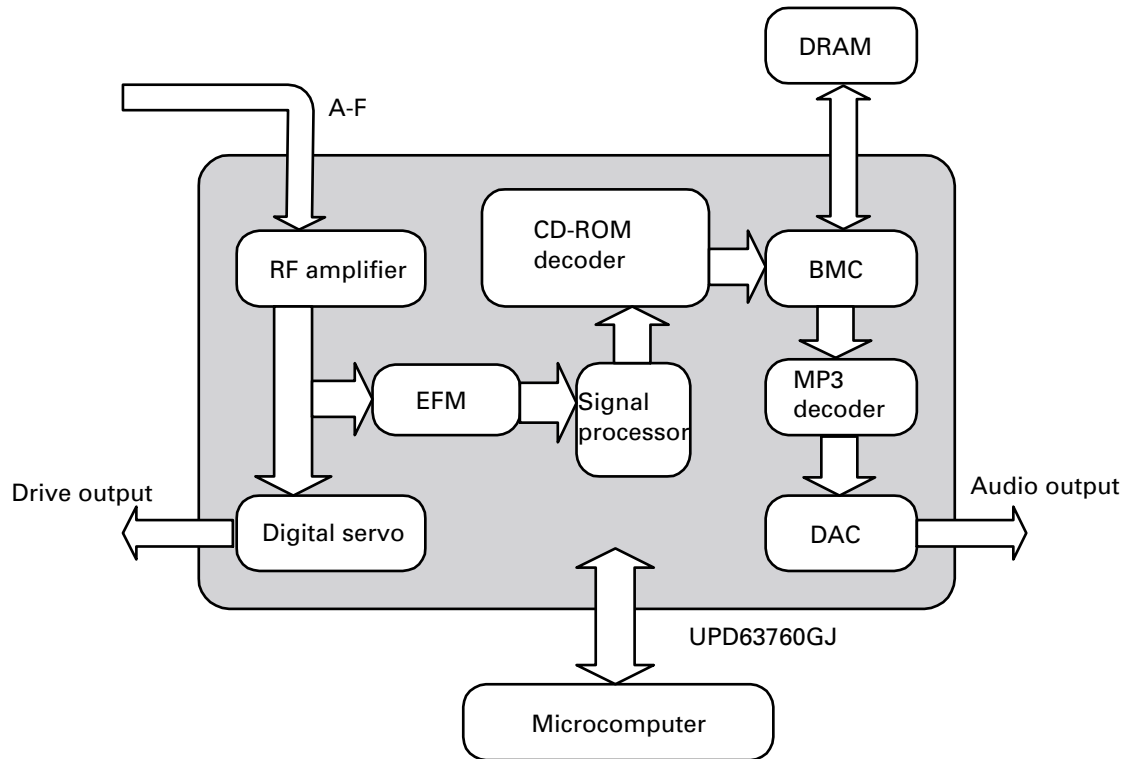


Fig.1.0.1 Block diagram of CD LSI UPD63760GJ

1.1 PREAMPLIFIER BLOCK (UPD63760GJ: IC201)

In the preamplifier block, the pickup output signals are processed to generate signals that are used for the next-stage blocks: the servo block, demodulator, and control.

After I/V-converted by the preamplifier with built-in photo detectors (inside the pickup), the signals are applied to the preamplifier block in the CD LSI UPD63760GJ (IC201). After added by the RF amplifier in this block, these signals are used to produce necessary signals such as RF, FE, TE, and TE zero-cross signals.

The CD LSI employs a single power supply system of + 3.3V. Therefore, the REFO (1.65V) is used as the reference voltage both for this CD LSI and the pickup. The LSI produces the REFO signal by using the REFOUT via the buffer amplifier and outputs from the pin 131. All the measurements should be made based on this REFO.

Caution: Be careful not to short the REFO and GRD when measuring.

1.1.1 APC (Automatic Power Control)

A laser diode has extremely negative temperature characteristics in optical output at constant-current drive. To keep the output constant, the LD current is controlled by monitor diodes. This is called the APC circuit. The LD current is calculated at about 30mA, which is the voltage between LD1 and V3R3D divided by 7.5 (ohms).

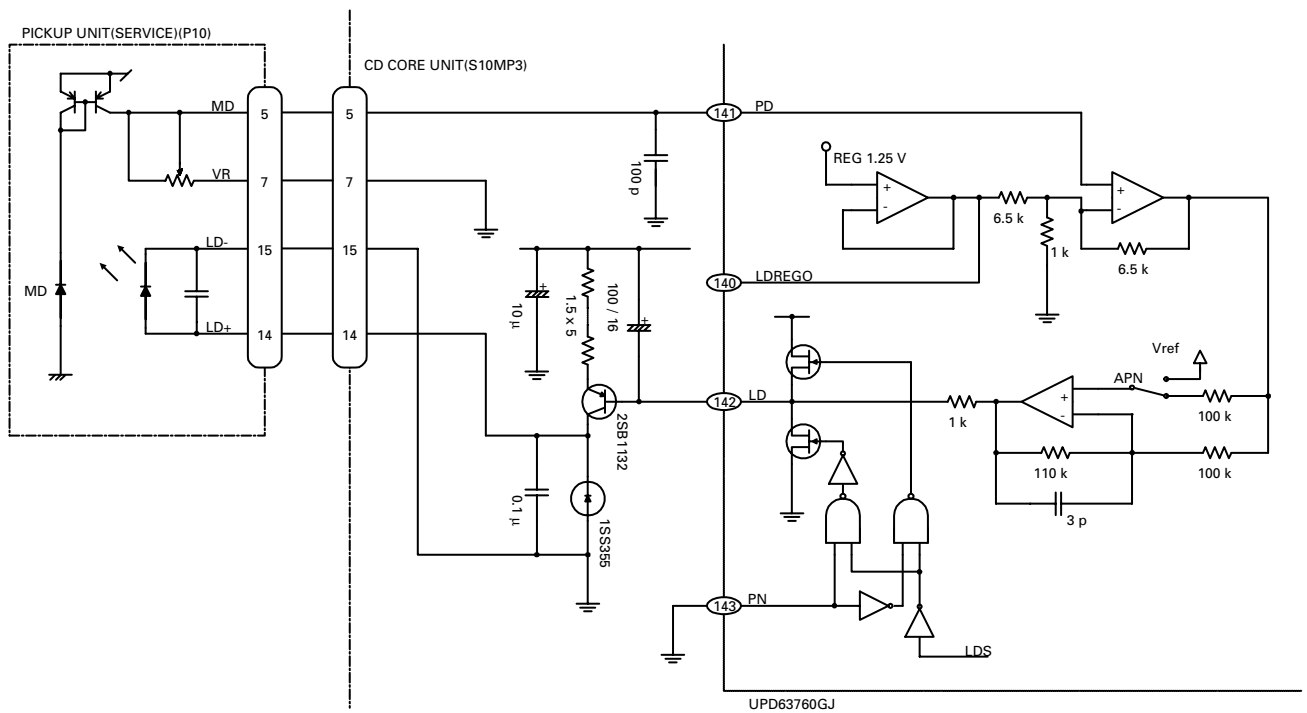


Fig. 1.1.1 APC

1.1.2 RF and RFAGC amplifiers

The photo-detector outputs (A + C) and (B + D) are added, amplified, and equalized inside this LSI, and then provided as the RF signal from the RFI terminal. The RF signal can be used for eye-pattern check.

The low frequency component of the RFO voltage is:

$$RFO = (A + B + C + D) \times 2$$

The RFO is used for the FOK generation circuit and RF offset adjustment circuit.

The RFI output from the pin 118 is A/C-coupled outside this LSI, and returned to the pin 117 of this LSI. The signal is amplified in the RFAGC amplifier to obtain the RFAGC signal. This LSI is equipped with the RFAGC auto-adjustment function as explained below. This function automatically controls the RFO level to keep at 1.5V by switching the feed-back gain for the RFAGC amplifier.

The RFO signal is also used for the EFM, DFCT, MIRR, and RFAGC auto-adjustment circuits.

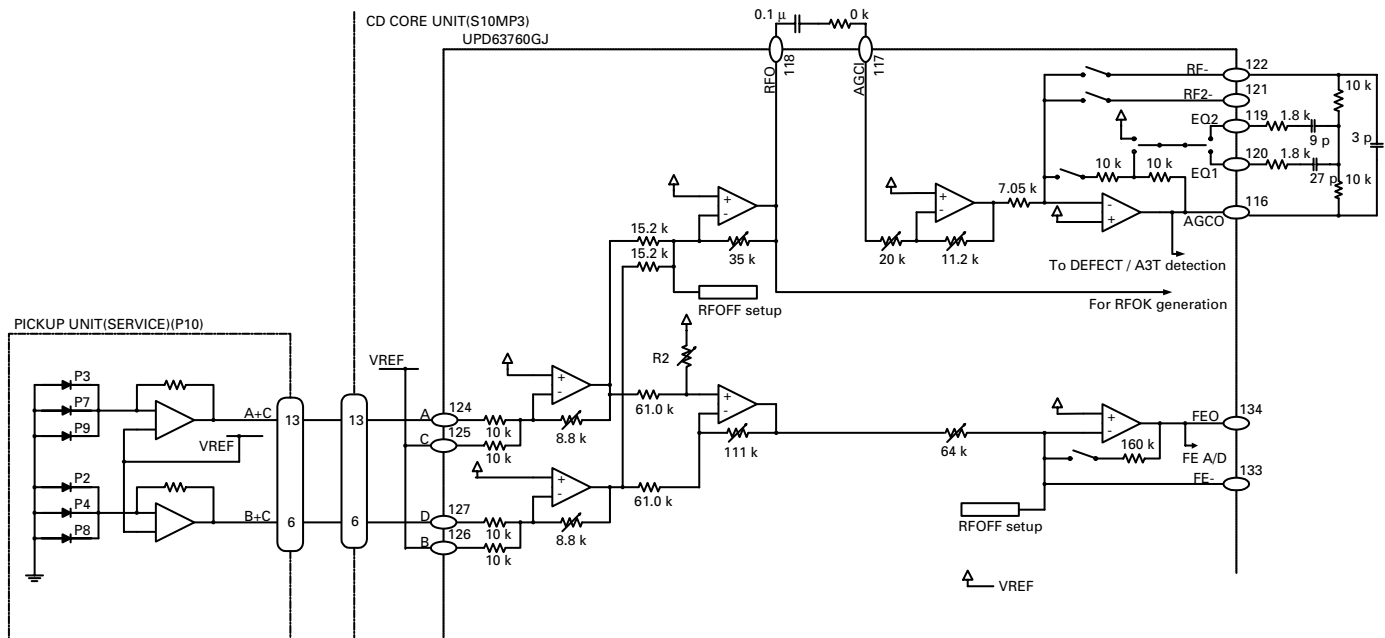


Fig. 1.1.2 RF/AGC/FE

1.1.3 Focus error amplifier

The photo-detector outputs (A + C) and (B + D) are applied to the differential amplifier and the error amplifier to obtain the (A + C - B - D) signal, which is then provided from the pin 91 as the FE signal.

The low frequency component of the FE voltage is:

$$\begin{aligned} FE &= (A + C - B - D) \times 8.8/10k \times 111k/61k \times 160k/64k \\ &= (A + C - B - D) \times 6.0 \end{aligned}$$

The FE output shows 1.5Vp-p S-shaped curve based on the REFO. For the next-stage amplifiers, the cutoff frequency is 14.6kHz.

1.1.4 RFOK

The RFOK circuit generates the RFOK signal, which indicates focus-close timing and focus-close status during the play mode, and outputs from the pin 53. This signal is shifted to "H" when the focus is closed and during the play mode.

The DC level of the RFI signal is peak-held in the digital block and compared with a certain threshold level to generate the RFOK signal. Therefore, even on a non-pit area or a mirror-surface area of a disc, the RFOK becomes "H" and the focus is closed.

This RFOK signal is also applied to the microcomputer via the low-pass filter as the FOK signal, which is used for protection and RF amplifier gain switching.

1.1.5 Tracking error amplifier

The photo-detector outputs E and F are applied to the differential amplifier and the error amplifier to obtain the (E - F) signal, and then provided from the pin 136 as the TE signal.

The low frequency component of the TE voltage is:

$$\begin{aligned} TEO &= (E - F) \times 160k/112k \times 81k/45.4k \times 160k/80k \\ &= (E - F) \times 5.1 \end{aligned}$$

The TE output provides the TE waveform of about 1.3Vp-p based on the REFO. For the next-stage amplifiers, the cut-off frequency is 21.1kHz.

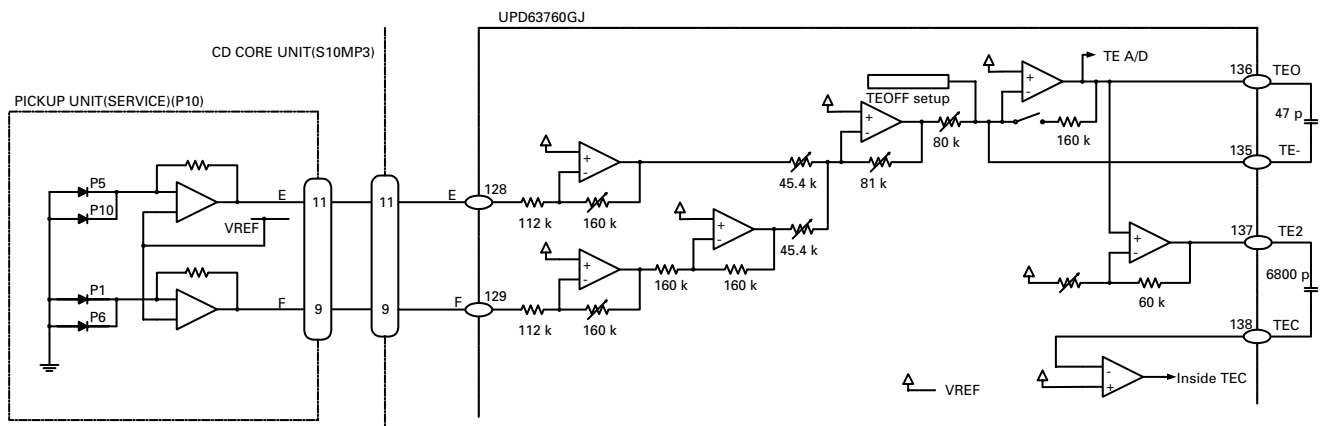


Fig. 1.1.3 TE

1.1.6 Tracking zero-cross amplifier

The tracking zero-cross signal (hereinafter TEC signal) is obtained by amplifying the TE signal 4 times, and used to detect the tracking-error zero-cross point.

By using the information on this point, the following two operations can be performed:

1. Track counting in the carriage move and track jump modes
2. Sensing the lens-moving direction at the moment of the tracking close (The sensing result is used for the tracking brake circuit as explained below.)

The frequency range of the TEC signal is between 300Hz and 20kHz.

TEC voltage = TE level x 4

The TEC level can be calculated at 5.2V. This level exceeds the D range of the operational amplifier, and the signal gets clipped. However, it can be ignored because the CD LSI only uses the signal at the zero-cross point.

1.1.7 EFM

The EFM circuit converts the RF signal into a digital signal expressed in binary digits 0 and 1. The AGCO output from the pin 116 is A/C-coupled in the peripheral circuit, fed back to the LSI from the pin 115, and sent to the EFM circuit inside the LSI.

On scratched or dirty discs, part of the RF signal recorded may be missing. On other discs, part of the RF signal recorded may be asymmetric, which was caused by dispersion in production quality. Such lack of information cannot be completely eliminated by this AC coupling process. Therefore, by utilizing the fifty-fifty occurrence ratio of binary digits (0 and 1) in the EFM signal, the EFM comparator reference voltage ASY is controlled, so that the comparator level always stays around the center of the RFO signal. The reference voltage ASY is made from the EFM comparator output via the low-pass filter. The EFM signal is put out from the pin 111.

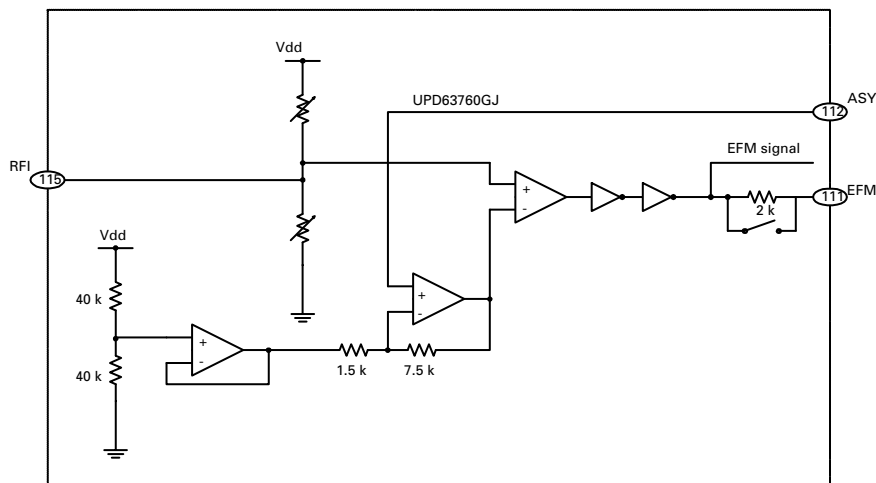


Fig. 1.1.4 EFM

1.2 SERVO BLOCK (UPD63760GJ: IC201)

The servo block controls the servo systems for error signal equalizing, in-focus, track jump and carriage move and so on. The DSP block is a signal-processing block, where data decoding, error correction, and compensation are performed.

After A/D-converted, the FE and TE signals (generated in the preamplifier block) are applied to the servo block and used to generate the drive signals for the focus, tracking, and carriage servos.

The EFM signal is decoded in the DSP block, and finally sent out as the audio signal after D/A-converted. In this decoding process, the spindle servo error signal is generated, supplied to the spindle servo block, and used to generate the spindle drive signal.

The drive signals for focus, tracking, carriage, and spindle servos (FD, TD, SD, and MD) are provided as PWM3 data, and then converted to the analog data by the low-pass filter which uses the operational amplifier embedded in the driver IC BA5996FM (IC301). These analog drive signals can be monitored by the FIN, TIN, CIN, and SIN signals respectively. Afterwards, the signals are amplified and applied to each servo's actuator and motor.

1.2.1 Focus servo system

In the focus servo system, the digital equalizer block works as its main equalizer. The figure 1.2.1 shows the block diagram of the focus servo system.

To close the focus loop circuit, the lens should be moved to within the in-focus range. While moving the lens up and down by using the focus search triangular signal, the system tries to find the in-focus point. In the meantime, the spindle motor rotation is kept at the prescribed one by using the kick mode.

The servo LSI monitors the FE and RFOK signals and automatically performs the focus close operations at an appropriate timing. The focus loop will close when the following three conditions are satisfied at the same time:

- 1) The lens moves toward the disc surface.
- 2) The RFOK signal is shifted to "H".
- 3) The FE signal is zero-crossed. At last, the FE signal comes to the zero level (or REFO).

When the focus loop is closed, the FSS bit is shifted from "H" to "L". The microcomputer starts monitoring the RFOK signal obtained through the low-pass filter 10msec after that.

If the RFOK signal is detected as "L", the microcomputer will take several actions including protection.

The timing chart for focus close operations is shown in fig. 1.2.2.

In the test mode, the S-shaped curve, search voltage, and actual lens movement can be confirmed by pressing the focus close button when the focus mode selector displays 01.

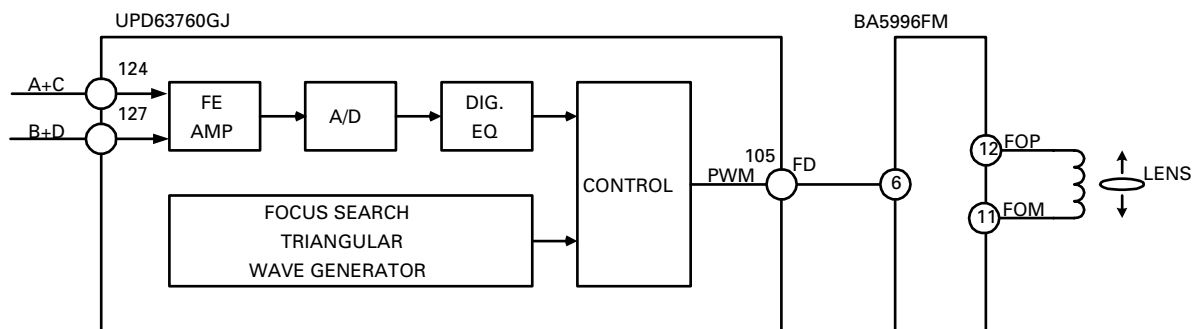


Fig. 1.2.1 Block diagram of the focus servo system

A

B

C

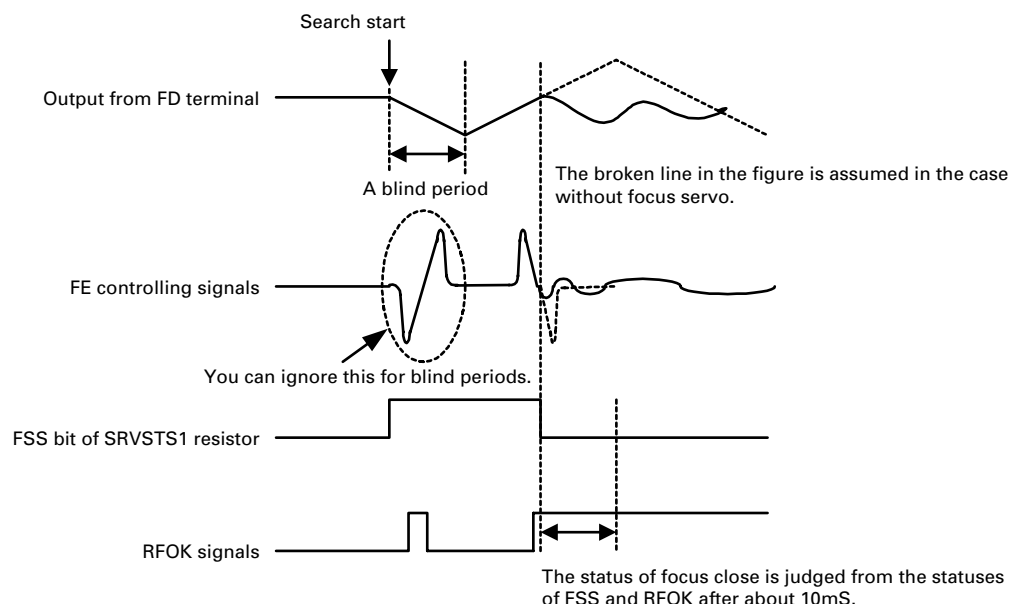


Fig. 1.2.2 Timing chart for focus close operations

1.2.2 Tracking servo system

In the tracking servo system, the digital equalizer block is used as its main equalizer. The figure 1.2.3 shows the block diagram of the tracking servo system.

(a) Track jump

Track jump operation is automatically performed by the auto-sequence function inside the LSI with a command from the microcomputer. In the search mode, the following five track jump modes are available: 1, 4, 10, 32, and 32×3

In the test mode, 1, 32, and 32×3 track jump modes, and carriage move mode are available and can be switched by selecting the mode.

For track jumps, first, the microcomputer sets about half the number of tracks to be jumped as the target. (Ex. For 10 track jumps, it should be 5 or so.) Using the TEC signal, the microcomputer counts up tracks. When the counter reaches the target set by the microcomputer, a brake pulse is sent out to stop the lens. The pulse width is determined by the microcomputer. Then, the system closes the tracking loop and proceeds to the normal play. At this moment, to make it easier to close the tracking loop, the brake circuit is kept ON for 50msec after the brake pulse, and the tracking servo gain is increased.

In the normal operation mode, the FF/REW operation is realized by continuously repeating single jumps about 10 times faster than the normal single jump operation.

(b) Brake circuit

The brake circuit stabilizes the servo-loop close operation even under poor conditions, especially in the setting-up mode or track jump mode. This circuit detects the lens-moving direction and emits only the drive signal for the opposite direction to slow down the lens. Thus, this makes it easier to close the tracking servo loop. The off-track direction is detected from the phases of the TEC and MIRR signals.

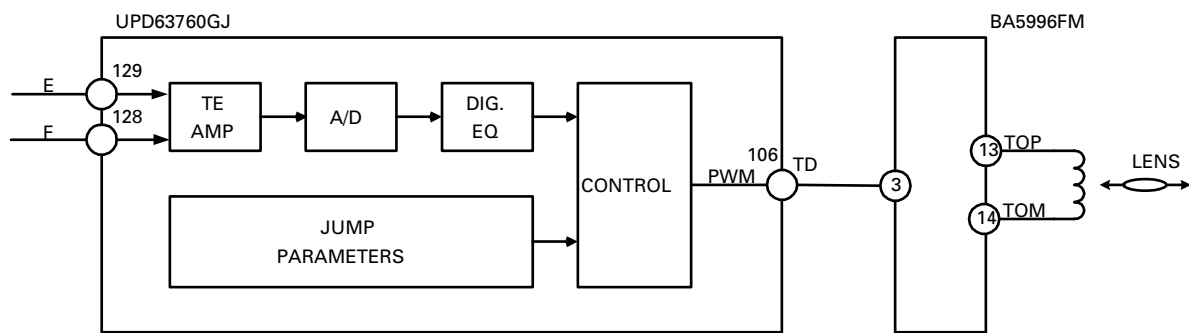


Fig. 1.2.3 Block diagram of the tracking servo system

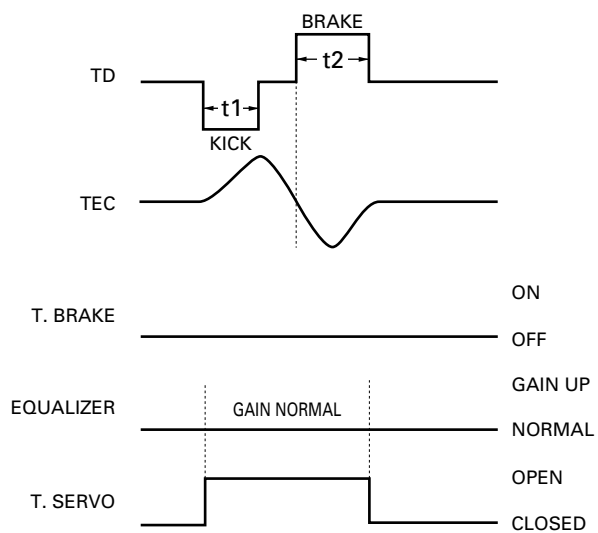


Fig. 1.2.4 Single-track jump

A

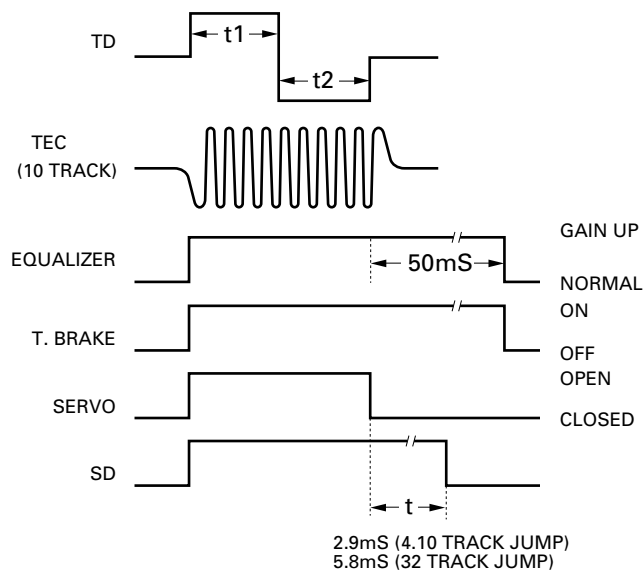



Fig. 1.2.5 Multi-track jump

C

D

E

F

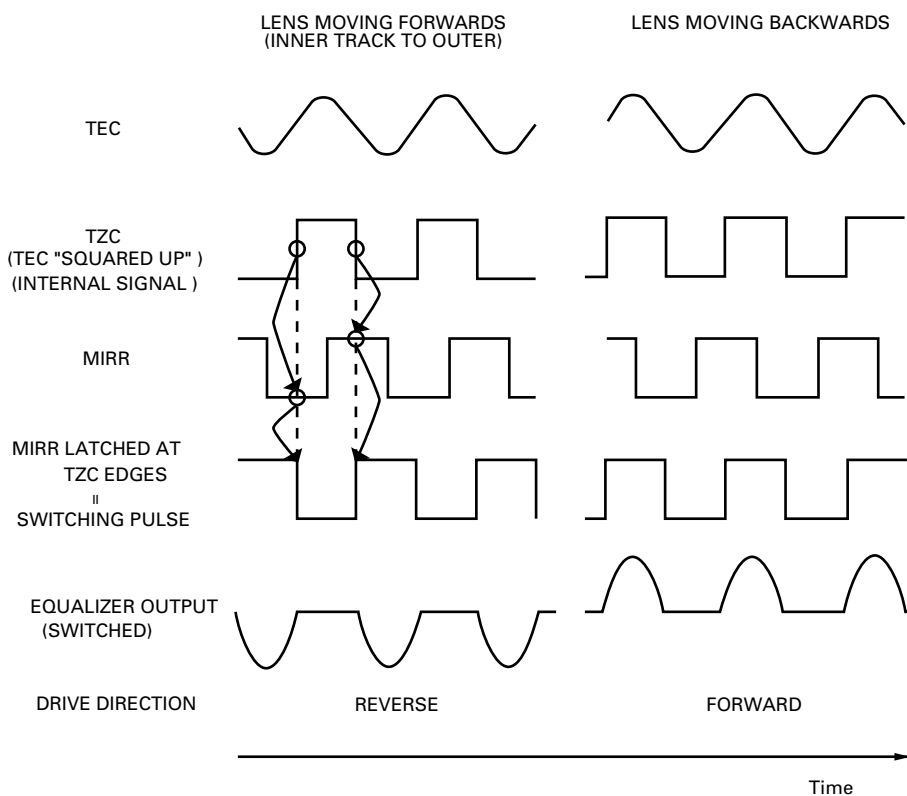

Note : Equalizer output assumed to have same phase as TEC.

Fig. 1.2.6 Track brake

1.2.3 Carriage servo system

In the carriage servo system, the low frequency component from the tracking equalizer (the information on the lens position) is transferred to the carriage equalizer, where the gain is increased to a certain level, and then sent out from the LSI as the carriage drive signal. This signal is applied to the carriage motor via the driver IC.

During the play mode, when the lens offset reaches a certain level, it is necessary to move the pickup toward the FORWARD direction. The equalizer gain is adjusted so that the output over the carriage motor starting voltage is sent out in such a case. In actual operations, only when the equalizer output exceeds the threshold level preset in the servo LSI, the drive signal is sent out. This can reduce the consumption power.

With an eccentric disc loaded, before the whole pickup starts moving, the equalizer output may exceed the threshold level a few times. In this case, the drive signal applied from the LSI shows pulse-like waveforms.

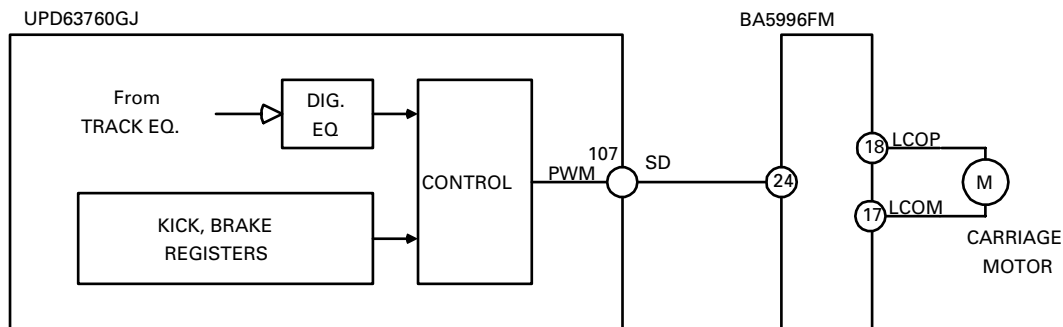


Fig. 1.2.7 Block diagram for the carriage servo block

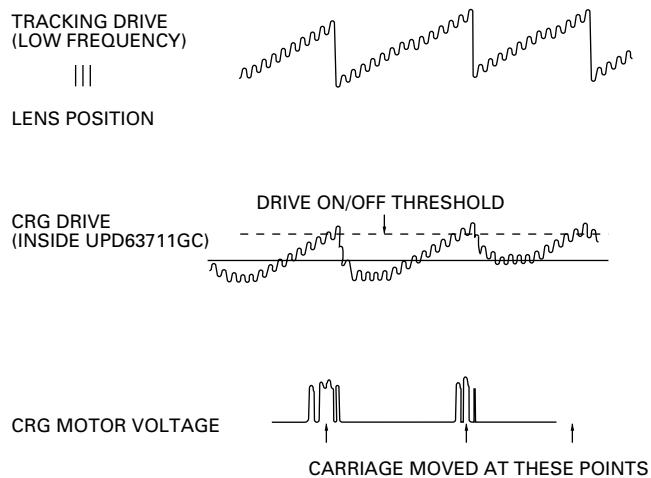


Fig. 1.2.8 Waveforms of the carriage signal

1.2.4 Spindle servo system

In the spindle servo system, the following seven modes are available:

1) Kick

Used to accelerate the disc rotation in the setting-up mode.

2) Offset

a. Used in the setting-up mode until the AGC completes after the kick mode.

b. Used when the focus loop is unlocked during the play mode and until it is locked again.

In both cases, the mode is to keep the disc rotation near to the appropriate one.

3) Applicable servo

In the normal operation, the CLV servo mode is used.

The EFM demodulation block detects through WFK/16 sampling whether or not the frame sync signal and the internal frame counter output are synchronized, and generates the status signal based on the sampling result, synchronized or non-synchronized. If eight consecutive "non-sync" signals are obtained, the system senses the status as "non-sync". If not, the system senses as "sync". In the applicable servo mode, the leading-in servo mode is automatically selected at the non-sync status, and the normal servo mode is at the sync status.

4) Brake

Used to stop the spindle motor.

In accordance with the microcomputer's command, the brake voltage is sent out from the servo LSI. At this moment, the EFM waveform is being monitored in this LSI. When the longest EFM pattern exceeds a certain cycle (or the rotation slows down enough), a flag is set inside the LSI, and the microcomputer switches off the brake voltage. If a flag is not set within a certain period, the microcomputer shifts the mode from the brake mode to the stop mode, and keeps this for a certain period. In the eject mode, after the mode is shifted to the stop mode and a certain period passes, the loaded disc is ejected.

5) Stop

Used when the power is turned on and during the eject mode. At this moment, the voltage through the spindle motor is 0V.

6) Rough servo

Used when the carriage is moved (or in the carriage move mode such as long search).

By obtaining the linear velocity from the EFM waveform, "H" or "L" is applied to the spindle equalizer. In the test mode, this mode is used for grating confirmation.

7) Rotation speed

CD-DA and CD-ROM are controlled differently at their rotation speeds. Both of them are done by the double speed in the setting-up mode when a disc gets inserted. However, CD-DA is done by the standard speed in the setting-up mode starting from SOURCE ON/ACC ON with the disc inside, while CD-ROM is still done by the double speed. During the play mode, the rotation speed of CD-DA is always the standard speed, while that of CD-ROM is always the double speed.

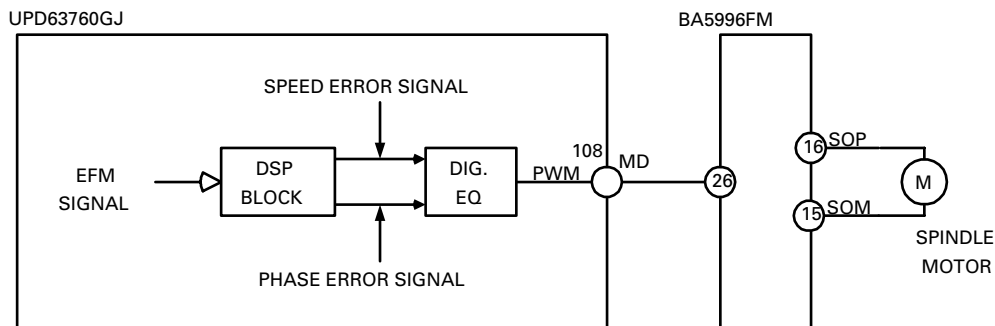


Fig.1.2.9 Block diagram of the spindle servo system

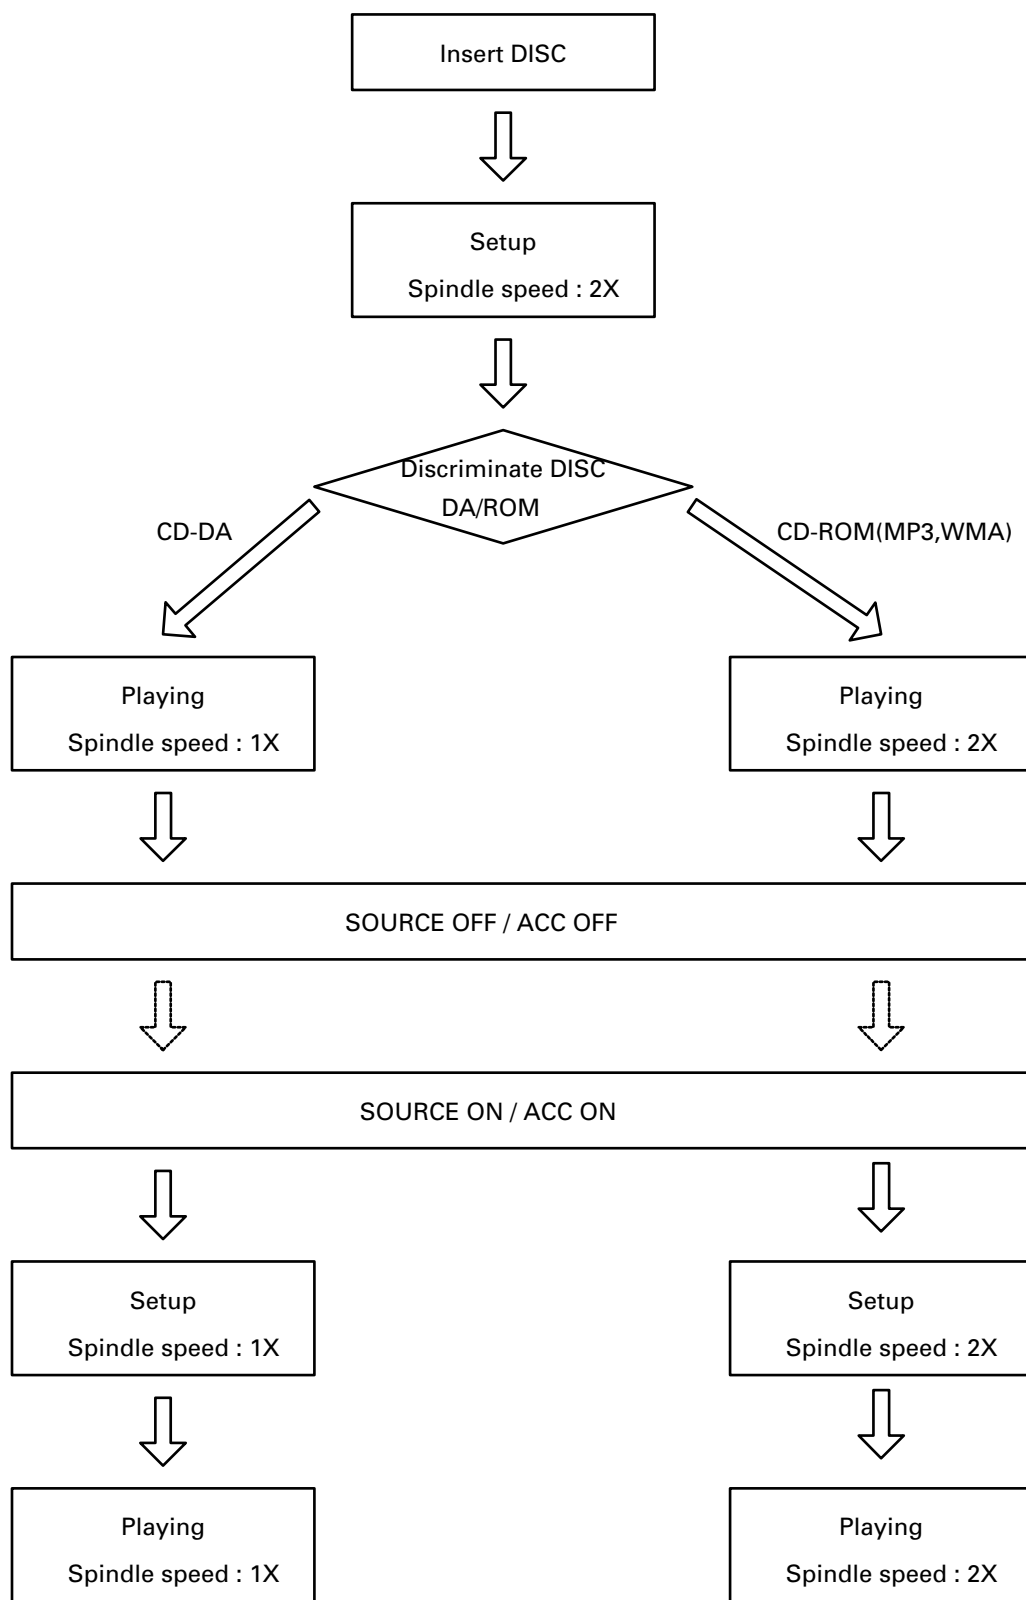


Fig.1.2.10 Dual spindle drive(x1 / x2)

1.3 AUTOMATIC ADJUSTMENT FUNCTION

This system automatically handles the circuit adjustment inside the CD LSI. All adjustments are performed whenever a disc is inserted or the CD mode is selected by pressing the source key. Each adjustment will be explained below.

1.3.1 TE, FE, and RF offset auto-adjustment

This adjustment is made to adjust the offsets of the TE, FE, and RF amplifiers in the preamplifier block to their target values on the basis of the REFO when the power is turned on. (The target values for TE, FE, and RE offsets are 0V, 0V, and -0.8V respectively.)

<Adjusting procedures>

- 1) With the LD OFF status, the microcomputer reads each offset through the servo LSI.
- 2) The microcomputer calculates the voltages for correction from the measured values, and inputs the calculated results as the offset adjustment values.

1.3.2 Tracking balance (T.BAL) auto-adjustment

This adjustment is to equalize the pickup output offsets for E-ch and F-ch by changing the amplifier gain inside the LSI. Actually, the gain is adjusted so that the TE waveform becomes symmetrical on each side of the REFO.

<Adjusting procedures>

- 1) The focus loop is closed.
- 2) The lens is kicked in the radial direction to make certain that the TE waveform is generated.
- 3) The microcomputer reads the TE offset calculated in the LSI through the servo LSI.
- 4) The microcomputer takes either of the following steps depending on the calculated offset:
 - When the offset is 0, the adjustment completes.
 - When the offset is positive or negative, the amp gains for E-ch and F-ch should be changed.

The steps 2) to 4) are repeatedly taken until the offset becomes 0 or the repeating time reaches the limit frequency.

1.3.3 EF bias auto-adjustment

This adjustment obtains the best focus point during the play mode and maximizes the RFI level by utilizing the phase difference between the 3T level of the RF signal and that of the signal obtained when focus error disturbance is applied to the focus loop. At this moment, the auto-gain control (AGC), where focus error disturbance is applied to the focus and tracking loops, is also performed as explained below.

<Adjusting procedures>

- 1) The microcomputer transmits the command to apply disturbance component to the focus loop (inside the servo LSI).
- 2) In the LSI, the 3T-offset component of the RF signal is detected.
- 3) From the relation between the 3T detected component and the disturbance, the LSI obtains the volume and direction of the focus offset.
- 4) The microcomputer transmits the command and reads out the detecting result from the servo LSI.
- 5) The microcomputer calculates the necessary correction and inputs the result as the bias adjustment value to the servo LSI.

The adjusting steps are repeated a few times for higher adjustment accuracy as same as those for the AGC.

1.3.4 Focus and tracking AGC

This function automatically adjusts the focus and tracking servo loop gains.

<Adjusting procedures>

- 1) Disturbance component is applied to the servo loop.
 - 2) The error signals (FE and TE) are extracted through the band pass filter as the G1 and G2 signals.
 - 3) The microcomputer reads the G1 and G2 signals through the servo LSI.
 - 4) The microcomputer calculates the necessary correction and performs the loop gain adjustment inside the servo LSI.
- For higher adjustment accuracy, the above steps are repeated a few times.

1.3.5 RF level auto-adjustment (RFAGC)

This adjustment minimizes the dispersion of the RF level (RFO), which may be caused by disc-related errors, for more stable signal transmission by changing the amp gain between RFI and RFO.

<Adjusting procedures>

- 1) The microcomputer sends the command to the servo LSI to read out the output from the RF level detecting circuit inside the servo LSI.
- 2) The microcomputer calculates the appropriate amp gain by using the output read out to adjust the RFO level at the prescribed one.
- 3) The microcomputer sends the command to the servo LSI to adjust the amp gain into the calculated one.

This adjustment is automatically performed when:

- 1) During the setting-up mode, only the focus close operation ends.
- 2) Immediately before the setting-up ends (or right before the play mode starts)
- 3) During the play mode, the focus loop is locked again after unlocked.

1.3.6 Preamplifier gain adjustment

In this adjustment, when the reflected beams from disc surface are extremely weak (ex. when the lens is dirty, and a CD-RW is loaded), the whole gain in the RFAMP block (FE, TE, and RF amplifiers) is increased by +6dB or +12dB.

<Adjusting procedures>

When the system senses that the reflected beams from disc surface are extremely weak during the setting-up mode, the whole RFAMP gain is increased by +6dB or +12dB.

After the gain is changed, the setting-up mode is restarted.

If the whole RFAMP gain is always increased to the +6dB level in the play mode, the +6dB level will be employed at the starting of the setting-up mode from the next playback.

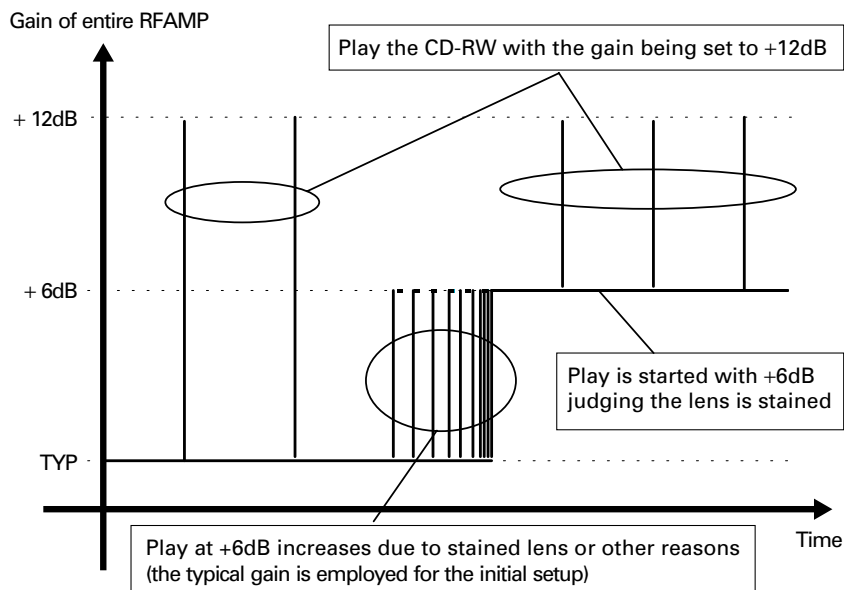


Fig.1.3.1 Pre-amp gain adjustment

1.3.7 Initial values in adjustment

For each auto-adjustment, the last adjustment results are basically used as the initial settings of the next adjustment unless the microcomputer is turned off (or the backup is off). When the microcomputer (or the backup) is turned off, the last adjustment results are not used, but the factory settings.

1.3.8 Adjustment result display

For some of the adjustments (FE and RF offset, FZD cancel, F and T gain, and RFAGC), the adjustment results can be displayed and confirmed in the test mode.

1) FE and RF offset

Reference coefficient = 32 ("32" indicates no adjustment required)

The display is expressed in the unit of about 32mV.

Ex. When the FE offset coefficient is 35:

$$35 - 32 = 3 \times 32\text{mV} = 96\text{mV}$$

This means that the correction is about +96mV, and the FE offset before adjustment is -96mV.

2) F and T gain adjustment

Reference coefficient for focus and tracking = 20

The displayed coefficient / the reference coefficient indicates the adjusted gain.

Ex. When the AGC coefficient is 40:

$$40/20 = 2 \text{ times (+6dB)}$$

That is, the gain was adjusted by +6dB.

(The original loop gain was half the target one. So, the whole gain was doubled.)

3) RF level adjustment (RFAGC)

Reference coefficient = 8

The coefficient 9 to 15 indicates increasing the RF level.

The coefficient 0 to 7 indicates decreasing the RF level.

When the coefficient display changes by 1, the gain changes by 0.7 to 1dB.

When the coefficient is 15, the gain is maximum or TYP + 6.5dB.

When the coefficient is 0, the gain is minimum or TYP - 6.0dB.

1.4 POWER SUPPLY AND LOADING BLOCK

The VD ($8.3 \pm 0.5V$), the VD2 ($5.6 \pm 0.5V$) and the VDD ($5.0 \pm 0.25V$), which are supplied from the mother PC board, are used for the power supply. In this system, the following four power-supply signals are available: the VD (for the drive system), the V3R3 obtained from the VD2 via the 3.3V regulator (for the control system: 3.3V), the VDD (for the microcomputer: 5V), and the 3VDD obtained from the VDD via the 3.3V regulator (for the microcomputer: 3.3V).

In the WMA-supported mechanism CXK5661, the V2R5 obtained from the VD2 via the 2.5V regulator (for WMA decoder: 2.5V) is also used.

The microcomputer can turn on/off the CD driver (except for the load and eject modes) and the 3.3V signal by controlling the "CONT" and "CD3VON" signals respectively. To turn on/off the loading drive, there is no control terminal in the microcomputer, but the "LOEJ" input signal works as the control one. In the LCO output block, the "CLCONT" signal is used to switch between the loading mode and carriage mode.

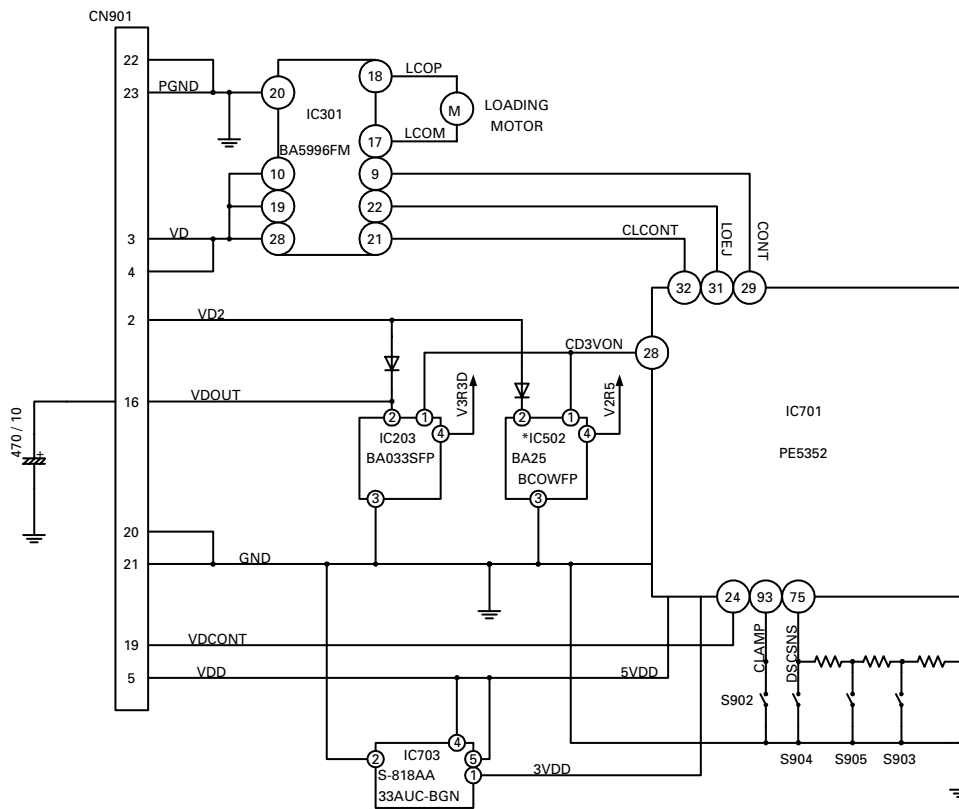


Fig. 1.4.1 Power supply/loading block (*: CXK5661)

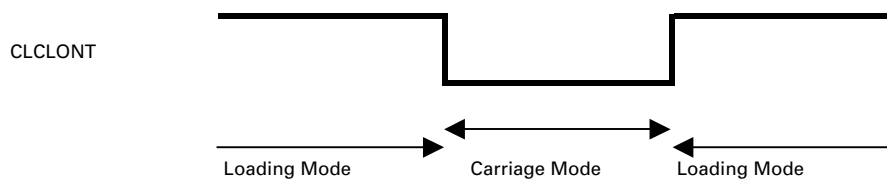


Fig. 1.4.2 Loading/carriage mode shift


To control the load and eject operations, the clamp switch located in the mechanism unit and the three detecting switches located in the control unit are used. Depending on the combination of these switches' ON/OFF status, the DSCSNS voltage changes.

The microcomputer can detect the status (A to E) by observing the voltage at the A/D port. The disc size detection (8 or 12cm) is also performed through this status change. The DSCSNS status and the status change in the load and

Status	A	B	C	D	E
SW1 S904	0	0	0	1	0
SW2 S905	0	0	1	1	0
SW3 S903	1	0	0	0	0
SW4 S902	1	1	1	1	0
Mecha	No DISC				CLMP

eject modes are shown in the figures 1.4.3 and 1.4.4 respectively.

Fig.1.4.3 DSCSNS status

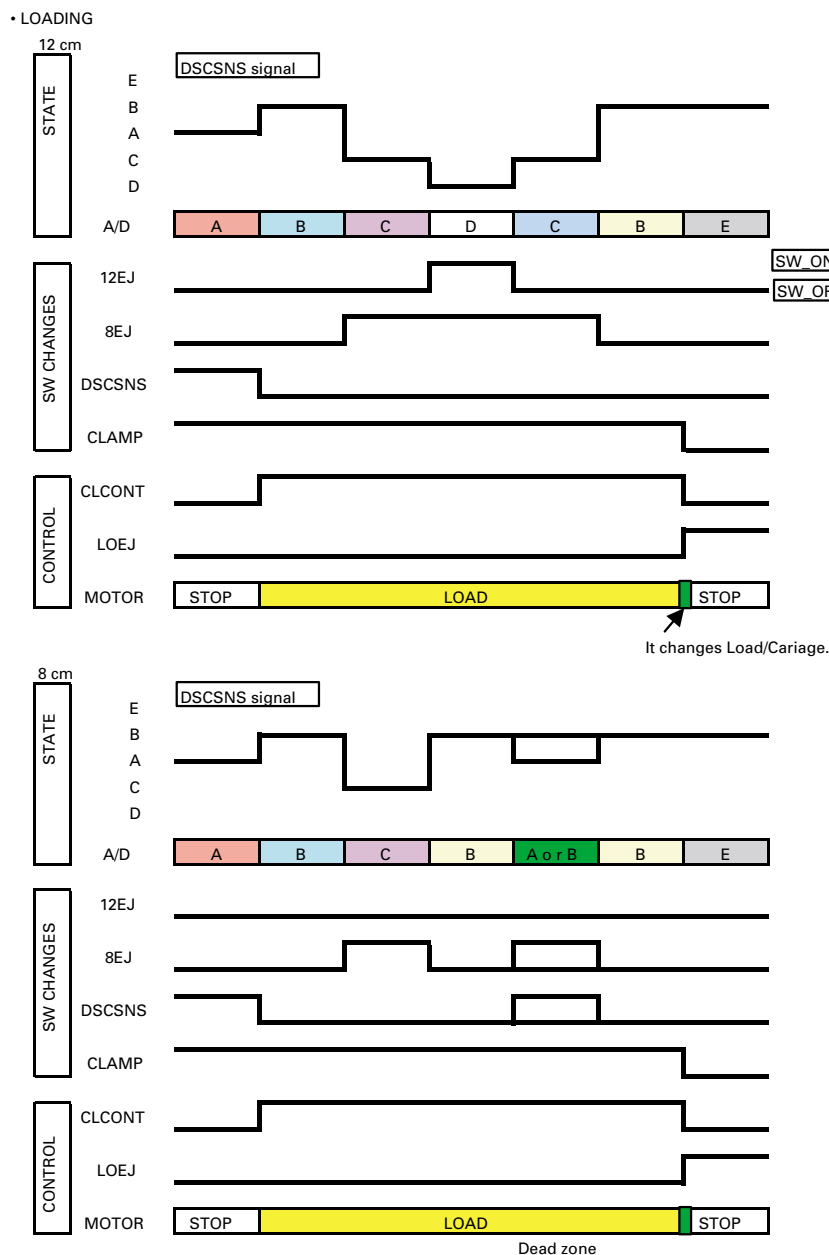



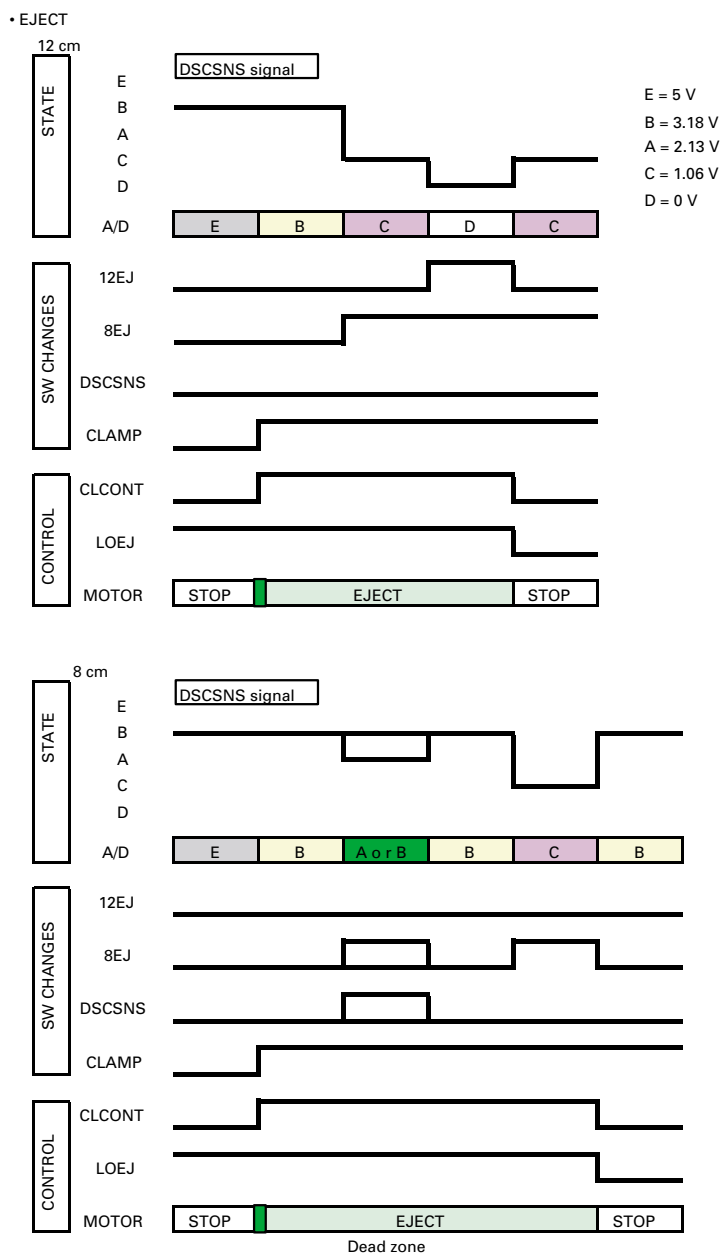


Fig.1.4.4 Status change in LOAD and EJECT modes

2. MECHANISM DESCRIPTIONS



● Loading actions

1. When a disc is inserted, SW Arm L and R rotate. Due to the rotation of Arm L, SW1 is switched from ON to OFF and the Load Carriage Motor starts.
 2. If the disc is 12cm-disc, when it is carried to the position shown with the dotted line in the drawing, SW 3 switches to ON due to such rotation of Arm. Then, the microcomputer judges that the disc is 12cm-disc.
 3. In case of 8cm-disc, the disc cannot reach such dotted line position, and from such limitation of approach, the microcomputer judges that the disc is 8cm-disc and simply triggers clamp actions.
- (Movement of SW Arm L and R are connected together. So, if pushing force is fed to only one arm, the distance between tow arms cannot be widened beyond the specific degree, because the coupling part is locked in such case.)

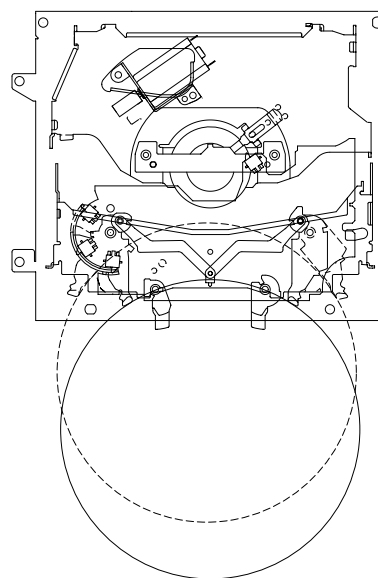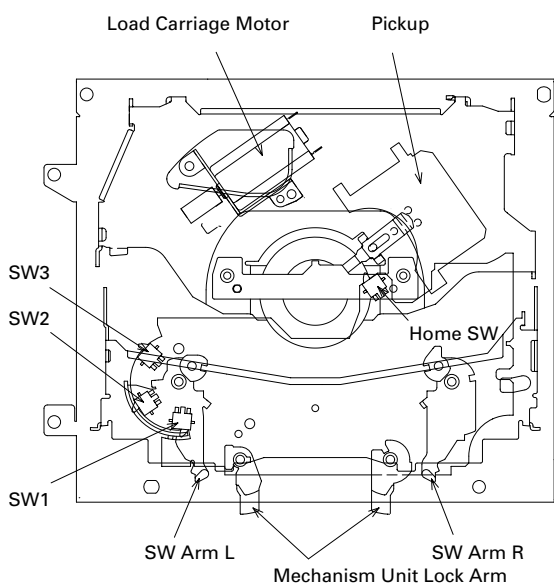



● Disc centering mechanism

1. In case of 12cm-disc, the 12cm-Disc Detection Arm rotates, and with such rotation, it raises the Centering Arms to retreat the arms from disc's trace. The disc passes through under the arms, and at the inner part, it is centered.
2. In case of 8cm-disc, it is just centered at the position where its edge touches the front portion of the Centering Arm.

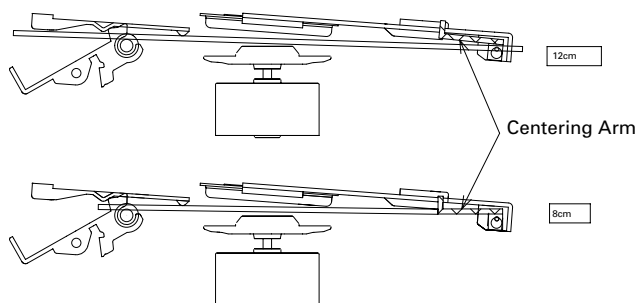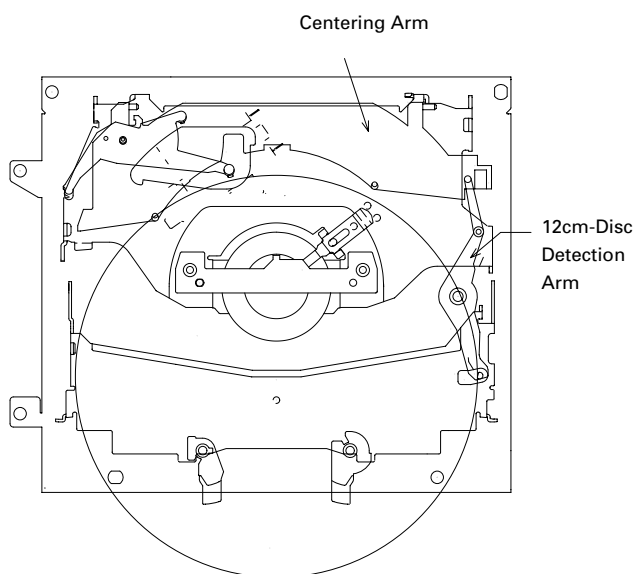

● Clamp actions

1. When an 8 or 12cm disc is placed on the center of the spindle, the detection arm starts moving.
2. The movement of the detection arm engages the loading rack with the 2-stage gear.
3. The clamp lever slides to lower the clamp arm. At this time, the roller up arm rotates to separate the roller arm from the disc. The roller arm moves the mech lock lever and turns the mech lock arm to release the mech lock. At the position where the clamp switch is turned off, the clamp operation ends.
4. After the clamp operation, the clamp lever moves to rotate the gear lock arm. The planet gear separates from the 2-stage gear to get engaged with the pickup feed screw's gear. Then the carriage operation will start.

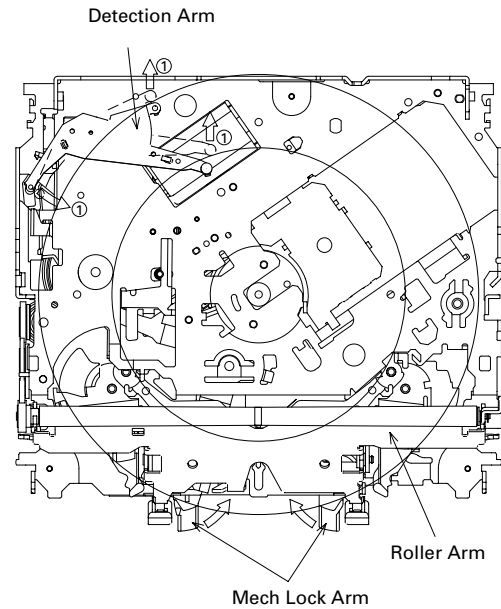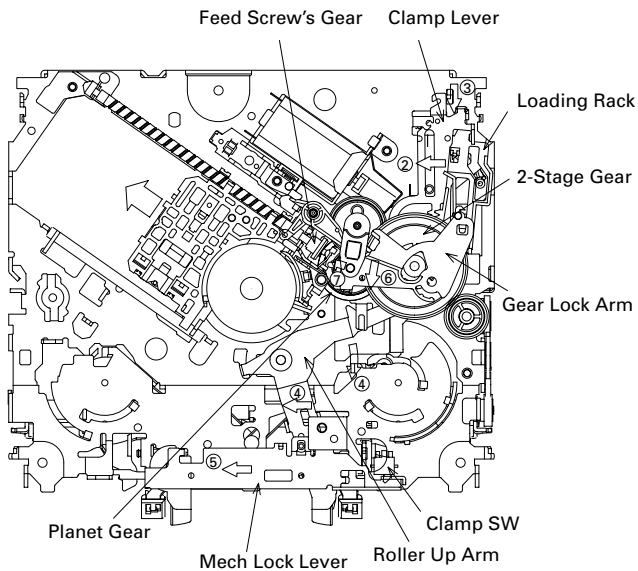


● Eject actions

1. Eject actions start when the Pickup is fed to the position inner than "Home SW ON" point in the internal circumference of the circle, caused by backward rotation of the Load Carriage Motor. Eject actions follow the foregoing procedures (steps taken in loading, centering and clamping actions), but each action in those steps is performed in reversed manner.
2. In case of 12cm-disc, Eject is completed when SW3 completes its condition- transition of OFF → ON → OFF.
3. For 8cm-disc, Eject is completed when SW2 completes its condition-transition of OFF → ON → OFF.

3. DISASSEMBLY

● How to hold the Mechanism Unit

1. Hold the top and bottom frame.
2. Do not squeeze top frame's front portion too tight, because it is fragile.

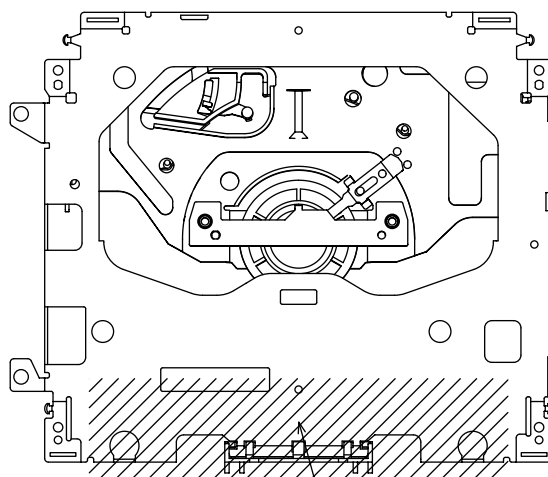


Do not squeeze.

● Removing the Upper and Lower Frames


1. With a disc clamped, remove the four springs (A), the two springs (B), the two springs (C), and the four screws.
2. To remove the upper frame, open it on the fulcrum A.
3. While lifting the carriage mechanism, remove the three dampers.
4. With the frames removed, insert the connectors coming from the main unit and eject the disc.


Caution: Before installing the carriage mechanism in the frames, be sure to apply some alcohol to the dampers and set the mechanism to the clamp mode.

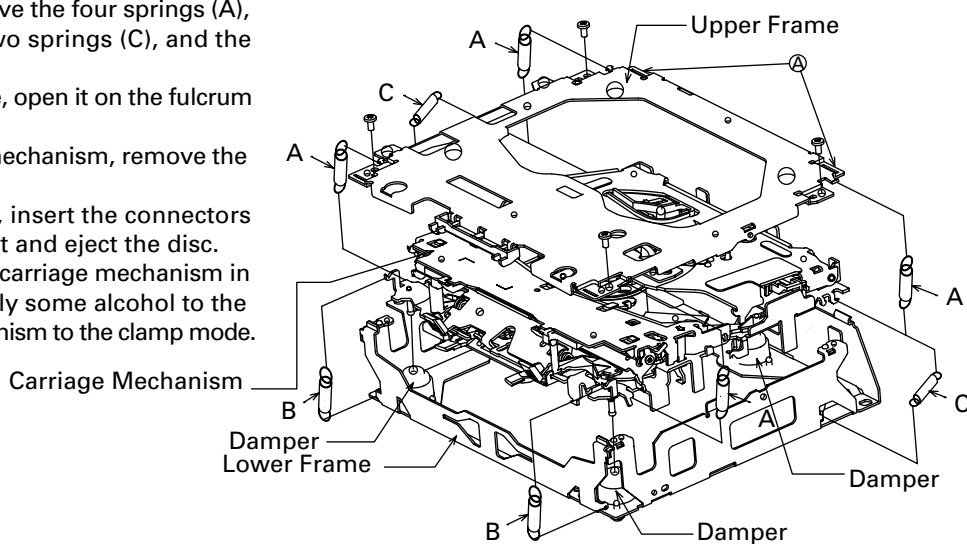

● Removing the Guide Arm Assy

1. Remove the upper and lower frames and set the mechanism to the clamp mode.
2. Remove the two springs.
3. Remove the two screws and bevel gear bracket. Note that the gears come off.
4. Slide the guide arm assy in the direction marked with the arrow (1) and open it upwards.
5. At the angle of about 45 degrees, slide the guide arm assy in the direction marked with the arrow (3) to remove it.

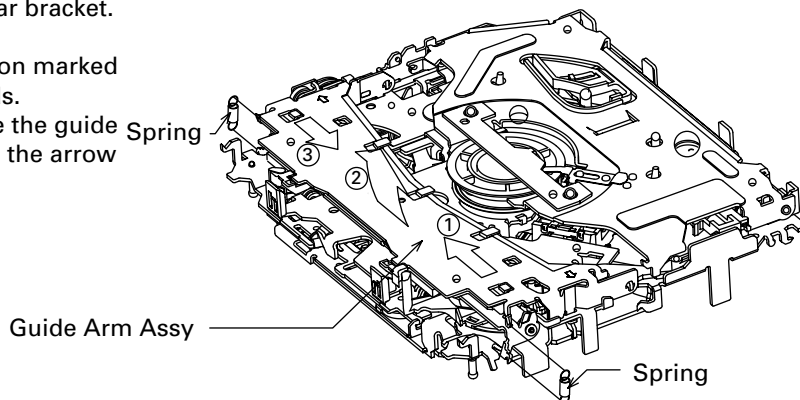


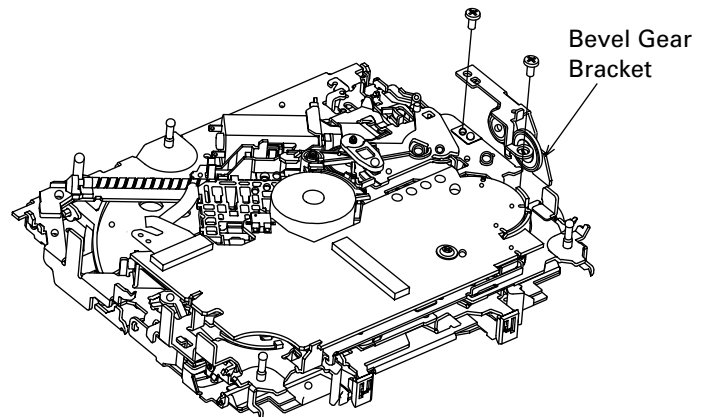

● Removing the CD Core Unit(S10MP3)


1. Apply shorting solder to the Pickup flexible cable. Disconnect the cable.
2. Remove the solder from the four leads, and loosen the screw.
3. Remove the CD core unit(S10MP3).

Caution: When assembling the CD core unit(S10MP3), set the mechanism to the clamp mode to protect the switches from any damage.

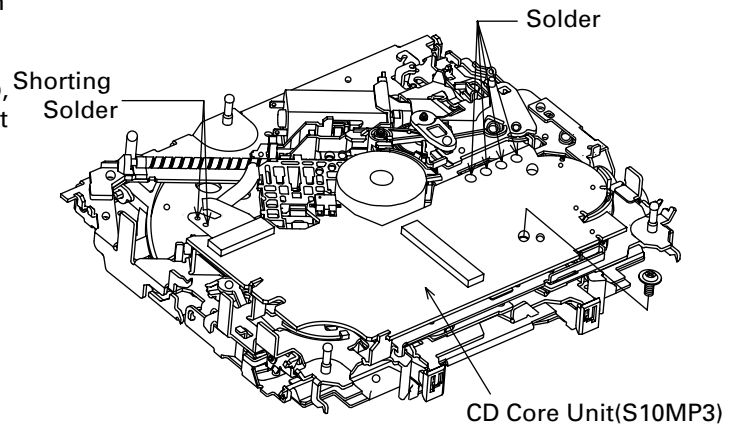

● Removing the Roller Arm Assy


1. Remove the guide arm assy and set the mechanism to the eject mode.
2. Remove the CD core unit(S10MP3). (You do not have to remove the solder from the four leads.)
3. Remove the spring and E-shaped ring from the fulcrum shaft.
4. Slide the roller arm assy in the direction marked with an arrow.

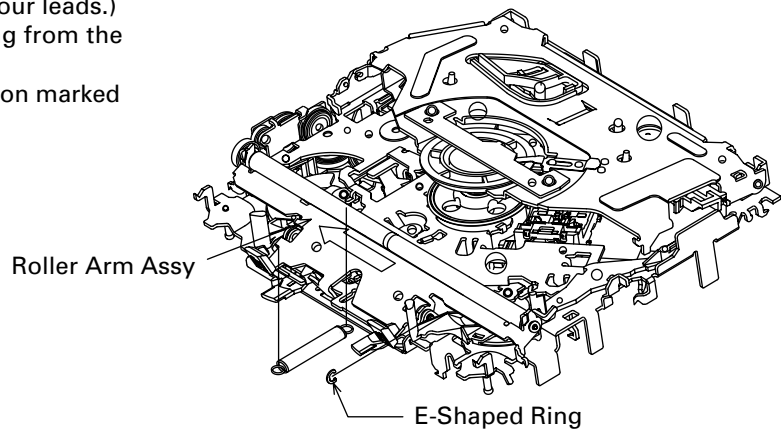

● Removing the Pickup Unit


1. Set the mechanism to the clamp mode.
2. Remove the lead wires from the inner holder.
3. Remove the two washers, styling holder, change arm, and pickup lock arm.
4. While releasing from the hook of the inner holder, lift the end of the feed screw.

Caution: In assembling, move the planet gear to the load/eject position before setting the feed screw in the inner holder.

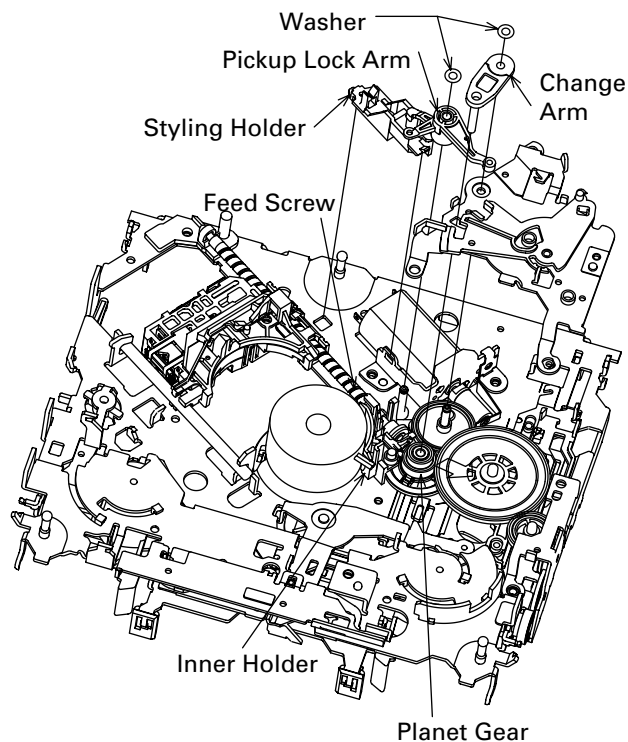


● Removing the Load Carriage Motor Assy

1. Release the leads from the styling holder and remove the holder.
2. Remove the two screws.
3. Remove the load carriage motor assy.

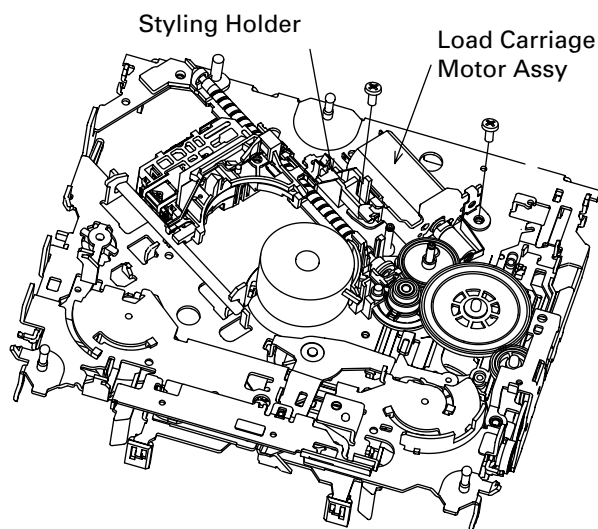

● Removing the Clamp Arm Assy

1. Remove the five springs.
2. While lifting the clamp arm assy, slide it in the direction marked with the arrow (2) to remove it.

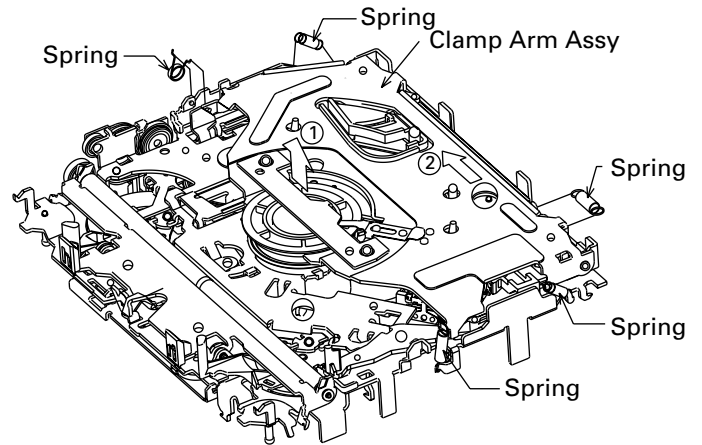

● Removing the Spindle Motor

1. Remove the two screws. Take off the spindle motor.

